

NAVAL POSTGRADUATE SCHOOL Monterey, California



STATE DELECTE DELECTE

THESIS

DESIGNING A VIRTUAL-MEMORY IMPLEMENTATION USING THE MOTOROLA MC68010 16-BIT MICROPROCESSOR WITH MULTI-PROCESSOR CAPABILITY INTERFACED TO THE VMEbus

bу

David M. Sendek

June 1990

Thesis Advisor:

Larry W. Abbott

Approved for public release; distribution is unlimited.

REPORT E	N PAGE			Form Approved OMB No 0704-0188	
1a REPORT SECURITY CLASSIF CATION	16 RESTRICTIVE MARKINGS				
UNCLASSIFIED					
2a SECURITY CLASSIFICATION AUTHORITY	3 DISTRIBUTION A	VA LAB LITY OF	REPORT	İ	
20 DECLASSIFICATION DOWNGRADING SCHEDU	ĹΕ	Approved for distribution			;
4 PERFORMING ORGANIZATION REPORT NUMBE	R(S)	5 MONITORING OR	GANIZATION RE	PORT NUN	∕BER(S)
·		ļ			
6a NAME OF PERFORMING ORGANIZATION	6b OFF CE SYMBOL	7a NAME OF MON	TORING ORGAN	ZATION	
	(If applicable)				
Naval Postgraduate School	EC	Naval Postg			
6c ADDRESS (City, State, and ZIP Code)		7b ADDRESS (City	State, and ZIP C	ode)	
Monterey, California 93943-5	5000	Monterey, (California	93943	3–5000
84 NAME OF FUNDING SPONSOR NG ORGANIZATION	8b OF G SYMBOL (If applicable)	9 PROCUREMENT I	nstrument ide	NT FICATIO	ON NUMBER
8c ADDRESS (City State, and ZIP Code)	L	10 SOUPCE OF FUN	NOING NUMBERS	<u> </u>	
		PROGRAM F	PROJECT	TASK	WORK UNIT ACCESSION NO
		ELEMENT NO 1	vo	NO	ACCESSION NO
11 TITLE (Include Security Classification)	. 	1		L	
11 TITLE (Include Security Classification) DESIGN MC68010 16-BIT MICROPROCESSOR VMEDUS (11)	GNING A VIRTUAL WITH MULTI-PRO	-MEMORY IMPLEN CESSOR CAPABII	MENTATION ULITY INTER	USING T	ΓΗΕ MOTOROLA ΓΟ THE
12 PERSONAL AUTHOR(S)					
Sendek, Davi	d. M. Overed	14 DATE OF REPORT	(Year, Month D	Day) 15	PAGE COUNT
Master's Thesis FROM					175
16 SUPPLEMENTARY NOTATION The views	s expressed in	this thesis ar	re those o	f the s	author and do
not reflect the official police	cv or position	of the Departm	ment of De	fense d	or the U.S.
Government COSATI CODES		(Continue on reverse			
FIELD GROUP SUB-GROUP	4				
Field GROUP SUB-GROUP MC68010 Microprocessor, VMEbus, Virtual-Memory, Dual-port Memory, Multi-processor					
19 ABSTRACT (Continue on reverse if necessary	and densit to block to				· · · · · · · · · · · · · · · · · · ·
The primary purpose of this thesis is to explore and discuss the hardware design of a bus-oriented microprocessor system. A bus-oriented microprocessor system permits it to be expanded to a multi-processor system. Through the use of a bus controller and bus arbiter, as discussed in this thesis, the necessary logic is in place to control bus access by system users. Bus access may be initiated to share another sub-system's resource, such as memory. To accommodate memory sharing between two systems, a dual-port memory controller can be used to resolve memory access between the two systems. This thesis discusses the design of a MC68010 microprocessor system integrated on the VMEbus with dual-ported memory capability. Additional features of the MC68010 microprocessor system include memory-management and interrupt control. The memory-management features permit protected memory and virtual-memory to be implemented on the system, while an interrupt handler is used to assist the MC68010 microprocessor in exception processing.					
228 NAME OF RESPONSIBLE INDIVIDUAL	CAN COME.	Unclassified 22b 'E.EPHONE (Inc	(lude Area Code)) 22C OFF	SICE SYMBOL
Larry W. Abbott		713-483-85			EC/AT

DD Form 1473, JUN 86

Previous editions are obsolete

SECTRALY CLASSIF CAT ON UP THIS PAUL

Approved for public release; distribution is unlimited.

DESIGNING A VIRTUAL-MEMORY IMPLEMENTATION USING THE MOTOROLA MC68010 16-BIT MICROPROCESSOR WITH MULTI-PROCESSOR CAPABILITY INTERFACED TO THE VMEbus

by

David M. Sendek
Lieutenant, United States Navy
B.S., The College of Charleston, 1981

Submitted in partial fulfillment of the requirements for the degree of

MASTER OF SCIENCE IN ELECTRICAL ENGINEERING

from the

Author:

David M. Sendek

Approved by:

Larry W. Abbott, Thesis Advisor

Fred W. Terman, Second Reader

John R. Powers, Chairman, Department of Electrical and Computer Engineering

ABSTRACT

The primary purpose of this thesis is to explore and discuss the hardware design of a bus-oriented microprocessor system. bus-oriented microprocessor system permits it to be expanded to a multi-processor system. Through the use of a bus controller and bus arbiter, as discussed in this thesis, the necessary logic is in place to control bus access by system users. Bus access may be initiated to share another sub-system's resource, such as memory. To accommodate memory sharing between two systems, a dual-port memory controller can be used to resolve memory access between the two systems. This thesis discusses the design of a MC68010 microprocessor system integrated on the VMEbus with dual-ported memory capability. Additional features of the MC68010 microprocessor system include memory-management and interrupt control. The memory-management features permit protected memory and virtual-memory to be implemented on the system, while an interrupt handler is used to assist the MC68010 microprocessor in exception processing.



Acce	ssion for	التنواط بي المناسط التناسط الت			
NTIS	GRARI	R			
DTIC	TAB	ā			
Unan	nounced				
Just	ification_				
	Distribution/ Availability Codes				
	Avail and				
Dist	Special	-			
A-1					

TABLE OF CONTENTS

I.	INTRODUCTION						
II.	DESIGN CONCEPTS						
	A.	VME	bus SPECIFICATION	7			
		1.	Background	7			
		2.	VMEbus Description	7			
		3.	Configurations	9			
			a. Slave-Only Application	9			
			b. Master-Only Application	10			
			c. Master-Slave Application	12			
		4.	Arbitration Protocols	14			
	В.	MEM	ORY-MANAGEMENT	18			
		1.	Memory Protection	18			
		2.	Virtual-Memory	19			
		3.	Dual-ported Memory	22			
III.	SYS	SYSTEM OVERVIEW					
	A.	SYS	TEM CONTROLLER CIRCUIT BOARD	24			
		1.	Priority Bus Arbitration	24			
		2.	Manual Reset	25			
		3.	Interrupt Driver	26			
	В.	MAS	TER CIRCUIT BOARD	26			
		1.	Central Processor Unit	26			
		2.	Dual Universal Asynchronous Receiver/ Transmitter	27			
		3.	Erasable Programmable Read-Only Memory	27			

		4.	Random Access Memory	28
		5.	Memory Management Unit	28
		6.	Dual-port DRAM Controller	28
		7.	VMEbus Controller	29
		8.	Interrupt Handler	29
IV.	DES	IGN	IMPLEMENTATION	31
	A.	MIN	IMAL SYSTEM	32
		1.	Memory Map	32
		2.	Hardware Interface	35
		3.	Software Support	38
			a. Exception Vector Table and Monitor/ Debugger Program	38
			b. Monitor/Debugger Commands	38
			c. Programmable Logic Device Programming -	4 (
	В.	FUL	LY INTEGRATED SYSTEM	4:
		1.	Memory Map	4 3
		2.	Master Circuit Board	44
			a. Microprocessor	44
			b. Halt and Reset Generation	45
			c. Clock Generation	4 6
			d. Local Bus Address Decoding	4 (
			e. Memory Management Unit	4 6
			f. Dual-port DRAM Controller	48
			g. Dynamic Random Access Memory	5(
			h. EPROM and SRAM	51
			i. Dual Serial Port	51
			j. Interrupt Handler	51

			k.	Data Transfer Acknowledge and Bus Error Generation 5	53
			1.	VMEbus Controller !	55
			m.	VMEbus Address Decoding !	56
			n.	VMEbus Drivers !	56
		3.	Syst	em Controller Circuit Board	57
			a.	Bus Arbiter 5	57
			b.	System Reset	57
			с.	VMEbus Drivers	57
V.	RESU	JLTS			59
VI.	SUM	MARY	AND	CONCLUSIONS	62
	Α.	SUMN	MARY		62
		1.	Desi	gn Concepts	62
			a.	VMEbus Structure	62
			b.	Memory-Management	62
			c.	Interrupt Control	64
		2.	Desi	gn Implementation	65
			a.	Hardware Configurations	65
			b.	Erasable Programmable Logic Devices	66
	В.	CONC	CLUSI	ONS	67
APPENI	XIX) (MC	6801	0 16-BIT MICROPROCESSOR)	69
APPENI	XIC			L SYSTEM EXCEPTION VECTOR TABLE AND (A) CONTROL OF TABLE AND (A) CONTRO	77
APPENI) XIC	C (M)	NIMA	L SYSTEM DIAGRAMS) 1:	17
APPENI	I XIC			L SYSTEM'S PROGRAMMABLE LOGIC SOURCE CODE) 12	26
APPENI	XIX	E (S)	(STEM	DIAGRAMS) 13	31
TTCT (ים בי	יסקקי	NOEG	11	e c

BIBLIOGRAPHY	161
INITIAL DISTRIBUTION LIST	162

LIST OF TABLES

I.	Minimal System Memory Map	33
II.	System Memory Map	42
III.	Data Strobe Control of the Data Bus	71
TV.	State and Address Space	74

LIST OF FIGURES

1.1	Generic Multi-Processor System	5
2.1	Slave-Only Subsystem	10
2.2	Master-Only Subsystem	11
2.3	Master-Slave Subsystem	13
2.4	Daisy Chain Arbitration	15
2.5	Parallel Arbitration	16
2.6	Virtual-Memory-Mapping	20
2.7	Mapping Mechanism	21
2.8	Dual-ported Memory	22
3.1	System Block Diagram	25
4.1	Minimal System	31
A.1	MC68010 Signal Groups	70
C.1	Minimal System MC68010 Microprocessor Circuitry	118
C.2	Minimal System HALT* and RESET* Generation Circuitry	119
C.3	Minimal System Clock Generation Circuitry	120
C.4	Minimal System Address Decode Circuitry	121
C.5	Minimal System DTACK* and BERR* Generation Circuitry	122
C.6	Minimal System EPROM and SRAM Circuitry	123
C 7	Minimal System Interrupt Request and Interrupt Acknowledge Circuitry	124
C.8	Minimal System Dual-port Receiver/Transmitter Serial Port Circuitry	125
E.1	Master Circuit Board Functional Block Diagram	132
E.2	System Controller Circuit Board Functional Block Diagram	133

E.3	MC68010 Microprocessor Circuitry	134
E.4	HT. T* and RESET* Generation Circuitry	135
E.5	Clock Generation Circuitry	136
E.6	Local Bus Address Decode Circuitry	137
E.7	Memory Management Unit Circuitry (Page 1 of 2)	138
E.8	Memory Management Unit Circuitry (Page 2 of 2)	139
E.9	Dual-port DRAM Controller Circuitry (Page 1 of 3)	140
E.10	Dual-port DRAM Controller Circuitry (Page 2 of 3)	141
E.11	Dual-port DRAM Controller Circuitry (Page 3 of 3)	142
	Dynamic Random Access Memory Circuitry (Page 1 of 4)	
E.13	Dynamic Random Access Memory Circuitry (Page 2 of 4)	144
	Dynamic Random Access Memory Circuitry (Page 3 of 4)	
E.15	Dynamic Random Access Memory Circuitry (Page 4 of 4)	146
E.16	EPROM and SRAM Circuitry	147
E.17	Dual-port Asynchronous Receiver/Transmitter Serial Port Circuitry	148
E.18	Interrupt Handler Circuitry	149
E.19	DTACK* and BERR* Generation Circuitry	150
E.20	VMEbus Controller Circuitry	151
E.21	VMEbus Address Decode Circuitry	152
	Master Circuit Board VMEbus Drivers Circuitry (Page 1 of 3)	
E.23	Master Circuit Board VMEbus Drivers Circuitry (Page 2 of 3)	154
E.24	Master Circuit Board VMEbus Drivers Circuitry (Page 3 of 3)	155

E.25	VMEbus Arbitration Circuitry	156
E.26	SYSRESET* Generation Circuitry	157
E.27	System Controller VMEbus Drivers Circuitry	158

I. INTRODUCTION

Economic pressure constantly forces computer design and technology to produce more cost-effective system implementations. Computers are made more cost-effective by lowering operating cost through increased speed and power and by lowering design, maintenance and upgrade costs through modular design techniques. Architectural innovations can accelerate this process. Hence, new innovations in system architecture are constantly sought after. Architecture is used here to mean the structuring of the modules which are organized into a computer system [Ref. 1:p. 1]. These modules include processors, memory and input/output (I/O) devices.

A uni-processor system consists of a single processor subsystem and various supporting modules integrated to form a system. In contrast, a multi-processor system is comprised of two or more processor subsystems connected into one interrelated functional system. In a multi-processor system, the interconnection of the processor subsystems must be done in such a way as to maintain control and manage the data flow of the entire system. This may be accomplished through multi-ported memory, a serial link or as in this thesis, by a system bus. A number of computer architectural designs that accommodate growing needs are examined in this thesis. Key architectural features of bus structures, memory-management and interrupt control are described in this chapter.

Bus structures allow for the integration of peripherals, memory and application-specific boards into one coherent system. Bus structures permit the exchange of data and control signals between circuit boards. This allows circuit boards to communicate with each other and to share resources. However, a strict adherence to protocols must be maintained so the integrity of information and control is preserved.

Memory-management features include memory protection and virtual-memory. Special memory schemes have been used to protect a system's integrity, to make more effective use of its physical memory's address range and to permit multi-ported memory so that the memory resource can be shared in a multi-processor system. A memory protection scheme prevents users from inadvertently or maliciously tampering with the operating system, its associated memory-mapped hardware or other users. To accomplish this, a portion of the processor's address range can be reserved for the operating system, while the remaining portion is allocated to system users. The operating system is protected because the user is not permitted to cross into the operating system's memory.

The virtual-memory aspect of memory-management permits a greater dynamic range and flexibility for user memory than actually exists with the system's physical memory. Virtual-memory allows each user to run programs as if he or she has full use of the processor's address range, independent of the memory used by the operating system or the other users. The user is unaware of how the physical memory in the system is allocated. Therefore, memory

resources can be allocated automatically and respond to the dynamic needs of the operating system and the users. In a system without virtual-memory, programs must be executed in a specific memory space and for large programs, the user must provide complex overlay schemes to circumvent the fixed user memory allocation. It is difficult for such a system to support several large programs concurrently. In a virtual-memory system, the operating system breaks up the user's program into segments called pages and moves these pages as needed between physical memory and a secondary storage device such as a hard disk. Thus, a virtual-memory system can easily support several large programs concurrently as long as each program only requires a modest amount of memory at any given time.

Multi-ported memory, such as dual-ported memory, allows a common memory resource to be shared between two or more processors or peripheral devices. Thus, different processes or different processors can communicate with each other via a multi-ported memory mailbox equipped with an accompanying semaphore to maintain access control and data integrity. Also, multi-porting provides a communication link between tightly coupled systems where there is a high degree of interaction.

Interrupts optimize the performance of a processor. An interrupt is a control signal generated asynchronously by a device, such as a serial port, requesting service from the processor. The processor is free to process other tasks between interrupts from devices requiring service [Ref. 2:pp. 220-223]. When it is ready

to service an interrupting device, the processor saves its current state and then performs the servicing tasks. When the servicing tasks are completed, the saved state of the processor is restored and the operation prior to the interrupt is resumed. Consequently, the processing power of the processor is increased because the overhead from polling peripheral devices for a service request is eliminated.

In a general sense, a generic multi-processor system can be viewed as illustrated in Figure 1.1. Various subsystems such as data processing, storage and data communications are integrated along a system bus to make up a complete system. Each subsystem is comprised of memory, I/O and processor modules configured to accommodate the unique requirements of the users of the multi-processor system. A system controller acts as the arbiter for the entire system. The system controller directs the information flow, much as a traffic policeman directs traffic, between the various subsystems along the system bus to ensure that the system is properly coordinated. In order for each subsystem to have access to the system bus, logic must be incorporated within each subsystem to allow it to interface to the system bus.

The main thrust of this thesis is to explore the concepts of bus structure, memory-management and interrupt control. These concepts are addressed in a greater depth than would be possible in a classroom environment.

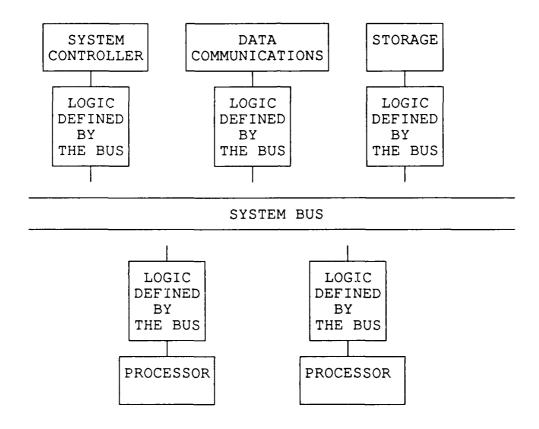


Figure 1.1: Generic Multi-Processor System

II. DESIGN CONCEPTS

The concepts addressed in this thesis are limited to bus structure organization, memory-management and interrupt control. These features are commonly used in today's processor systems. However, many options are available within each area. This thesis design is a virtual-memory implementation of a MC68010-based microprocessor system integrated on the VMEbus with dual-ported memory capability.

Borrill [Ref. 3] highlights several advantages of the VMEbus. The VMEbus, through its non-multiplexed address lines and data lines, does not have multiplexing delays as do other buses, nor does it have the transactional protocol overheads as do some other buses. In addition, the non-multiplexed address lines will support address pipelining. For interested readers, Borrill has made a detailed comparison of the features and performance of the VMEbus, Futurebus, Multibus II, Nubus and Fastbus [Ref. 3].

In addition to the advantages that Borrill highlights, the VMEbus structure was selected because of the relative ease of integrating Motorola and Signetics peripheral hardware devices. These hardware devices include a memory management unit, VMEbus controller, bus arbiter, interrupt handler hardware and dual-port dynamic random access memory (DRAM) controller.

The following discussion presents a broad overview of the VMEbus structure and memory-management. This should facilitate

understanding of the concepts that are incorporated into the final system (master circuit board) design.

A. VMEbus SPECIFICATION

1. Background

The VMEbus specification originated with Motorola's 68000 microprocessor products. The 68000 series was introduced to the marketplace in the late 1970s, using the VERSAbus specification. In the early 1980s, Motorola's European Microsystems group in Munich, Germany, introduced the Eurocard version of the VERSAbus, referred to as the VERSAbus-E specification. A joint agreement was reached to adopt the VERSAbus-E as the baseline bus specification for Motorola 68xxx devices with Mostek and Signetics as second-source suppliers of the 68xxx family of devices. The VERSAbus-E was renamed the VMEbus. The VMEbus specification [Ref. 4] delineates the mechanical and electrical characteristics of the bus and the protocols to interface devices on the VMEbus.

2. VMEbus Description

The VMEbus offers a versatile combination of timing strategies and support features. It also offers several data transfer sizes, several addressing modes and several arbitration methods. The VMEbus is an asynchronous, non-multiplexed bus that accommodates 8, 16 and 32-bit data transfers. [Ref. 5]

Asynchronous data transfers are flexible and do not impose timing control signals. Completion signals from the asynchronous devices ensure that adequate time is allowed for the data transfer. In contrast, synchronous data transfers impose a timing constraint on the data transfer which must accommodate the slowest device attached to the bus.

A non-multiplexed bus is one that accommodates data transfers and address transfers as separate signals on separate lines of the bus. This contrasts with the multiplexing strategy where data signals and address signals share the same set of lines. As a simple description, during a write cycle, multiplexing address signals are gated on one clock cycle and data signals are gated on the same lines during a subsequent clock cycle. The non-multiplexing strategy speeds up data transfer by eliminating the second clock cycle.

The VMEbus can be used with 24 or 32 address lines depending on the microprocessor's requirements and it is easily adaptable to the entire family of Motorola 68xxx microprocessors and peripherals.

The VMEbus is composed of four sub-buses that play unique roles within the overall VMEbus functional structure. These include the data transfer bus (DTB), the data transfer arbitration bus, the priority interrupt bus and the utility bus. The VMEbus functional specification describes how each sub-bus interacts and the rules which govern the behavior of each sub-bus [Ref. 4:pp. 15-194]. The DTB provides the pathways for the data signals, the address signals and their associated control signals. The process of resolving bus ownership takes place on the data transfer arbitration bus. The priority interrupt bus is used to accommodate processes which request servicing from another subsystem. An

interrupt stops normal bus activity until the interrupt is serviced. The utilities bus is sometimes referred to as a "miscellaneous functions bus". It includes a system reset line, an alternating current (AC) power failure line, a system failure line and a system clock [Ref. 2:p. 475].

The design in this thesis uses the VMEbus controller and the interrupt handler hardware devices which are designed for use with the VMEbus.

3. Configurations

In a multi-processor VMEbus-based system with a variety of peripheral devices, each subsystem can fulfill one of three primary roles. The subsystem can serve as a slave-only, as a master-only or as a master-slave combination. A subsystem can also have the role of direct memory access (DMA) in a master-slave configuration. (To limit the size and complexity of this thesis, the DMA master-slave configuration is not discussed.) These roles determine the way the subsystem is integrated to the system bus.

a. Slave-Only Application

In the slave-only configuration, the subsystem is slaved to the VMEbus. In other words, this subsystem is incapable of making a request to obtain access and control of the VMEbus. The slave subsystem is a device which other subsystems utilize. Examples of slave subsystems include communication ports and stand alone memory boards. If intelligence (logic) is added, the subsystem can evolve into an input/output (I/O) channel or a mass storage subsystem. Figure 2.1 shows the simplicity of a slave

subsystem interfaced to the VMEbus. The 74LS245s octal-bus transcrivers with 3-state outputs provide the drive capability for transmitting signals onto the VMEbus and the receiver capability for receiving signals from the VMEbus. If desired, the 74LS245s can also be disabled to isolate the slave subsystem from the VMEbus.

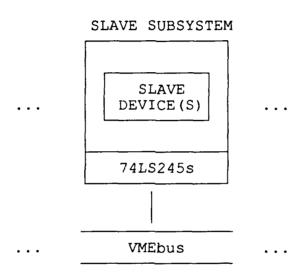


Figure 2.1: Slave-Only Subsystem

b. Master-Only Application

In the master-only configuration, the subsystem has the ability to gain control of the VMEbus. A master-only subsystem has an onboard central processor unit (CPU) with or without local slave devices. It is interfaced to the VMEbus with a bus controller. When the subsystem has gained control of the VMEbus, this subsystem is said to be in a master role. Figure 2.2 gives a simplified illustration of a VMEbus system with a master-only subsystem

attached to it. Comparison of Figures 2.1 and 2.2 shows the added complexity required in a subsystem which can gain control of the VMEbus. In addition, a system controller is included in Figure 2.2 to illustrate the added system complexity required to control bus accesses.

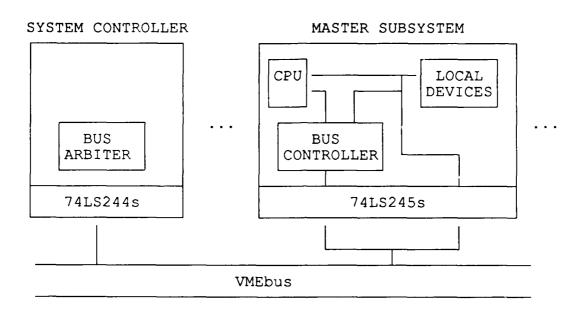


Figure 2.2: Master-Only Subsystem

Given a request by the CPU, the bus controller generates a bus request signal through an 74LS245 to the system controller's bus arbiter. (The abilities of the 74LS245 were described in the slave-only subsystem.) The bus arbiter receives requests from subsystems on the VMEbus through the 74LS244 octal-buffers and line drivers with 3-state outputs. The function of the bus arbiter is to resolve prioritized requests from the subsystems and to generate a bus grant signal through the 74LS244 to the

highest priority requesting subsystem. The subsystem's bus controller maintains system integrity by ensuring that a bus grant signal is received prior to permitting a data transfer. The requesting subsystem, after receiving the bus grant signal, negates its bus request and asserts the bus busy signal so that other subsystems cannot gain control of the bus while the data exchange is in process. Also, the bus busy signal informs the bus arbiter that a data exchange is currently in progress and that the bus arbiter can release the bus grant signal. The requesting device is now the bus master. When the data exchange is complete, the requesting device releases the bus busy signal to allow the bus arbiter the opportunity to grant the bus to another subsystem.

If the bus is in use and a higher priority bus request is asserted, the bus arbiter asserts the bus clear line. The bus clear signal informs the current bus master that another subsystem with a higher priority is requesting bus ownership. Each potential bus master should accommodate either a "release when done" or a "release on request" strategy to resolve pending higher priority requests for bus access.

c. Master-Slave Application

A master-slave configuration combines the master-only and slave-only capabilities into a single subsystem. As illustrated in Figure 2.3, the CPU residing on the master-slave subsystem has the ability to gain control of the VMEbus. The system controller and bus arbiter perform the same roles as described in the master-only subsystem.

Shared slave devices are onboard the master-slave subsystem. These devices can be accessed by another subsystem when it has control of the VMEbus (Fig. 2.3). The bus controller isolates the shared slave devices from the CPU by putting the 74LS244s outputs into a high impedance state, whenever another subsystem accesses the shared slave devices. When this happens, the shared slave devices become a global asset to the system. The 74LS245s not only act as line drivers and receivers,

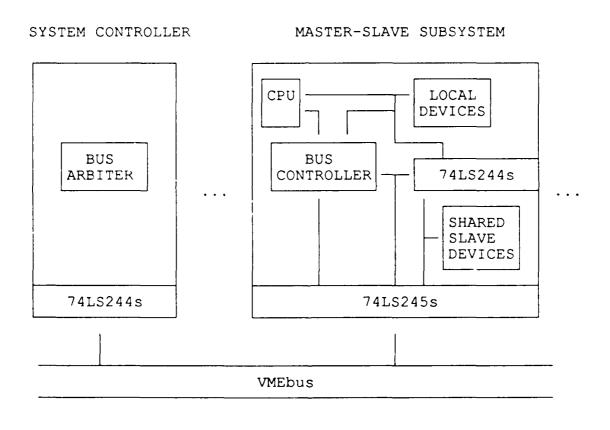


Figure 2.3: Master-Slave Subsystem

they also prevent access from the VMEbus to shared slave devices when the appropriate control signal is asserted by the bus

controller. Whenever the local master (in this case the CPU) is accessing the shared slave devices, these devices become a local asset. As discussed in the master-only application, the bus controller preserves the VMEbus protocol.

4. Arbitration Protocols

Arbitration protocols ensure conflict-free access to the system bus from all subsystems and are crucial in a multi-processor environment [Ref. 6:p. 100]. An arbitration protocol ensures that only one bus master has access to the bus at a time, thus safeguarding the bus from collisions in which information is transferred on the bus by multiple sources. The VMEbus supports both serial and parallel arbitration schemes or a combination of both methods. These two method are described in the following paragraphs.

Daisy chaining is a method of arbitrating a shared communication bus by serial prioritization. Figure 2.4 illustrates daisy chain arbitration. If the bus is in use, any subsystem requesting ownership must wait till the present bus master relinquishes control of the bus. A subsystem requests access to the bus by asserting the bus request (BR) signal. The bus arbiter or other controlling device acknowledges the bus request by asserting a bus grant (BG) signal to the bus grant input (BGIN) of SUBSYSTEM1, the first subsystem in the daisy chain. If SUBSYSTEM1 is requesting the bus, it asserts the bus busy (BBSY) signal and it continues to negate its bus grant output (BGOUT) signal. SUBSYSTEM1 can now begin data transfer. If the bus request was

made by any subsystem other than SUBSYSTEM1, the BG signal is passed by SUBSYSTEM1 to the next subsystem in the chain (SUBSYSTEM2). The BGOUT signal from SUBSYSTEM1 becomes the BGIN signal to the next subsystem in the chain (SUBSYSTEM2). This process is repeated until the highest priority requesting subsystem receives the BGIN signal. SUBSYSTEM1 has a higher priority than SUBSYSTEM2. The last subsystem in the chain (SUBSYSTEMn) has the lowest priority.

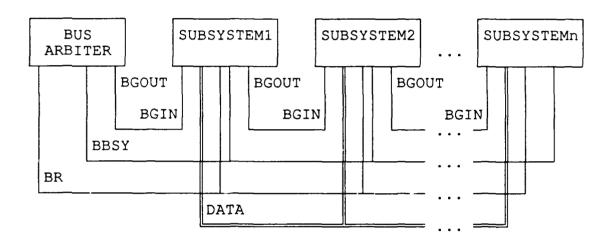


Figure 2.4: Daisy Chain Arbitration

The BR and BBSY signals are wire-ORed (open collector-active low), i.e., the logic is tied together at a wire connection. Consequently, the BR signal will cause the BBSY signal to be asserted once the BGIN signal is received through the daisy chain.

Parallel arbitration is a method of arbitrating a shared communication bus by priority levels. An example of a three-level parallel arbitration scheme is shown in Figure 2.5. In Figure 2.5,

bus request zero (BR0) has the lowest priority level, while bus request two (BR2) has the highest priority level. The highest priority subsystem with a pending request is granted access to the bus. In this parallel arbitration scheme, the subsystems desiring use of the bus make bus requests (BRx) through the bus arbiter. The bus arbiter or other controlling device then sends out a bus grant (BGx) onto the bus to the highest priority subsystem with a pending bus request.

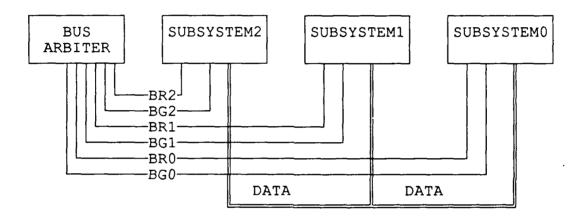


Figure 2.5: Parallel Arbitration

The main advantage of the daisy chain arbitration scheme over the parallel arbitration scheme is that subsystems can be inserted sequentially, one after the other. Consequently, new subsystems are easily added to the system.

The main advantage of the parallel arbitration scheme over the daisy chain arbitration scheme is that arbitration can be performed faster. Parallel arbitration does not propagate a bus grant signal down a chain, but rather the bus grant signal is sent directly to the highest priority subsystem requesting service. However, the parallel arbitration scheme limits the number of subsystems that the bus arbiter can accommodate.

Any fixed priority arbitration cannot ensure that the subsystem with the lowest priority level will be serviced if higher priority subsystems make frequent requests. The daisy chain arbitration and parallel arbitration methods may need to be modified or a controller may need to be incorporated to ensure each subsystem can be serviced fairly.

The VMEbus uses a serial-parallel combination for bus arbitration with only one bus arbiter. VMEbus arbitration uses a scheme with four parallel priority levels similar to Figure 2.5. Each priority level, however, can have subsystems daisy-chained as illustrated in Figure 2.4. In other words, the bus arbiter grants bus access to a given level and then the daisy chain at that level determines which subsystem actually gets the bus.

The VMEbus arbitration process includes the BBSY signal (as shown in Figure 2.4) and the bus clear (BCLR) signal. The BBSY and BCLR lines are added to the bus arbiter and all subsystems on the VMEbus. The VMEbus BBSY signal is asserted by the subsystem which is granted bus access. The BCLR output signal informs all subsystems on all priority levels that a subsystem on a higher priority level than the current bus master has requested access to the VMEbus. As mentioned earlier, the requesting subsystem should accommodate a "release when done" or "release on request" strategy to resolve pending higher priority requests for bus access.

B. MEMORY-MANAGEMENT

Memory-management can employ a combination of methods to organize the physical memory associated with a microprocessor or system. These methods effectively free the programmer using the system, from being concerned where the program code and program data will reside in memory. This thesis addresses the memory-management concepts of memory protection, virtual-memory and dual-ported memory.

1. Memory Protection

One method used to organize the address range of a microprocessor is to divide its address space into two or more blocks. Each block of the address space can be designated for a specific purpose, such as supervisor memory or user memory.

The MC68010 microprocessor has two modes of operation. These modes are the user mode and the supervisor mode. The user mode provides an instruction set for the programmer to accommodate a majority of applications. The supervisor mode provides additional instructions and privileges for use by the operating system and other system-related software [Ref. 7:p. 1-1].

The user memory is the area designated for non-privileged individuals to use. Such an individual executes programs in the user mode. The address range for the user is normally limited because it does not include the addresses associated with the operating system and the memory-mapped peripherals. Additionally, the user is restricted from executing privileged supervisor instructions. In contrast, the operating system executes programs

in supervisor mode and can address supervisory memory and memorymapped peripherals as well as user memory. This segregation of the
supervisor and the user precludes the user from reconfiguring the
system, but still allows the user access to part of the physical
memory and to the computational power of the microprocessor.
Typically, the user must request the operating system to perform
operations which the user is not allowed to perform.

2. Virtual-Memory

Virtual-memory allows programs to be executed which require more memory space than is physically resident. Therefore, the maximum program size is not limited by the size of physical memory. Originally, this method was designed to reduce and more effectively use memory.

A virtual address is an address located within the address space of the microprocessor. Consequently, with the MC68010 microprocessor, there exists 16 megabytes of virtual-memory. A virtual-memory implementation groups the virtual addresses into blocks called pages. Figure 2.6 shows such a grouping with zero through N pages of virtual-memory but with only enough physical memory to accommodate two virtual pages in physical memory. In Figure 2.6, virtual PAGE 1 and virtual PAGE N are mapped into separate physical pages.

When the CPU generates a virtual address, the virtual address is translated into a physical address. The address translation process includes fairly sophisticated memory protection so that tasks cannot interfere with each other or access resources

not allocated to them. Figure 2.7 illustrates a simplified memory-mapping mechanism. The high order virtual address bits are referred to as a virtual page number. The virtual page number references a location of the translation table. The translation table has as its contents a physical page number which references the starting location of the physical memory's page address. The low order virtual address bits give the relative address offset of the desired address within the physical page selected.

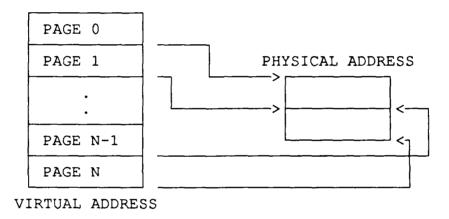


Figure 2.6: Virtual-Memory-Mapping

Generally, each processing task has its own translation table similar to Figure 2.7. These tables are switched whenever the active task changes which avoids interference between processing tasks.

VIRTUAL ADDRESS

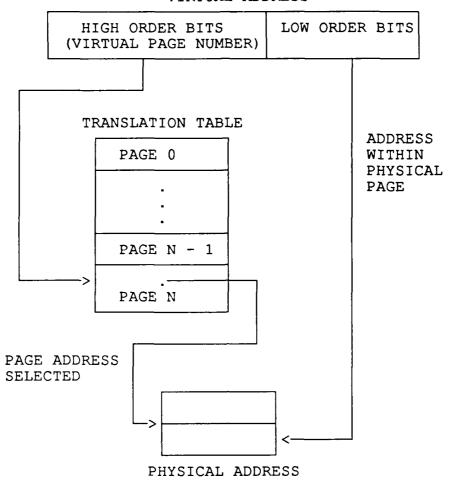


Figure 2.7: Mapping Mechanism

When the CPU generates a virtual address in a page that is not present in physical memory, for instance PAGE 2 as in Figure 2.7, the memory manager senses that fact and generates a page fault. The page fault triggers a chain of events which ultimately retrieves the desired page of the program from secondary storage and places it in physical memory. The instruction which caused the page fault is then continued or restarted. [Ref. 2:pp. 326-330]

3. Dual-ported Memory

Dual-ported memory permits two nearly simultaneous accesses to the memory resource without conflict. Figure 2.8 illustrates a typical configuration of a dual-port memory device. One approach to arbitrating concurrent memory requests in a dual-ported random access memory (RAM) is to sample one request line on the rising clock edge and the other on the falling clock edge. A PORT 1 REQUEST is assumed to be sampled on the rising clock edge.

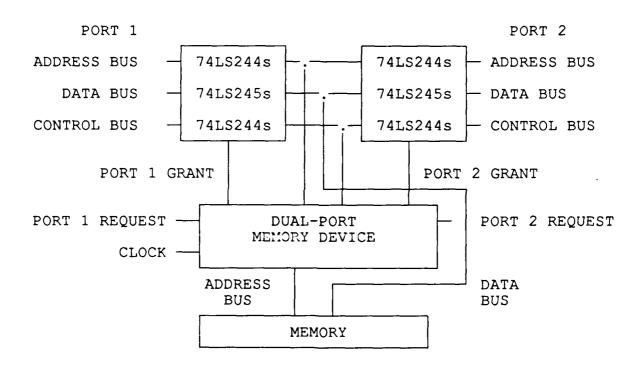


Figure 2.8: Dual-ported Memory

If a PORT 1 REQUEST is asserted, a PORT 1 GRANT is generated which gates the PORT 1 address, data and control lines through the left-hand 74LS244s and 74LS245s in Figure 2.8. The address and control signals are sent to the dual-port memory device and the data

signals are sent directly to memory. The dual-port memory device then gates the address lines to memory. While the PORT 1 GRANT is active, the PORT 2 GRANT cannot be asserted. PORT 2 is thus locked out from gaining access to memory. In contrast, if a PORT 2 REQUEST is asserted and PORT 1 is inactive, a PORT 2 GRANT is generated. This causes PORT 2 to gate the control and address lines through the other 74LS244s to the dual-port memory device and to gate the data lines directly to memory via the 74LS245s.

In the event that both request lines are active, a PORT 1 GRANT will be generated on the rising clock edge or a PORT 2 GRANT will be generated on the falling clock edge. The other request is locked out until the request line of the recognized port is no longer asserted. The other port will then gain access on the appropriate clock edge.

III. SYSTEM OVERVIEW

This thesis seeks to design a system that satisfies the design requirements for a system that can be expanded to a multi-processor system. Additionally, the subsystem design is interrupt-controlled with both virtual-memory and dual-ported memory support. This chapter gives a system perspective on the hardware associated with the system controller circuit board and master circuit board (Fig. 3.1) integrated to the VMEbus.

A. SYSTEM CONTROLLER CIRCUIT BOARD

The VMEbus specification describes the system controller as a board which resides in slot one of the VMEbus back plane [Ref. 4: pp. 5]. The system controller circuit board design provides priority bus access arbitration, a manual system reset and a interrupt acknowledge (IACK*) daisy chain driver. The system controller subsystem uses line drivers to buffer the arbitration signals and IACK* signal on the VMEbus.

1. Priority Bus Arbitration

The Motorola MC68452 bus arbitration module (BAM) peripheral device [Ref. 8] was selected to perform the VMEbus access arbitration. The BAM is configured to accommodate four bus request (BRx*) inputs and four bus grant (BGx*) outputs. After parallel arbitration, a bus grant signal is generated by the BAM at the level of the highest priority bus request. The bus grant signal is then daisy chained down on the level of the highest

priority bus request. This VMEbus arbitration method combines the advantages of both the daisy chain arbitration and parallel arbitration methods discussed in Chapter II.

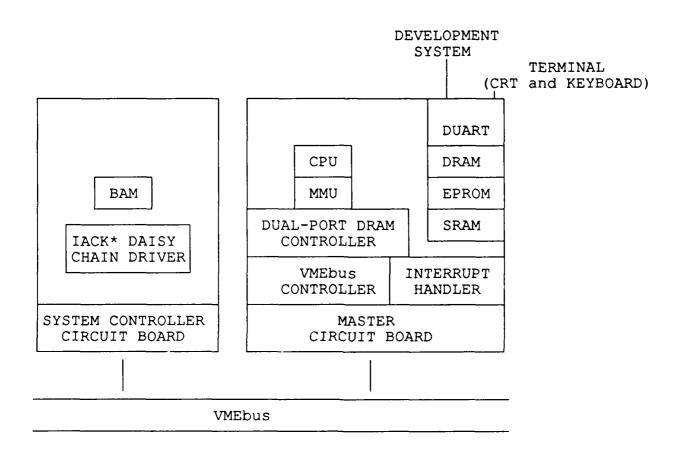


Figure 3.1: System Block Diagram

2. Manual Reset

The manual system reset provides a system-wide master reset of all devices within all subsystems. Resetting the system reinitializes various devices within it. This is necessary in order to restart the system after system failure.

3. Interrupt Driver

The VMEbus structure provides the IACK* signal daisy chain. However, a driver is provided on the system controller circuit board to drive the IACK* signal onto the VMEbus.

B. MASTER CIRCUIT BOARD

The master circuit board is the primary design focus of this thesis. As shown in Figure 3.1, the master circuit board subsystem is composed of nine functional blocks. These functional blocks are the central processor unit (CPU), dual universal asynchronous receiver/transmitter (DUART), dynamic random access memory (DRAM), static random access memory (SRAM), erasable programmable read-only memory (EPROM), memory management unit (MMU), dual-port DRAM controller, VMEbus controller and interrupt handler. The master circuit board is configured in a master-only role as discussed in Chapter II.

1. Central Processor Unit

The Motorola MC68010, 16-bit CPU, was selected to be the processing element because it has the necessary features to support virtual-memory but lacks the added complemity of a 32-bit architecture. It also affords easier wire-wrap assembly than the other Motorola CPUs supporting virtual-memory because wire-wrap is better supported for a dual in-line package (DIP) and there are fewer data and address signals. The signals and programming capabilities of the MC68010 microprocessor are discussed in further detail in Appendix A.

2. Dual Universal Asynchronous Receiver/Transmitter

Two asynchronous serial (RS-232) ports are implemented with the Motorola MC68681 DUART. One serial port is configured to drive a terminal, while the second serial port is used to down-load files from an IBM XT/AT compatible computer. The first serial port is used to permit a human interface to the system. The intent of the second serial port is to provide the ability to develop software on an IBM XT/AT compatible computer with a cross assembler and then to down-load the software through the second serial port to the master circuit board's random access memory (RAM) for testing, debugging and execution.

3. Erasable Programmable Read-Only Memory

The EPROM in this thesis design, contains the exception vector table and the monitor/debugger program. The exception vector table contains the addresses of the routines to be executed as a result of an interrupt or other exception. The monitor program configures the subsystem when it is powered up and handles communications with the terminal for interaction between the microprocessor and the user. It also provides debugging commands and coordinates the previously mentioned down-loading of files. Sixty-four kilobytes of EPROM are provided in the master circuit board.

Once an operating system is developed, it would not be desirable to freeze the interrupt part of the exception vector table into read-only memory (ROM). It should be noted that the

design of an operating system to take advantage of the system's hardware features is beyond the scope of this thesis.

4. Random Access Memory

Sixteen kilobytes of SRAM and one megabyte of DRAM are provided on the master circuit board.

5. Memory Management Unit

The use of the Motorola MC68451 MMU affords several advantages to the microprocessor system. The MMU provides the advantages of virtual-memory and a sophisticated memory protection scheme (both previously discussed in Chapters I and II). The MC68451 provides the capability to:

- Translate logical addresses to physical addresses.
- Provide segment descriptors to implement memory protection.
- Detect page faults and other situations requiring operating system intervention.
- Aid the operating system in managing the virtual-memory system efficiently (by use of the segment status registers).

6. Dual-port DRAM Controller

The Signetics 74F765 dual-port DRAM controller provides access to the DRAM by either a local bus master or a global bus master. If DRAM is accessed by the local bus master, i.e., the CPU on the master circuit board subsystem, it becomes a local asset. It is not desirable for the local CPU to access DRAM via the VMEbus because long access times would be the result. If DRAM is accessed by a global bus master, i.e., another subsystem controlling the VMEbus, it becomes a global asset. The ability to access DRAM locally or globally is desirable for a system that includes

subsystems that interact closely with one another. In addition, the dual-port DRAM controller provides refresh cycles to the dynamic memory integrated circuit chips.

The global memory accesses in this master circuit board subsystem design, use physical addresses to permit the implementation of mailboxes with attached semaphores as discussed in Chapter I. An operating system needs to lock the mailbox page in physical memory at a specified physical address.

7. VMEbus Controller

The Signetics SCB68172 VMEbus controller preserves the VMEbus data transfer and VMEbus access protocols. The VMEbus controller and the MC68010 CPU are configured in a master-only role as illustrated in Figure 2.2 and discussed in Chapter II. The VMEbus controller provides the necessary logic to interface the master circuit board subsystem to the VMEbus.

8. Interrupt Handler

The Signetics SCB68155 interrupt handler is used in the master subsystem design to assist the CPU with interrupt processing. The interrupt handler receives global and local interrupt requests and arbitrates their priority. The arbitration priority is non-maskable interrupts, first, then local interrupts and finally global interrupts.

The interrupt handler acts as a mediator between the CPU and the interrupting device or between the CPU and the interrupting subsystem. Once a local interrupt is generated by the DUART or MMU, control signals are sent between the interrupting device and

the interrupt handler as well as between the interrupt handler and the CPU. The DUART or the MMU responds with a pre-programmed status/ID vector as an interrupt response.

A subsystem can request an interrupt at any time by asserting the appropriate interrupt request line. On detecting an interrupt request, the interrupt handler sends a control signal to the VMEbus controller to request the VMEbus during the interrupt acknowledge cycle. The subsystem making the request then sends the status/ID vector to the master circuit board's CPU.

IV. DESIGN IMPLEMENTATION

This chapter discusses the design of the minimal system and of the fully integrated system (master circuit board and system controller circuit board). The minimal system provides the foundation of core resources necessary to construct a computer system. The fully integrated system design can be implemented by integrating additional resources to the minimal system. For comparison, the fully integrated system is illustrated in Figure 3.1, while the minimal system is illustrated in Figure 4.1.

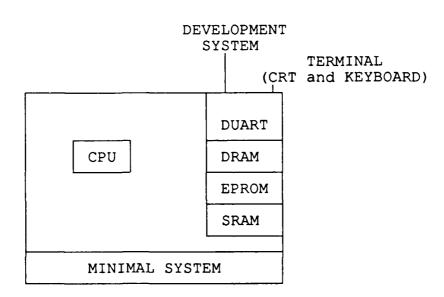


Figure 4.1: Minimal System

A. MINIMAL SYSTEM

Currently at the Naval Postgraduate School (NPS), there exists no computer-aided design (CAD) tools which can simulate the fully integrated system designed in this thesis. This is in part due to the inability of the CAD vendors to keep pace with the profusion of extremely complex very large scale integrated (VLSI) circuit chips. The CAD systems at NPS, Valid Inc.'s SCALD and Futurenet's CAD50, do not support all the peripheral devices incorporated within this thesis. Consequently, a step-by-step progression was made to fully integrate the system. The first stage, referred to as the minimal system, includes the core resources which form the foundation to which more complex devices can be added. When more complexity is added to the minimal system, operational testing can be conducted to insure proper integration of the new devices into the system.

1. Memory Map

Memory-mapping determines how the microprocessor accesses physical memory and peripheral devices. The Motorola MC68010 microprocessor has 23 address lines, A1 through A23. The upper data strobe (UDS*) and lower data strobe (LDS*) lines collectively determine address bit A0. Effectively, there are 24 address lines giving an virtual address range of 16 megabytes. Physical memory elements such as static random access memory (SRAM), dynamic random access memory (DRAM) and read-only memory (ROM) are mapped into this 16 megabyte range as are the memory-mapped peripherals.

The memory-mapped peripheral devices have multiple internal registers. The high order physical address bits are used to select a particular peripheral device. The low order physical address bits are decoded inside the peripheral device and subsequently select one of the internal registers. These registers are programmed to configure the device to meet desired performance specifications.

Table I displays the specific locations of the minimal system's memory-mapped devices and the physical memory components within the address space of the MC68010 central processor unit (CPU).

TABLE I: MINIMAL SYSTEM MEMORY MAP

PHYSICAL
ADDRESS
\$000000
64K BYTES OF EPROM
\$00FFFF
\$010000
16K BYTES OF STATIC RAM
\$013FFF
\$014000
NOT USED
\$7F6FFF
\$7F7000
MC68681 DUART
\$7F7FFF
\$7F8000

The 64k bytes of erasable programmable read-only memory (EPROM) contain the exception vector table and the monitor/debugger program. Appendix B gives the source code listing of the exception

NOT USED

\$FFFFFF

vector table and the monitor/debugger program. The 2500AD MC68010 cross assembler [Ref. 9], running on an IBM XT/AT compatible computer, was used to cross assemble the monitor/debugger source code into a Motorola S-record format [Ref. 10:pp. A-1 - A-4]. In order to program the S-record code into the EPROM, a Data I/O System 29 Universal Programmer was configured to accept Motorola S-records. The S-record file was then sent from the IBM XT/AT to the Data I/O System 29 via an RS-232 interface. Finally, the EPROM programming process was initiated on the Data I/O System 29.

The 16K bytes of SRAM are used to test development software. Files can be down-loaded to the SRAM for debugging. SRAM is used in the minimal system design instead of DRAM to avoid the additional logic necessary to generate refresh cycles for the DRAM.

The MC68681 dual universal asynchronous receiver/ transmitter (DUART) is a communications peripheral device that can accommodate two independent full-duplex (receiver/transmitter) The operating mode and data format of each port can be ports. programmed independently. One port of the DUART is configured by the monitor/debugger program to accommodate the down-loading of files from an IBM XT/AT compatible computer. The other port of the DUART is configured to communicate with the terminal. The memory map (Table I) delineates a physical address range of \$7F7000 through \$7F7FFF for the DUART. A chip select signal will be generated for the DUART when a physical address is in the range \$7F7000 through \$7F7FFF. The physical addresses in the range

\$7F7010 through \$7F7FFF are multiple maps for the DUART. Multiple maps provide valid addresses to chip select the DUART. They also permit address decoding logic to be simplified. However, to avoid ambiguity, only the physical addresses \$7F7000 through \$7F700F are used to address the DUART.

2. Hardware Interface

Appendix C illustrates the circuitry involved in the minimal system. Figures C.1 through C.8 illustrate the minimum system in its entirety.

Figure C.1 illustrates the MC68010 microprocessor used in the minimal system design.

Figure C.2 illustrates the HALT* and RESET* generation circuitry. The NE555 timer provides an automatic system reset when the system is powered up. There is also a manual system reset switch (push button). Resetting the system initializes the internal circuitry of the CPU and DUART. A two-input OR gate in the reset circuitry has one input grounded, so it acts as an unneeded buffer. However, in the fully integrated system (discussed later in this chapter), this input is tied to the VMEbus system reset (SYSRESET*) line. This permits a system-wide reset to the master circuit board illustrated in Figure 3.1.

Figure C.3 illustrates the clock generation circuitry. The 8 MHz CPU clock signal is produced by using a 74LS161 binary counter to divide a 16 MHz signal from a crystal controlled oscillator. A 4 MHz signal from the 74LS161 provides the clock

input for the shift register which is used to help generate the data transfer acknowledge (DTACK*) and bus error (BERR*) signals.

Erasable programmable logic devices (EPLDs), specifically Altera EP310s, were used to reduce the chip count in the minimal system. EPLDs were used for address decoding, generating DTACK and BERR signals, performing interrupt control and generating SRAM write enable and RAM and ROM output enables.

Figure C.4 shows the EPLD implementation for the minimal system address decoder. The minimal system address decoder implements the memory map of Table I. Listing D.1 in Appendix D presents the Abel software program for the address decoder. Abel software will be discussed in the next section.

Figure C.5 shows the logic of the circuitry which generates the DTACK* and BERR* signals to the CPU. The circuitry prior to the 74LS05 open collector inverters, is implemented by an EPLD. The DTACK and BERR signals are passed through the 74LS05s to give the open collector outputs and the proper assertion levels (DTACK* and BERR*). In the event that the MC68010 microprocessor tries to address a location not supported by the design, a bus error (BERR*) time-out signal is generated after two microseconds. The BERR* signal causes the CPU to begin bus error exception processing. This invokes the routine whose address is in the longword at address \$000008. The circuit which generates the delay time for BERR* is referred as a watchdog timer. Listing D.2 in Appendix D presents the Abel description of the DTACK and BERR signals.

The circuitry for EPROM and SRAM is illustrated in Figure Since random access memory (RAM) and ROM cannot generate a DTACK* signal to the CPU, additional circuitry is required. DTACK* signal informs the CPU that the data transfer has been completed by the slave device. The 74LS164 shift register generates the data transfer delay times for the RAM and the ROM and the bus time-out delay for a bus error condition (Fig. C.5). A 250 nanosecond delay is provided to ensure an adequate time for data transfer between the CPU and the RAM. A 500 nanosecond delay is provided for data transfer between the CPU and the ROM. transfer times accommodate the data propagation delay, the system address decoding delay and the internal address decoding delay of the RAM and the ROM. The logic for the output enable and the write enable signals are implemented on an EPLD. Listing D.3 in Appendix D presents the Abel description of the SRAM write enable and RAM and ROM output enable signals.

Figure C.7 shows the logic for the interrupt priority level (IPLO* through IPL2*) and the interrupt acknowledge (IACK681*) signal. A level one interrupt request (HHL) is sent to the MC68010 CPU when the MC68681 DUART asserts its interrupt request output (low). An IACK681* signal is sent to the DUART when a level one interrupt acknowledge is output by the CPU. The logic for the IACK681* and the IPLO* through IPL2* signals are actually implemented with an EPLD. Listing D.4 in Appendix D presents the Abel description of the IACK681* and IPLO* through IPL2* signals.

Figure C.8 illustrates the circuitry which supports the dual serial ports. As mentioned earlier, one port (Port A) of the DUART is configured to communicate with the terminal. The other port (Port B) is configured by the monitor/debugger program to accommodate the down-loading of files from an IBM XT/AT compatible computer.

3. Software Support

a. Exception Vector Table and Monitor/Debugger Program

The exception vector table contains the addresses of routines to be executed when an exception (trap or interrupt) is detected. The monitor program sets up communications with the terminal, provides debugging commands as well as a down-load command. The exception vector table and the monitor/debugger program (Appendix B) reside in the EPROM starting at physical address \$000000. The exception vector table occupies physical addresses \$000000 through \$0003FF [Ref. 7:p. 4-5]. Physical addresses \$000400 through \$001FFF are not used and monitor/debugger program begins at the arbitrarily selected physical address \$002000.

The monitor/debugger program was developed on the Motorola Educational Computer Board (ECB) [Ref. 10]. After a system reset, the microprocessor's program counter is initially loaded with address \$002000 to start the monitor/debugger program.

b. Monitor/Debugger Commands

The monitor/debugger program provides a user with six commands. These commands are not intended to be comprehensive, but

they do provide assistance in program development and debugging.

The user commands are as follows:

- GO address <,break point address>
- MM start address <, end address>
- MD start address <,end address>
- RCH {Axx, Dxx, PC, US, SP, SR}
- REG
- LOAD

where <...> implies optional
{...} implies select one entry

The GO command is used to execute a program that resides in the system's memory. The program can be placed in memory by using the memory modify command or by down-loading a program from an IBM XT/AT compatible computer. The address in the GO command gives the location where program execution will begin. An optional break point address can be added within the GO command. The break point will stop program execution at the address specified. This is particularly useful if one desires to know the state of the machine, i.e., memory contents or register contents, at that point.

The memory modify command (MM) is used to modify the contents of an address or, if desired, a range of addresses. This command can modify code or data residing in RAM.

The memory display command (MD) is used to display the contents of an address or a range of addresses, if desired.

The change register command (RCH) is used to modify the contents of an address register (Axx), a data register (Dxx), the program counter (PC), the user stack pointer (US), the system stack

pointer (SP) or the status register (SR). One of these options must be specified with the RCH command.

The display register command (REG) displays the contents of the address registers, data registers, program counter, user stack pointer, system stack pointer and status register. This information gives the state of the MC68010. This command is particularly useful when a breakpoint is reached in the debugging process.

The down-load command (LOAD) permits the minimal system to receive software that was developed on an IBM XT/AT compatible computer. After code has been assembled and linked using software such as the 2500AD MC68010 cross assembler, it can be down-loaded to the absolute address (or addresses) specified during the linking process.

c. Programmable Logic Device Programming

As already mentioned, EPLDs are used to reduce the chip count on the printed circuit board. The Data I/O Abel [Ref. 11] program was used to compile a high-level language representation of desired digital logic. The output of Abel is a joint electron device engineering council (JEDEC) standard file for programming the EPLDs. This file is then down-loaded to the Data I/O System 29 Universal Programmer to program the EPLDs. Appendix D shows the Abel source code that generates the logic implementations discussed in this chapter and illustrated in Figures C.4, C.5, C.6 and C.7.

B. FULLY INTEGRATED SYSTEM

The intent of this thesis is to design a hardware system so that at some future date an operating system could be developed to control its hardware facilities. These facilities accommodate virtual-memory, protected memory, serial communications, interrupt control and multi-processor abilities interfaced to the VMEbus. A hard disk controlled by a direct memory access (DMA) controller would be needed to implement the paging function required to support virtual-memory. The operating system would use the memory management unit (MMU) to implement user/supervisor allocations (protected memory) and virtual-memory. Considerations for a future operating system will be discussed throughout the following sections.

The fully integrated system is composed of the master circuit board subsystem and the system controller subsystem (Fig. 3.1). Each subsystem is decomposed into functional units. The functional units for the master circuit board subsystem are shown in Figure E.1 and the functional units for the system controller subsystem are shown in Figure E.2. Each of the functional units for the subsystems is discussed in the following sections.

1. Memory Map

The memory map (Table II) of the master circuit board's physical address space contains the memory-mapped peripheral devices and the physical memory. This mapping is an enhanced version of the minimal system's physical memory map (Table I).

TABLE II: SYSTEM MEMORY MAP

PHYSICAL ADDRESS	
\$000000	64K BYTES OF EPROM
\$00FFFF \$010000	
\$013FFF	16K BYTES OF SRAM
\$014000	OFF-BOARD RESOURCE
\$7F4FFF \$7F5000	
\$7F5FFF	MC68451 MMU
\$7F6000	SCB68155 INTERRUPT HANDLER
\$7F6FFF \$7F7000	
\$7F7FFF	MC68681 DUART
\$7F8000	OFF-BOARD RESOURCE
\$7FFFFF \$800000	
\$8FFFFF	ONE MEGABYTE OF DRAM
\$900000	OFF-BOARD RESOURCE
\$FFFFFF	

The memory map allocates 64K bytes of ROM to include the interrupt vector table, monitor/debugger program and operating system. The interrupt vector table and monitor/debugger program perform the same roles as described in the minimal system. However, an operating system would have to be incorporated to handle the enormous code requirements to manage user/supervisor memory allocations (protected memory), page faults (for virtual-memory) and an operating system kernel. The intent is for the core of the operating system to reside in ROM, since a mass storage

device is not incorporated in this subsystem design. A design of a multi-disk control module for a VMEbus-based system was presented in an earlier thesis [Ref. 12].

The 16k bytes of SRAM retains upward compatibility with the minimal system. The SRAM will be used until the DRAM can be incorporated into the master circuit board subsystem. However, if an operating system requires more that the 64K byte size of ROM, which is a likely possibility, any range spanning the physical addresses \$010000 through \$7F4FFF could be allocated for more ROM or RAM. This would require changing the address decoding logic and adding ROM or RAM chips to the master circuit board subsystem design.

The MC68451 MMU [Ref. 13] is memory-mapped because its internal registers must be programmed for the desired virtual-memory configuration and address translation. By using the MC68010's function codes (see Appendix A) along with the desired address translation scheme, an operating system can separate the supervisor's address space from the user's address space, thus implementing a memory protection scheme.

The SCB68155 interrupt handler hardware [Ref. 14:pp. 2-369 - 2-385] is memory-mapped so that it can be initialized for the desired mode of operation. The interrupt handler can accommodate local interrupts from the DUART and the MMU as well as interrupts from global bus masters.

The MC68681 DUART [Ref. 15] provides the interface to two RS-232 serial links. One link is used for communications with the

terminal, while the other link is used for communications with an IBM XT/AT computer. The DUART is configured to provide the desired serial communications characteristics such as baud rate, parity and stop bits.

One megabyte of DRAM is provided for the master circuit board subsystem. The operating system would manage this resource by assigning virtual pages to physical memory. It is intended that a portion of the DRAM's physical address range map to the same virtual address range. This will permit global memory access to pass semaphores and messages between the master circuit board and other subsystems, as discussed in Chapter I.

It is important to note that if an address falls into the ranges of \$014000 through \$7F4FFF, \$7F8000 through \$7FFFFF or \$900000 through \$FFFFFF, the CPU is accessing an off-board device.

2. Master Circuit Board

a. Microprocessor

The MC68010 CPU (Fig. E.3) is the processing element of the master circuit board subsystem. The signals of the CPU can be organized into functional groups (see Appendix A) which describe the role of the signals within the subsystem.

The CPU has two bi-directional open collector pins, HALT* and RESET*, which require pull-up resistors to ensure that the signals are not asserted until the appropriate events occur.

The only bus master on the subsystem is the MC68010. Hence, the bus request (BR *) and the bus grant acknowledge (BGACK *)

signals require a pull-up resistor to ensure that the CPU does not perform bus arbitration.

No Motorola M6800 peripherals are used in the master circuit board design. Hence, the valid peripheral address (VPA*) signal is tied to a logical one.

The circuitry to generate the DTACK* and BERR* signals (discussed later) are open collector signals. Hence, pull-up resistors are used to ensure that these signals are not inappropriately asserted.

b. Halt and Reset Generation

The HALT* and RESET* generation circuitry (Fig. E.4) provides manual and automatic power-on subsystem reset to the CPU and peripheral devices. The NE555 timer provides an automatic power-on reset to the subsystem. The NE555 timer is configured as a one-shot to generate the power-on reset signal. This automatic reset occurs within the first few tenths of a second after the subsystem is powered on. An external system reset can also reset the subsystem. This system reset is generated from the system controller subsystem via the VMEbus. A debounced switch is used to cause a manual reset of the subsystem.

A reset causes the CPU to read into the SP register and PC register the longword (32-bits) contents of physical addresses \$000000 and \$000004, respectively. Recall that ROM begins at physical address \$000000. Consequently, the two longwords beginning at physical address \$000000 are retrieved from non-volatile memory. The initial PC vector at physical address \$000004 contains the

value \$002000, so when this value is read into the PC, execution of the monitor/debugger program is started.

c. Clock Generation

The clock generation circuitry (Fig. E.5) provides clocking signals to the CPU and to the peripheral devices. A 74LS161 binary counter is used to divide the 16 MHz signal from the crystal oscillator into rates that accommodate the CPU, the MMU, the dual-port DRAM controller and the interrupt handler hardware. A 4 MHz signal is sent to additional circuitry to help generate the DTACK* and BERR* signals.

d. Local Bus Address Decoding

Once a virtual address is mapped to a physical address, the local bus address decode circuitry (Fig. E.6) is used to generate chip select signals for RAM, ROM or a peripheral device based upon the system memory map (Table II). Two Altera EP310 EPLDs [Ref. 16:pp. 2-57 - 2-62] were used in the design to be programmed via Abel software [Ref. 11]. As mentioned earlier, Abel is software developed by Data I/O Corporation that permits a highlevel language description of the logic function to be programmed on a EPLD, programmable array logic (PAL) or similar logic device.

e. Memory Management Unit

The MMU circuitry (Figs. E.7 and E.8) provides the subsystem with virtual-memory support and memory protection. The address translation from a virtual-address-to-physical-address is done by this device. Once the MC68451 MMU has been configured by the operating system, the address translation is performed

internally within the MMU and is thus hidden from the subsystem unless a page fault occurs. The internal details of the MMU are given in its reference manual [Ref. 13].

A page fault (FAULT*) signal is generated if the MMU detects a write violation or if address translation cannot be performed successfully. The write violation occurs if an attempt is made to write to a write-protected portion of physical memory. If address translation cannot be performed, this denotes to the operating system that a new memory page may need to be brought into memory from a hard disk or that there is a system error. The operating system configures the MMU to write-protect memory segments and to implement virtual-memory-mapping by the MMU.

The circuitry to inhibit virtual-address-to-physical-address translation during an interrupt cycle is illustrated in Figure E.7. The mapped address strobe (MAS*) and ALL input signals to the MMU are generated during an interrupt acknowledge cycle.

The physical data strobe generation circuitry (Fig. E.8) is used to generate the physical upper data strobe (PUDS*) and the physical lower data strobe (PLDS*) signals. The PUDS* and PLDS* signals are generated during normal virtual-address-to-physical-address translation. Normal address translation is the mapping of a virtual address to a physical address without a page fault occurring. The physical data strobes will not be generated if there is a write cycle for a write-protected segment. This is accomplished by the write inhibit (WIN*) signal generated by the MMU.

The physical address strobe circuitry (Fig. E.8) generates a physical address strobe (PAS*) signal to denote that the address translation has taken place and the physical address is valid and stable.

f. Dual-port DRAM Controller

The dual-port DRAM controller circuitry (Figs. E.9, E.10 and E.11) provides two paths into RAM [Ref. 17]. The local bus master (the CPU) can be ported to the RAM or a global bus master can be ported to the RAM via the VMEbus. Two paths into RAM are especially useful because processor subsystems can pass information-carrying semaphores. Also, The 74F764 dual-port DRAM controller provides DRAM refresh.

The 3-state capability of the 74LS244s (Fig. E.9) octal-buffers and line drivers with 3-state outputs are used to isolate one port access to the dual-port DRAM controller from the other port. The port is selected by the appropriate clock edge and control signal to the request input (REQ1* or REQ2*) of the 74F764 dual-port DRAM controller.

The control signal for REQ1* of the 74F764 (CS764REQ1*) is generated by the local bus address decoder and the control signal for REQ2* of the 74F764 (CS764REQ2*) is generated by the VMEbus address decoder. If CS764REQ1* is active on a rising clock edge and SEL2* is not asserted, the local master is granted access to the 74F764. The dual-port DRAM controller then asserts SEL1* to enable the 74LS244s and 74LS245s on the local bus side.

If CS764REQ2* is active on a falling clock edge and SEL1* is not asserted, the global bus master is granted access into the 74F764. The dual-port DRAM controller then asserts SEL2* to enable the 74LS244s and 74LS245s for the global bus side. In each case, the select line is released after the request signal is no longer asserted.

If both request lines are asserted and neither select line is asserted, on the next (rising or falling) clock edge, the select signal will be generated for the appropriate port access. The request that is locked out cannot gain access to the dual-port DRAM controller until the other port has completed its task and is no longer asserting its request signal.

The 74LS245s octal-bus transceivers with 3-state outputs, illustrated in Figure E.10, are used to buffer the data signals. Data can be sent between the CPU and the VMEbus, between the CPU and the DRAM or between the DRAM and the VMEbus. The data enable signal (DATAEN*) enables data to flow between the CPU and the VMEbus. The select port one (SEL1*) signal enables data to flow between the CPU and the DRAM, while the SEL2* signal enables data to flow between the DRAM and the VMEbus. The data flow direction to the 74LS245s is controlled by the read/write (R/W*) signal during local DRAM accesses, while the global R/W* signal (GR/W*) controls the direction for global DRAM accesses. The data direction enable (DDEN) signal controls the data direction flow between the CPU and the VMEbus.

The 74F764 can only effectively accommodate 18 address lines. Consequently, additional logic illustrated in Figure E.11 must be incorporated to handle address bit Al9, which is required to give access to the desired one megabyte of RAM.

When the row address strobe (RAS*) signal becomes inactive, the data transfer acknowledge output from the 74F764 (DTACK764) is asserted. The DTACK signal of the 74F764 signals that data has been transferred to or from memory.

g. Dynamic Random Access Memory

The dynamic random access memory circuitry (Figs. E.12, E.13, E.14 and E.15) provides one megabyte of DRAM for the master circuit board subsystem. The DRAM is divided into two 512k byte blocks. The odd bytes are stored in one 512k byte block (Figs. E.12 and E.13), while the even bytes are stored in the other 512k byte block (Figs. E.14 and E.15).

The DRAM receives refresh cycles from the dual-port DRAM controller. Although the 74F764 dual-port DRAM controller seizes control of the DRAM during refresh cycles, a bus arbitration process is not needed. An 8 MHz clock pulse (RCP) is divided by 64 to produce a refresh request internal to the 74F764. If no request signal (REQ1* or REQ2*) is asserted on the 74F764, a nine-bit counter internal to the 74F764 is incremented. The counter value which represents the row in memory to be refreshed is then placed on output lines MAO through MA8 of the 74F764. The RAS* signal is then asserted for four clock cycles to refresh a row in memory.

Finally, the RAS* signal is released and the refresh cycle is complete.

h. EPROM and SRAM

The EPROM and SRAM circuitry (Fig. E.16) provide 64k bytes of ROM and 16k bytes of SRAM. The EPROM contains the resident exception vector table and the monitor/debugger program. The SRAM is upward compatible from the minimum system. If additional memory is required by a resident operating system, a modification to the local bus address decoding logic would permit the size of ROM or RAM to be increased.

i. Dual Serial Port

The MC68681 dual universal asynchronous receiver/ transmitter serial port circuitry (Fig. E.17) is used to provide serial communications with the terminal and the IBM XT/AT computer. Port A is dedicated to the terminal and Port B is dedicated to the IBM XT/AT computer. The 3.6864 MHz crystal is used to generate the baud rates for data transmission for both ports. The terminal provides an interface to the system for the user. The IBM XT/AT is used to down-load files into the master circuit board subsystem's memory.

j. Interrupt Handler

The interrupt handler circuitry (Fig. E.18) provides the necessary logic to accommodate interrupts from devices residing on the master circuit board subsystem and global devices residing on other subsystems. The SCB68155 interrupt handler can

accommodate six local interrupts, seven global interrupts and a non-maskable interrupt (NMI).

Local interrupts (LRQ1* through LRQ6*) have a higher precedence than the global interrupts (IRQ1* through IRQ7*). The local interrupt signal LRQ6* has the highest priority, while local interrupt signal LRQ1* has the lowest priority. The global interrupt signal IRQ7* has the highest priority, while global interrupt signal IRQ1* has the lowest priority. The NMI signal has priority over local and global interrupts and it is provided for a catastrophic occurrence such as an alternating current (AC) power failure.

Local interrupts are generated by the DUART and the MMU. The DUART is programmed to provide an interrupt request when a port buffer full condition is met. The buffer full condition of the MC68681 DUART occurs whenever a character is received from the terminal keyboard or from the IBM XT/AT. The local interrupt generated by the MC68451 MMU occurs when the interrupt bit of the page status register is set during normal address translation.

When a local or global interrupt occurs, the interrupt handler hardware generates an interrupt priority level output on lines IPLO* through IPL2* to the CPU. The CPU responds by acknowledging the interrupt with the interrupt acknowledge signal (IACK*) and places the interrupt level on address lines Al through A3. The interrupt handler hardware reads the interrupt level on address lines A1 through A3 to determine which level is being acknowledged. If the interrupt was from a local device, the

interrupting device provides the vector number on the local data bus. If the interrupt was from another subsystem on the VMEbus, the interrupt handler hardware generates a bus interrupt acknowledge (BIACK*) signal to the VMEbus controller and the VMEbus. The VMEbus controller obtains control of the data transfer bus (DTB) so that an interrupt vector can be obtained from the interrupting subsystem. The BIACK* signal is only generated if the bus interrupt level is not masked (within the interrupt handler) and a local interrupt is not pending.

Once the local CPU has acknowledged the (local or global) interrupt request and has obtained an interrupt vector, the local CPU saves the state of the machine and transfers control to the appropriate interrupt handling routine. This prepares the CPU to perform an interrupt handling routine. After completion of the interrupt handling routine, the stored state of the machine is restored and the CPU resumes processing where it left off at the interrupt. [Ref. 7:pp. 4-3 - 4-16; Ref. 18:pp. 5-1 - 5-15]

k. Data Transfer Acknowledge and Bus Error Generation

The data transfer acknowledge and bus error generation circuitry (Fig. E.19) provides control signals to the CPU. This circuitry physically resides within a Altera EP310 EPLD. The DTACK* signal denotes that a data transfer has been completed by the slave device addressed. The MC68681 DUART, MC68451 MMU, SCB68172 VMEbus controller, SCB68155 interrupt handler and 74F764 dual-port DRAM controller peripheral devices possess the necessary

logic to generate their own DTACK* signal to acknowledge receipt or availability of data.

The master circuit board's RAM and ROM chips cannot generate their own DTACK* signals so external circuitry must do it for them. The DTACK* generation circuitry for the SRAM and ROM must allow adequate time for the data transfer. All these DTACK* signals are ORed together to produce the MC68010 DTACK* input.

If the CPU on the master circuit board makes an off-board access using the off-board (OFFBOARD*) signal to the VMEbus controller, the DTACK* signal (DTACK172*) is generated from the VMEbus controller. The off-board device provides a global DTACK* signal (GDTACK*) to the VMEbus controller (Fig. E.20) via the VMEbus DTACK* line. In turn, the VMEbus controller would provide the DTACK172* signal for the DTACK* circuitry. This arrangement permits long access times on the VMEbus.

If the master circuit board's DRAM is being accessed as a global asset, the GDTACK* signal is generated by the SEL2* and DTACK764 signals as illustrated in Figure E.11.

The BERR* signal is generated under one of three conditions. First, the BERR* signal is generated when the maximum allowable SRAM and ROM data transfer time has been reached and a DTACK* signal has not been received by the CPU. Secondly, a global bus error (BERR172*) signal can be received from a VMEbus watchdog timer if the master circuit board subsystem has control of the VMEbus. Finally, if a page fault signal (FAULT*) is generated by the MMU, this also causes a bus error condition.

The bus error condition causes exception processing to occur. The current state of the machine is saved. Information from the saved state of the machine can be used to determine the cause of the bus error. This is handled by the bus error exception routine as part of an operating system.

If the first port of the dual-port DRAM controller is not active and a refresh cycle is not taking place, a global bus master can have access to the DRAM. The master circuit board's CPU is unaware of the access to the DRAM through the second port. Consequently, the burden is placed upon a global master or a VMEbus watchdog timer to provide a global BERR* signal (GBERR*) on the VMEbus BERR* line, when appropriate, to the VMEbus controller. The GBERR* signal is sent to the BERR* circuitry (Fig. E.19) via the BERR172* signal.

1. VMEbus Controller

The VMEbus controller circuitry (Fig. E.20) provides the necessary logic for the master circuit board subsystem to gain access to the VMEbus. The SCB68172 VMEbus controller provides control signals (VMEEN*, DATAEN* and DDEN) to the master circuit board subsystem's drivers and transceivers. The purpose of the VMEbus enable (VMEEN*) signal is to enable the bus drivers only when there is an off-board (OFFBOARD*) access. In addition, the data flow (DATAEN*) and its direction (DDEN) are controlled. Parallel jacks are provided which permit jumper selection of the master circuit board subsystem's priority on the VMEbus.

m. VMEbus Address Decoding

The VMEbus address decode circuitry (Fig. E.21) permits access of a global bus master to the second port of the dual-port DRAM controller and ultimately into DRAM. Any subsystem, which has gained control of the VMEbus, has the ability to access the designated (by the operating system) area of DRAM for semaphore passing. The VMEbus address decoder provides the chip select signal CS764REQ2* to the dual-port DRAM controller (Fig. E.9). If the CS764REQ2* is asserted when clock edge falls and SEL1* signal of the 74F764 is not asserted, the isolation drivers are enabled to permit the flow of data and addresses from the global resource to the DRAM.

n. VMEbus Drivers

The circuitry for the master circuit board's VMEbus drivers (Figs. E.22, E.23 and E.24) provides control of signals from the local bus to the VMEbus and from the VMEbus to the local bus. The VMEbus controller controls the direction of the signal flow as requested by the CPU. Whenever the local bus master, the CPU, is not in control of the VMEbus, all signals from the local bus are isolated at the drivers by the VMEbus controller. Thus, in this case, no signals are gated onto the VMEbus from the local bus. However, another subsystem, if in control of the VMEbus, has direct access to the DRAM through the dual-port DRAM controller. The global addresses on the VMEbus fall into the range of the one megabyte of user DRAM in the master circuit board subsystem's memory map (Table II).

3. System Controller Circuit Board

a. Bus Arbiter

The VMEbus arbitration circuitry (Fig. E.25) provides the logic to arbitrate prioritized bus requests in parallel. Each bus request is then daisy chained down to the requesting device. Each subsystem capable of VMEbus access must have the ability to provide a bus request at one of four priority levels. The highest priority signal used is DBG7*, while the lowest priority level signal used is DBG4*. The process of resolving the VMEbus requests was described in Chapter II. Since the MC68452 bus arbitration module (BAM) [Ref. 8] is an asynchronous device, the bus grant signals (DBGx*) are not guaranteed to be spike-free. Consequently, a 50 nanosecond delay circuit is used to disable the DBGx* signals during the parallel arbitration process.

b. System Reset

The system reset circuitry (Fig. E.26) provides a system-wide master reset. This signal is sent on the VMEbus to all circuit boards and it is used to reset the entire system much like the local reset discussed earlier in this chapter.

c. VMEbus Drivers

The circuitry for the system controller drivers (Fig. E.27) provides the drive capability for signals to/from the VMEbus. Since circuitry was not designed to detect an AC power failure, the ACFAIL* signal is never asserted. This signal is input to the non-maskable interrupt of the interrupt handler (Fig. E.17). The bus clear (BCLR*) signal informs the current bus master that there is

a higher pending bus request. Burden is placed upon the current bus master to either relinquish control of the bus or to continue control until its task is completed. For the sake of simplicity, the master circuit board subsystem was designed to relinquish control upon the completion of its task. Finally, an IACK* daisy chain driver is provided for VMEbus interrupts.

V. RESULTS

Once the minimal system and fully integrated system hardware was designed, the schematic drawings drafted and the pin-out list implemented, software support was required to implement the minimal system. The monitor/debugger program required a thorough check of all its software features. These software features include the capability to set and remove a breakpoint, to display and modify memory, to display and change registers, to start program execution and to down-load software from a development system.

It was discovered while debugging the down-load portion of the monitor/debugger program that the 2500AD 68010 cross assembler's linking process incorrectly resolved external references. The lirking process generates a file in the Motorola S-record format. The problem was isolated only after comparing the Motorola S-record to Motorola's instruction format. It was identified that the 2500AD cross assembler improperly resolving was references. A corrected version of the 2500AD cross assembler was obtained from the vendor that resolved this problem. monitor/debugger software developed, the minimal system design was complete.

The monitor/debugger and vector table were programmed in the erasable programmable read-only memory (EPROM) with the Data I/O System 29 Universal Programmer. The Data I/O System 29 segregated

the even bytes and odd bytes into separate EPROMs as required by the Motorola MC68010 central processor unit (CPU).

Erasable programmable logic devices (EPLDs) were used to reduce the chip count in the minimal system design. The minimal system used an EPLD to perform the interrupt request (IRQ681*) and the interrupt acknowledge (IACK681*) logic. Also, EPLDs were used to implement the circuit logic required for the generation of the data transfer acknowledge (DTACK) and the bus error (BERR) signals and for address decoding. In order to program the EPLDs, Abel software was used to compile the source code representation of the logic to be implemented with the EPLD. Once all of the source code for the EPLDs had been written, compiled and software tested, the EPLDs were programmed.

On the Data I/O System 29, once the EPLD is programmed, the test vectors are again tested against the programmed EPLD. During this test run, the System 29 failed for every EPLD that was programmed, even though they passed the software tests. On the advice of an applications engineer at Data I/O Corporation, the test vectors were removed from the source code. This code was compiled, then the EPLDs were programmed. The EPLDs were breadboarded, while determining with reasonable certainty that the devices were actually implementing the desired logic.

The ultimate goal in this thesis was to implement the master circuit board subsystem design. One of the steps to achieve this goal requires the memory management unit (MMU) to translate a virtual address to a physical address. To avoid significant wiring

modifications to the minimal system to build up to the master subsystem, the MMU was wire-wrapped into the minimal system design. However, the MMU was not programmed at the minimal system stage. The MMU translates a virtual address to the same physical address when the MMU is not programmed after being reset. The MMU was configured to accommodate an automatic, manual and programmed (CPU reset instruction) reset.

VI. SUMMARY AND CONCLUSIONS

A. SUMMARY

The goal of this thesis was two-fold: first, to explore hardware ramifications of designing a microprocessor system for a multi-processor environment; and secondly, to implement the minimal system design.

1. Design Concepts

In exploring hardware ramifications, the scope was limited to features of the VMEbus structure, in memory-management and interrupt control. The memory-management features included memory protection, dual-ported memory and virtual-memory.

a. VMEbus Structure

The VMEbus permits an exchange of data and control beyond the boundaries of a single circuit board. Other subsystems or circuit boards which may include processing elements, memory and/or input/output (I/O) devices can be integrated to the VMEbus. A strict adherence to data transfer protocols over the VMEbus ensures the reliability and integrity of the system. The ability to integrate various subsystems along the VMEbus supports a multiprocessor environment.

b. Memory-Management

The Motorola MC68010 central processor unit (CPU) generates function codes which can be used by the memory management unit (MMU) to partition memory into supervisor and user portions.

An operating system would manage memory partitioning. Normally, systems are designed so that the supervisor memory portion contains the memory-mapped I/O devices and the read-only memory (ROM) and some random access memory (RAM). The ROM is mapped to the supervisor portion of memory since it provides the exception vector table and start-up program.

The function codes reflect the CPU's two modes of operation, the supervisor and user. The supervisor mode is a privileged mode which permits access to all instructions and the full range of memory (supervisor and user memory). The user mode permits access to only user instructions and the user memory. Typically, in the user mode, permission must be granted through the operating system to use system resources. The separation of supervisor memory from user memory prevents the user from tampering with the system assets or gaining supervisor privileges.

Dual-ported memory permits two separate sources to access the same memory block and provides the refresh signals for the dynamic random access memory (DRAM). Dual-ported memory permits RAM to be used as a shared asset. It is especially useful when a portion of the physical RAM is dedicated to passing parameters between microprocessor subsystems. Dedicating a portion of RAM for parameters is analogous to a mailbox delivery system. The mail courier (subsystem 1) delivers mail (parameters) to the mailbox (RAM). The addressee (subsystem 2) picks up the mail (parameters) and responds as required. If appropriate, the occupant (subsystem 2) places mail (parameters) in the mailbox

(RAM) to be delivered (to subsystem 1). These parameters can be used in managing a multi-processor operating system.

A MC68010-based system typically has memory-mapped I/O DRAM is added the master circuit board devices, RAM and ROM. subsystem to supplement the minimal system's static random access memory (SRAM). The MC68010 CPU has a virtual address range of 16 megabytes. However, the physical RAM's size is considerably less than the size of the virtual address space. Virtual-memory is used to extend the range of programming beyond the range of physical RAM. An MMU is used to map virtual addresses into RAM physical addresses. Also, the MMU detects an attempt by the CPU to access a virtual-memory address which is not currently present in physical memory. When such an attempt is detected, the MMU generates a page fault. This page fault causes the page fault exception routine to be invoked. The exception routine reads a page of information from secondary storage into RAM. The MMU maps the virtual addresses associated with the page into addresses in the physical RAM. After completion of the exception routine, program execution resumes with the completion of the instruction that caused the page fault.

c. Interrupt Control

Using interrupts results in more effective use of the microprocessor because the microprocessor is not kept waiting for a device to respond. The devices requesting interrupts in this thesis are programmed to provide an interrupt vector number during an interrupt acknowledge cycle for local interrupts. The interrupt

vector number causes the address of the exception routine to be obtained from the exception vector table by the CPU so that it can be executed.

2. Design Implementation

a. Hardware Configurations

The recommended wiring configurations that accompanied the product specifications for the MMU, VMEbus controller, dual universal asynchronous receiver/transmitter (DUART), dual-port DRAM controller, interrupt handler hardware and bus arbitration module (BAM) greatly assisted in the designs of the minimal system, system controller subsystem and master circuit board subsystem. However, in order to integrate these components into a system, care was taken to ensure that the control signals were interfaced properly. Since no computer-aided design (CAD) tools existed at the Naval Postgraduate School (NPS) to fully simulate even the minimal system design, prototyping the minimal system was necessary. The minimal system has a foundation of core resources. The intent was to prove the system design by building up a master circuit board subsystem from the minimal system.

The system controller subsystem provides a bus arbiter, interrupt acknowledge (IACK*) daisy chain driver and system-wide reset. The bus arbiter determines bus ownership between subsystems that make bus requests and it grants bus ownership to the subsystem with the highest priority. An IACK* daisy chain driver sends the IACK* signal on to the bus during an interrupt acknowledge cycle.

The system reset is used to reset all devices on all subsystems after a system failure.

The master circuit board subsystem accommodates the VMEbus structure, virtual-memory-mapping facilities, a protected memory scheme, dual-ported memory and interrupt handling hardware. The master circuit board subsystem design is an extension of the minimal system and should not be implemented until the minimal system is operational. In the master circuit board subsystem, the VMEbus controller provides the necessary logic to meet the VMEbus specification for setting up the baseline bus structure. Drivers and transceivers are incorporated to meet the specified signal drive capability and isolation requirements.

b. Erasable Programmable Logic Devices

The erasable programmable logic device (EPLD) used in the minimal system's address decoding must be modified to include the additional memory-mapped devices of the master circuit board subsystem. The EPLD used for interrupt handling in the minimal system is replace by the interrupt handler hardware in the master circuit board subsystem design.

The master circuit board subsystem design is an upgraded version of the minimal system. A pin-out list for all wiring connections was developed in order to reduce wire-wrap errors, but it is not included as part of this thesis. The small scale integrated circuit (SSI) logic shown for the generation of the data transfer acknowledge (DTACK), bus error (BERR), physical upper data strobe (PUDS*), physical lower data strobe (PLDS*) and

physical address strobe (PAS*) signals was actually implemented with EPLDs to reduce the chip count.

B. CONCLUSIONS

Meeting all the goals set in this thesis made this thesis an ambitious undertaking. The major integrated circuit (IC) chips included the CPU, DUART, interrupt handler hardware, dual-port DRAM controller, MMU, VMEbus controller and BAM. These IC chips required an extensive study of product specification application notes to understand the wiring configurations and programming of the devices. Study of the specification notes invoked support ideas in the design that required further investigation. These support ideas included DRAM memory refresh accommodations, driver characteristics, noise reduction virtual-memory. Once each device was reasonably understood, the problem of integrating the devices into a single system remained. Care was exercised to ensure that control signals were properly integrated to the devices. Consequently, a major portion of this thesis was spent in the research and design process without the assistance of CAD tools.

The design and implementation work of this thesis spanned almost two years. A major problem encountered was the inability to simulate the system designs. Hence, the system's validity could only be verified by actual design implementation.

The design phase took a considerable length of time because the inter-relationships between the devices to support a multi-processor environment, dual-port memory, virtual-memory, memory

protection, dual serial ports and interrupt control features were not trivial. Some of these features should have been eliminated so that a simpler design could have been implemented. However, using the approach of building a complex subsystem from a minimal system is an important technique. For a growing number of new application IC chips, facilities to simulate designs using these chips do not yet exist. Thus, there is a strong need for advanced design tools and engineering practices to support complex designs.

An important restriction of the master circuit board subsystem design is the lack of an operating system. The capability provided in this thesis could not be fully utilized without an operating system and a mass storage device, such as a hard disk. Managing the virtual-memory and protected memory requirements would require a tremendous amount of code which is beyond the scope of this thesis. However, while designing the master circuit board subsystem, foresight was exercised to consider the requirements of an operating system. This confirms the need for a dialogue between system designers and operating system designers to communicate the system requirements.

APPENDIX A: MC68010 16-BIT MICROPROCESSOR

Since the entire hardware system design revolves about the MC68010 microprocessor, a description of the microprocessor, its external signals and its programming is appropriate.

A. MC68010 DESCRIPTION

The MC68010 has seventeen 32-bit general purpose registers, a 16 megabyte address space, virtual-memory/machine support, 57 instructions with 14 addressing modes using five main data types and memory-mapped input/output (I/O) [Ref. 7:p. 1-1]. Motorola provides a complete signal description and timing analysis of the MC68010 microprocessor [Ref. 18].

B. MC68010 SIGNALS

The MC68010 central processing unit (CPU) comes in a 64-pin package. As shown in Figure A.1, the signals are organized into groups and the direction of the signal flow is denoted by the arrows. To avoid any confusion over logic assertion levels, the asterisk (*) at the end of a signal name is used to denote an active low assertion level.

1. Address Bus

The address bus consists of 23 address lines giving an eight megaword address range for the CPU.

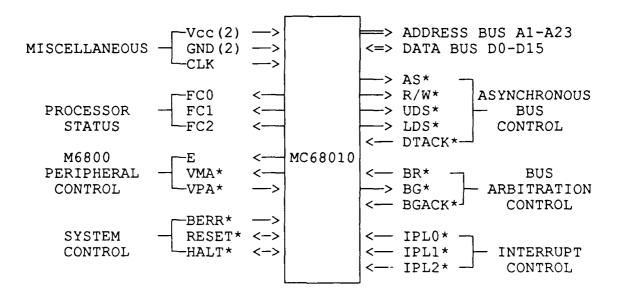


Figure A.1: MC68010 Signal Groups

2. Data Bus

The data bus is a 16-bit bi-directional bus used for transferring byte or word length data.

3. Asynchronous Bus Control

The asynchronous bus control group provides information about the data that is being transferred. The address strobe (AS*) signal signifies that valid address signals are being gated from the CPU. The read/write (R/W*) line denotes that the CPU is reading from a device (active high) or that the CPU is writing to the device (active low). The upper data strobe (UDS*) indicates that the data being transferred is on an even byte boundary. The lower data strobe (LDS*) indicates that the data being transferred is on an odd byte boundary. When UDS* and LDS* are both asserted, a word (16-bits) of data is being transferred. The UDS* and LDS*

signals together determine address bit AO, thus giving an address range of 16 megabytes for the CPU. The UDS*, LDS* and R/W* signals control the flow of the data on the data bus as illustrated in Table III [Ref. 18:p. 4-2]. Finally, the data transfer acknowledge (DTACK*) signal informs the CPU that the current data transfer has been completed by the peripheral device or memory location addressed.

TABLE III: DATA STROBE CONTROL OF THE DATA BUS

UDS*	LDS*	R/W*	D8 - D15	D0 - D7
1	1	lor0	NO VALID DATA BITS	NO VALID DATA BITS
0	0	1	VALID DATA BITS	VALID DATA BITS
1	0	1	NO VALID DATA BITS	VALID DATA BITS
0	1	1	VALID DATA BITS	NO VALID DATA BITS
0	0	0	VALID DATA BITS	VALID DATA BITS
1	0	0	#VALID DATA BITS 0-7	VALID DATA BITS
0	1	0	VALID DATA BITS	#VALID DATA BITS 8-15

[#] These conditions are a result of current implementation and may not appear on future devices.

4. Bus Arbitration Control

As a group, the bus arbitration control signals provide a mechanism for the CPU to give up control of the bus. However, these signals do not determine (directly) which alternate bus master gets control. The bus request (BR*) signal is a signal generated by a device or devices requesting access to the bus. The bus grant (BG*) is a signal from the CPU indicating that it will release the bus at the end of the current bus cycle. The bus

grant acknowledge (BGACK*) is a signal asserted by an alternate bus master while it has control of the bus.

5. Interrupt Control

The interrupt priority levels (IPLO* through IPL2*) are signals which represent the encoded priority level for the highest priority device desiring interrupt service. The signal IPLO* is the least significant bit and the signal IPL2* is the most significant bit of the group. A level zero interrupt (all signals are asserted high) indicates there is no interrupt request pending. A level seven interrupt (all IPLx* signals are asserted low) has the highest priority and is non-maskable. This implies that level seven is not an ordinary interrupt level for requesting routine interrupt service. Rather, a level seven interrupt should be reserved for catastrophic events such as alternating current (AC) power failure where the non-maskable property is essential.

6. System Control

The system control group is used to reset the CPU and to indicate to the CPU that a bus error has occurred. It is also used to reset peripheral devices and to generate a bus error exception. The halt signal (HALT*), active low, is a bi-directional signal. As an input, it is used to stop the CPU at the completion of the current bus cycle. As an output, HALT* is asserted only when a double bus error or address error exception has caused the MC68010 to enter a halt state.

The reset signal (RESET*), active low, is also a bidirectional signal. It can be used as an input to reset the

internal microcircuitry within the CPU. When a reset instruction is executed by the CPU, it can be used to reset system devices.

Typically, a maximum time is allotted for data transfer. If the data transfer is not completed within the allotted time, bus error (BERR*) is asserted by a time out circuit called a watchdog timer. Often, the BERR* signal is used to inform the CPU that the current address on the address bus is invalid because no physical memory or peripheral device is mapped at that address. The BERR* signal can also be used to flag the condition that the CPU is making an attempt to write to read-only memory (ROM). In a virtual-memory system, BERR* is asserted by the memory management unit (MMU) when a page fault occurs.

7. M6800 Peripheral Control

The M6800 peripheral control group is a group of signals which are used to interface the MC68010's 16-bit asynchronous data bus to synchronous peripheral devices in the Motorola M6800 eight-bit family.

The enable (E) signal which acts as the 6800 phase two clock is used to synchronize data transfer between the MC68010 CPU and M6800 peripheral device. The E signal's period is ten clock periods of the MC68010's clock input. The valid peripheral address (VPA*) signal denotes to the CPU that the device selected is a M6800 peripheral device. The VPA* signal indicates to the CPU that it should initiate a data transfer synchronized with the E signal. The valid memory address (VMA*) signal from the CPU indicates to a

M6800 device that there is a valid address on the address bus and that the MC68010 is synchronized with the E signal.

8. Processor Status

The MC68010 has three function code lines (FC0 through FC2) which delineate the current processor state (user or supervisor) and the address space (program or data) being accessed as defined by Table IV [Ref. 18:p. 5-3]. The address strobe (AS*) signal from the CPU indicates that a valid address and function code are available from the CPU.

TABLE IV: STATE AND ADDRESS SPACE

FUNCTIO	ON CODE	OUTPUT	ADDRESS SPACE
FC2	FC1	FC0	
0 0 0 0 1 1	0 0 1 1 0 0	0 1 0 1 0	UNDEFINED, RESERVED FOR FUTURE USE USER DATA SPACE USER PROGRAM SPACE UNDEFINED, RESERVED FOR FUTURE USE UNDEFINED, RESERVED FOR FUTURE USE SUPERVISOR DATA SPACE SUPERVISOR PROGRAM SPACE CPU SPACE (INTERRUPT ACKNOWLEDGE)

9. Miscellaneous

Both Vcc pins and both GND pins must be connected in order to power the CPU. The clock (CLK) input signal is used to develop all the synchronizing signals required within the CPU.

C. PROGRAMMING

Motorola provides programming information in its reference manual [Ref. 7]. The MC68010's instruction set includes the following operations:

- Data Movement
- Bit Manipulation
- Integer Arithmetic Binary Coded Decimal (BCD) Arithmetic

- Logical Program Control
 Shift and Rotate System Control
 Bit Manipulation Multi-processor Communications

supporting the following data types:

- Bit
- BCD (Four-bits)
- Byte (Eight-bits)
- Word (16-bits)
- Long Word (32-bits)

Fourteen addressing modes that are available to the assembly language programmer. The addressing modes available include:

- Data Register Direct
- Address Register Direct
- Address Register Indirect
- Address Register Indirect with Postincrement Address Register Indirect with Predecrement
- Address Register Indirect with Offset
- Address Register Indirect with Index and Offset
- Absolute Short
- Absolute Long
- Program Counter with Offset
- Program Counter with Index and Offset
- Immediate Data
- Quick Immediate
- Implied Register

The following assets are available:

- Eight Data Registers
- Seven Address Registers
- User Stack Pointer (User Mode)
- Supervisor Stack Pointer (Supervisor Mode)
- Program Counter
- *Status Register (Supervisor mode)
- Vector Base Register (Supervisor Mode)
- Alternate Function Code Registers (Supervisor Mode)
- * The condition code register is the lower byte of the status register and it is accessible in the user mode.

To support virtual-memory, the MC68010 microprocessor allows an interrupted bus cycle to be re-run after a bus error exception. The return from exception (RTE) instruction uses the format field of the exception stack to determine whether the exception was caused by bus or address error. After a bus or address error caused the exception, the CPU continues the interrupted instruction after completion of the exception routine. [Ref. 19]

APPENDIX B: MINIMAL SYSTEM EXCEPTION VECTOR TABLE AND MONITOR/DEBUGGER PROGRAM

This appendix contains the source listings of the exception vector table and monitor/debugger program. The separate file names are as follows:

- VECTABLE.ASM
- MAIN.ASM
- MESSAGE.ASM
- CONSOLE.ASM
- GETSTRIN.ASM
- GET ADDR.ASM
- IO UTIL.ASM
- DECODER.ASM
- BYTEOUT.ASM
- MEM LIST.ASM
- HEXCONV.ASM
- GO.ASM
- STUB.ASM
- REG.ASM
- REGCHANG.ASM
- DOWNLOAD.ASM
- UNUSED.ASM

Using the 2500AD 68010 cross assembler and linker, a Motorola S-record format file was generated as a load module. The load module was loaded as a ASCII file into a Data I/O System 29 Universal Programmer. Once resident in the programmer, the load module was programmed to erasable programmable read-only memory (EPROM). It should be noted that the data section as contained in MAIN.ASM was not programmed on EPROM, but rather it resides in random access memory (RAM).

The first two entries in the exception vector table are used during the system boot up to provide the initial contents for the stack pointer and the program counter. The exception vector table contains the addresses of exception routines. The monitor/debugger

program initializes the MC68681 peripheral device and provides facilities for performing software debugging and the down-loading of files from an IBM XT/AT compatible computer.

```
EXCEPTION VECTOR TABLE
****************
* WRITTEN BY LARRY ABBUTT JUNE 5, 1987
*****************
* FILENAME: VECTABLE.ASM
*************
* VERSION 1.3
                                DESCRIPTION
      DATE
                 NAME
    29 SEPT 87 DAVID M. SENDEK ADDITIONAL DOCUMENTATION *
***************
  DEFINING MODULES OF EXTERNALLY DECLARED VARIABLES:
             - GO.ASM
    BKPT
    INIT
             - MAIN.ASM
             - MAIN.ASM
    INIT SP
             - MESSAGE.ASM
    MESSAGE
    MONITOR
             - MAIN.ASM
    UNUSED
             - UNUSED.ASM
EXTERNAL
               BKPT, INIT, INIT SP, MESSAGE, MONITOR
    EXTERNAL
               UNUSED
    ORG 0
           VECTOR TABLE STARTS AT ABSOLUTE ADDRESS $000000
    LONG
           INIT SP
                        INITIAL STACK POINTER VECTOR
           INIT
    LONG
                        INITIAL PROGRAM COUNTER (PC)
                               VECTOR
    LONG
           UNUSED
                        BUS ERROR VECTOR
           UNUSED
                        ADDRESS ERROR VECTOR
    LONG
    LONG
           UNUSED
                        ILLEGAL INSTRUCTION VECTOR
                        ZERO DIVIDE VECTOR
    LONG
           UNUSED
    LONG
           UNUSED
                        CHK INSTRUCTION VECTOR
                        TRAPV INSTRUCTION VECTOR
    LONG
           UNUSED
    LONG
           UNUSED
                        PRIVILEGE VIOLATION VECTOR
                        TRACE VECTOR
    LONG
           UNUSED
    LONG
                        LINE 1010 EMULATION VECTOR
           UNUSED
                        LINE 1111 EMULATION VECTOR
    LONG
           UNUSED
    ORG $38
                        NOTE: VECTOR NUMBERS 12 AND 13
                             ARE UNASSIGNED, RESERVED
    LONG
           UNUSED
                        FORMAT ERROR VECTOR
                        UNINITIALIZED INTERRUPT VECTOR
    LONG
           UNUSED
    ORG $60
                        NOTE: VECTOR NUMBERS 16-23 ARE
                                   UNASSIGNED, RESERVED
    LONG
                         SPURIOUS INTERRUPT VECTOR
           UNUSED
    LONG
           UNUSED
                         LEVEL 1 AUTOVECTOR VECTOR
                         LEVEL 2 AUTOVECTOR VECTOR
    LONG
           UNUSED
                         LEVEL 3 AUTOVECTOR VECTOR
    LONG
           UNUSED
    LONG
                         LEVEL 4 AUTOVECTOR VECTOR
           UNUSED
    LONG
                         LEVEL 5 AUTOVECTOR VECTOR
           UNUSED
                         LEVEL 6 AUTOVECTOR VECTOR
    LONG
           UNUSED
                         LEVEL 7 AUTOVECTOR VECTOR
    LONG
           UNUSED
```

```
LONG
         BKPT
                          TRAP 0 VECTOR USED AS
                              MONITOR BRKPT
         UNUSED
                          TRAP 1 VECTOR
LONG
LONG
         UNUSED
                          TRAP 2 VECTOR
                          TRAP 3 VECTOR
LONG
         UNUSED
                          TRAP 4 VECTOR
LONG
         UNUSED
                          TRAP 5 VECTOR
LONG
         UNUSED
LONG
         UNUSED
                          TRAP 6 VECTOR
                          TRAP 7 VECTOR
LONG
         UNUSED
ORG $100
                          NOTE: VECTOR NUMBERS 48-63 ARE
                                UNASSIGNED, RESERVED
LONG
         MONITOR
                          USER INTERRUPT 0
                                               VECTOR
                               DEFINED FOR MONITOR
LONG
         UNUSED
                          USER INTERRUPT 1
                                               VECTOR
                          USER INTERRUPT 2
                                               VECTOR
LONG
         UNUSED
LONG
         UNUSED
                          USER INTERRUPT 3
                                               VECTOR
                          USER INTERRUPT 4
LONG
         UNUSED
                                               VECTOR
LONG
                          USER INTERRUPT 5
                                               VECTOR
         UNUSED
                         USER INTERRUPT 6
LONG
         UNUSED
                                               VECTOR
LONG
         UNUSED
                          USER INTERRUPT 7
                                               VECTOR
                          USER INTERRUPT 8
LONG
         UNUSED
                                               VECTOR
LONG
                          USER INTERRUPT 9
                                               VECTOR
         UNUSED
                          USER INTERRUPT 10
                                               VECTOR
LONG
         UNUSED
                                               VECTOR
LONG
         UNUSED
                          USER INTERRUPT 11
                          USER INTERRUPT 12
LONG
         UNUSED
                                               VECTOR
LONG
         UNUSED
                          USER INTERRUPT 13
                                               VECTOR
LONG
         UNUSED
                         USER INTERRUPT 14
                                               VECTOR
                          USER INTERRUPT 15
                                               VECTOR
LONG
         UNUSED
LONG
         UNUSED
                          USER INTERRUPT 16
                                               VECTOR
LONG
                          USER INTERRUPT 17
                                               VECTOR
         UNUSED
LONG
                          USER INTERRUPT 18
         UNUSED
                                               VECTOR
                          USER INTERRUPT 19
LONG
         UNUSED
                                               VECTOR
                          USER INTERRUPT 20
LONG
         UNUSED
                                               VECTOR
LONG
                         USER INTERRUPT 21
                                               VECTOR
         UNUSED
LONG
         UNUSED
                         USER INTERRUPT 22
                                               VECTOR
                          USER INTERRUPT 23
                                               VECTOR
LONG
         UNUSED
LONG
         UNUSED
                          USER INTERRUPT 24
                                               VECTOR
LONG
         UNUSED
                          USER INTERRUPT 25
                                               VECTOR
LONG
         UNUSED
                          USER INTERRUPT 26
                                               VECTOR
                          USER INTERRUPT 27
LONG
         UNUSED
                                               VECTOR
LONG
                          USER INTERRUPT 28
         UNUSED
                                               VECTOR
LONG
         UNUSED
                         USER INTERRUPT 29
                                               VECTOR
LONG
                          USER INTERRUPT 30
         UNUSED
                                               VECTOR
LONG
         UNUSED
                          USER INTERRUPT 31
                                               VECTOR
LONG
                          USER INTERRUPT 32
         UNUSED
                                               VECTOR
LONG
         UNUSED
                          USER INTERRUPT 33
                                               VECTOR
                          USER INTERRUPT 34
LONG
                                               VECTOR
         UNUSED
LONG
         UNUSED
                         USER INTERRUPT 35
                                               VECTOR
LONG
         UNUSED
                         USER INTERRUPT 36
                                               VECTOR
LONG
         UNUSED
                         USER INTERRUPT 37
                                               VECTOR
LONG
                         USER INTERRUPT 38
         UNUSED
                                               VECTOR
LONG
         UNUSED
                         USER INTERRUPT 39
                                               VECTOR
```

LONG	UNUSED	USER	INTERRUPT	40	VECTOR
LONG	UNUSED	USER	INTERRUPT	41	VECTOR
LONG	UNUSED	USER	INTERRUPT	42	VECTOR
LONG	UNUSED	USER	INTERRUPT	43	VECTOR
LONG	UNUSED	USER	INTERRUPT	44	VECTOR
LONG	UNUSED	USER	INTERRUPT	45	VECTOR
LONG	UNUSED	USER	INTERRUPT	46	VECTOR
LONG	UNUSED	USER	INTERRUPT	47	VECTOR
LONG	UNUSED	USER	INTERRUPT	48	VECTOR
LONG	UNUSED	USER	INTERRUPT	49	VECTOR
LONG	UNUSED	USER	INTERRUPT	50	VECTOR
LONG	UNUSED	USER	INTERRUPT	51	
				52	VECTOR
LONG	UNUSED	USER	INTERRUPT		VECTOR
LONG	UNUSED	USER	INTERRUPT	53	VECTOR
LONG	UNUSED	USER	INTERRUPT	54	VECTOR
LONG	UNUSED	USER	INTERRUPT	55	VECTOR
LONG	UNUSED	USER	INTERRUPT	56	VECTOR
LONG	UNUSED	USER	INTERRUPT	57	VECTOR
LONG	UNUSED	USER	INTERRUPT	58	VECTOR
LONG	UNUSED	USER	INTERRUPT	59	VECTOR
LONG	UNUSED	USER	INTERRUPT	60	VECTOR
LONG	UNUSED	USER	INTERRUPT	61	VECTOR
LONG	UNUSED	USER	INTERRUPT	62	VECTOR
LONG	UNUSED	USER	INTERRUPT	63	VECTOR
LONG	UNUSED	USER	INTERRUPT	64	VECTOR
LONG	UNUSED	USER	INTERRUPT	65	VECTOR
LONG	UNUSED	USER	INTERRUPT	66	VECTOR
LONG	UNUSED	USER	INTERRUPT	67	VECTOR
LONG	UNUSED	USER	INTERRUPT	68	VECTOR
LONG	UNUSED	USER	INTERRUPT	69	VECTOR
LONG	UNUSED	USER	INTERRUPT	70	VECTOR
LONG	UNUSED	USER	INTERRUPT	71	VECTOR
LONG	UNUSED	USER	INTERRUPT	72	VECTOR
LONG	UNUSED	USER	INTERRUPT	73	VECTOR
LONG	UNUSED	USER	INTERRUPT	74	VECTOR
LONG	UNUSED	USER	INTERRUPT	75	VECTOR
LONG	UNUSED	USER	INTERRUPT	76	VECTOR
LONG	UNUSED	USER	INTERRUPT	77	VECTOR
LONG	UNUSED	USER	INTERRUPT	78	VECTOR
LONG	UNUSED	USER	INTERRUPT	79	VECTOR
LONG	UNUSED	USER	INTERRUPT	80	VECTOR
LONG	UNUSED	USER	INTERRUPT	81	VECTOR
LONG	UNUSED	USER	INTERRUPT	82	VECTOR
LONG	UNUSED	USER	INTERRUPT	83	VECTOR
LONG	UNUSED	USER	INTERRUPT	84	VECTOR
LONG	UNUSED	USER	INTERRUPT	85	VECTOR
LONG	UNUSED	USER	INTERRUPT	86	VECTOR
LONG	UNUSED	USER	INTERRUPT	87	VECTOR
LONG	UNUSED	USER	INTERRUPT	88	VECTOR
LONG	UNUSED	USER	INTERRUPT	89	VECTOR
LONG	UNUSED	USER	INTERRUPT	90	VECTOR
LONG	UNUSED	USER	INTERRUPT	91	VECTOR

LONG	UNUSED	USER	INTERRUPT	92	VECTOR
LONG	UNUSED	USER	INTERRUPT	93	VECTOR
LONG	UNUSED	USER	INTERRUPT	94	VECTOR
LONG	UNUSED	USER	INTERRUPT	95	VECTOR
LONG	UNUSED	USER	INTERRUPT	96	VECTOR
LONG	UNUSED	USER	INTERRUPT	97	VECTOR
LONG	UNUSED	USER	INTERRUPT	98	VECTOR
LONG	UNUSED	USER	INTERRUPT	99	VECTOR
LONG	UNUSED	USER	INTERRUPT	100	VECTOR
LONG	UNUSED	USER	INTERRUPT	101	VECTOR
LONG	UNUSED	USER	INTERRUPT	102	VECTOR
LONG	UNUSED	USER	INTERRUPT	103	VECTOR
LONG	UNUSED	USER	INTERRUPT	103	VECTOR
LONG LONG	UNUSED	USER		104	VECTOR
			INTERRUPT		
LONG	UNUSED	USER	INTERRUPT	106	VECTOR
LONG	UNUSED	USER	INTERRUPT	107	VECTOR
LONG	UNUSED	USER	INTERRUPT	108	VECTOR
LONG	UNUSED	USER	INTERRUPT	109	VECTOR
LONG	UNUSED	USER	INTERRUPT	110	VECTOR
LONG	UNUSED	USER	INTERRUPT	111	VECTOR
LONG	UNUSED	USER	INTERRUPT	112	VECTOR
LONG	UNUSED	USER	INTERRUPT	113	VECTOR
LONG	UNUSED	USER	INTERRUPT	114	VECTOR
LONG	UNUSED	USER	INTERRUPT	115	VECTOR
LONG	UNUSED	USER	INTERRUPT	116	VECTOR
LONG	UNUSED	USER	INTERRUPT	117	VECTOR
LONG	UNUSED	USER	INTERRUPT	118	VECTOR
LONG	UNUSED	USER	INTERRUPT	119	VECTOR
LONG	UNUSED	USER	INTERRUPT	120	VECTOR
LONG	UNUSED	USER	INTERRUPT	121	VECTOR
LONG	UNUSED	USER	INTERRUPT	122	VECTOR
LONG	UNUSED	USER	INTERRUPT	123	VECTOR
LONG	UNUSED	USER	INTERRUPT	124	VECTOR
I _' ONG	UNUSED	USER	INTERRUPT	125	VECTOR
LONG	UNUSED	USER	INTERRUPT	126	VECTOR
LONG	UNUSED	USER	INTERRUPT	127	VECTOR
LONG	UNUSED	USER	INTERRUPT	128	VECTOR
LONG	UNUSED	USER		129	VECTOR
	UNUSED		INTERRUPT		
LONG	UNUSED	USER	INTERRUPT	130	VECTOR
LONG		USER	INTERRUPT	131	VECTOR
LONG	UNUSED	USER	INTERRUPT	132	VECTOR
LONG	UNUSED	USER	INTERRUPT	133	VECTOR
LONG	UNUSED	USER	INTERRUPT	134	VECTOR
LONG	UNUSED	USER	INTERRUPT	135	VECTOR
LONG	UNUSED	USER	INTERRUPT	136	VECTOR
LONG	UNUSED	USER	INTERRUPT	137	VECTOR
LONG	UNUSED	USER	INTERRUPT	138	VECTOR
LONG	UNUSED	USER	INTERRUPT	139	VECTOR
LONG	UNUSED	USER	INTERRUPT	140	VECTOR
LONG	UNUSED	USER	INTERRUPT	141	VECTOR
LONG	UNUSED	USER	INTERRUPT	142	VECTOR
LONG	UNUSED	USER	INTERRUPT	143	VECTOR

LONG	UNUSED	USER	INTERRUPT	144	VECTOR
LONG	UNUSED	USER	INTERRUPT	145	VECTOR
LONG	UNUSED	USER	INTERRUPT	146	VECTOR
LONG	UNUSED	USER	INTERRUPT	147	VECTOR
LONG	UNUSED	USER	INTERRUPT	148	VECTOR
LONG	UNUSED	USER	INTERRUPT	149	VECTOR
LONG	UNUSED	USER	INTERRUPT	150	VECTOR
LONG	UNUSED	USER	INTERRUPT	151	VECTOR
LONG	UNUSED	USER	INTERRUPT	152	VECTOR
LONG	UNUSED	USER	INTERRUPT	153	VECTOR
	UNUSED	USER			
LONG			INTERRUPT	154	VECTOR
LONG	UNUJED	USER	INTERRUPT	155	VECTOR
LONG	UNUSED	USER	INTERRUPT	156	VECTOR
LONG	UNUSED	USER	INTERRUPT	157	VECTOR
LONG	UNUSED	USER	INTERRUPT	158	VECTOR
LONG	UNUSED	USER	INTERRUPT	159	VECTOR
LONG	UNUSED	USER	INTERRUPT	160	VECTOR
LONG	UNUSED	USER	INTERRUPT	161	VECTOR
LONG	UNUSED	USER	INTERRUPT	162	VECTOR
LONG	UNUSED	USER	INTERRUPT	163	VECTOR
LONG	UNUSED	USER	INTERRUPT	164	VECTOR
LONG	UNUSED	USER	INTERRUPT	165	VECTOR
LONG	UNUSED	USER	INTERRUPT	166	VECTOR
LONG	UNUSED	USER	INTERRUPT	167	VECTOR
LONG	UNUSED	USER	INTERRUPT	168	VECTOR
LONG	UNUSED	USER	INTERRUPT	169	VECTOR
LONG	UNUSED	USER	INTERRUPT	170	VECTOR
LONG	UNUSED	USER	INTERRUPT	171	VECTOR
LONG	UNUSED	USER	INTERRUPT	172	VECTOR
LONG	UNUSED	USER	INTERRUPT	173	VECTOR
LONG	UNUSED	USER	INTERRUPT	174	VECTOR
LONG	UNUSED	USER	INTERRUPT	175	VECTOR
LONG	UNUSED	USER	INTERRUPT	176	VECTOR
LONG	UNUSED	USER	INTERRUPT	177	VECTOR
LONG	UNUSED	USER	INTERRUPT	178	VECTOR
LONG	UNUSED	USER	INTERRUPT	179	VECTOR
LONG	UNUSED	USER	INTERRUPT	180	
					VECTOR
LONG	UNUSED	USER	INTERRUPT	181	VECTOR
LONG	UNUSED	USER	INTERRUPT	182	VECTOR
LONG	UNUSED	USER	INTERRUPT	183	VECTOR
LONG	UNUSED	USER	INTERRUPT	184	VECTOR
LONG	UNUSED	USER	INTERRUPT	185	VECTOR
LONG	UNUSED	USER	INTERRUPT	186	VECTOR
LONG	UNUSED	USER	INTERRUPT	187	VECTOR
LONG	UNUSED	USER	INTERRUPT	188	VECTOR
LONG	UNUSED	USER	INTERRUPT	189	VECTOR
LONG	UNUSED	USER	INTERRUPT	190	VECTOR
LONG	UNUSED	USER	INTERRUPT	191	VECTOR
END					

```
MAIN IS THE ENTRY POINT INTO THE MONITOR. MAIN
    INITIALIZES THE RS-232 PORT BEFORE ENTERING THE
    MONITOR. ALSO, MAIN CONTAINS THE MEMORY MAPS,
    EOUATES AND MEMORY ALLOCATIONS.
******************
    68K MONITOR VERSION V1.3 - AN ACCUMULATION OF ALL
                            PRIOR VERSIONS
     COPYRIGHT @ AUG. 1986 BY DR. LARRY ABBOTT
    FILENAME: MAIN.ASM
********************
* VERSION 1.3
 REV. MODIFIED BY
                       DATE
                                 DESCRIPTION
        LARRY ABBOTT
                       11/7/86
  Α
  В
        LARRY ABBOTT
                       12/14/86 MONSTAT-ESCAPE
        LARRY ABBOTT
                      6/6/87
                               ADAPT TO MC68681
 D DAVID M. SENDEK 29 SEPT 87
                               -INCLUDE VECTOR TABLE
                               -INCLUDE MONITOR PROMPT
                               -CORRECT FOR 68681
*********************
       DEFINING MODULES OF EXTERNALLY DECLARED VIRIABLES:
       CMD DECODE - DECODER.ASM
       GETSTRING - GETSTRIN.ASM
                 - MESSAGE.ASM
       MESSAGE
                 - MESSAGE.ASM
       MONMSG
                 - IO UTIL.ASM
       SCRLF
****************
    GLOBAL
                BKPTAB, BS, BTLEN, BUFFIN, CHECKSUM, CK SUM
    CLOBAL
                CONTINUE, CR
    GLOBAL
                END ADDRESS, EPROMRNG, EPROMWR, ESC, ESCAPE
                FOUND, FWDARW, HEX ERR, LF, MODIFY, MONSTAT,
    GLOBAL
                NULL, PORT1, PORT2, RBA, RECFULL
    GLOBAL
    GLOBAL
                 SPACE, SRA, SRAM, SRAMSIZE, STRING, STRINGEND
    GLOBAL
                 SYSTAX, SRB, TEA, TBB, RBB
    GLOBAL
                 TBA, XEMPTY
                 INIT SP, INIT, MONITOR
    GLOBAL
    EXTERNAL
                CMD DECODE, GETSTRING, MESSAGE, MONMSG, SCRLF
    EXTERNAL
                PROMPT
                ALL R/W DATA IS STORED IN SRAM AT ADDRESS
                 $010000
        EQUATES
BS
         EQU
                 $08
                       ASCII CODE FOR <-- (BACKSPACE)
         EQU
                 $0D
                       ASCII CODE FOR RETURN
EPROMRNG
                $3FF
                       EPROM RNG 0 -> $3FF (EXCEPTION TBL)
         EQU
ESC
         EOU
                $1B
                       ASCII CODE FOR ESCAPE
FWDARW
         EQU
                $3E
                       ASCII CODE FOR '>' (FORWARD ARROW)
LF
         EQU
                $0A
                     ASCII CODE FOR LINEFEED
```

```
ASCII CODE FOR NUL
NULL
            EQU
                     $00
            EQU
                     $20
                            ASCII CODE FOR SPACE
SPACE
BTLEN
            EOU
                     $10
                            BREAKPOINT TABLE LENGTH IN WORDS
     MEMORY ALLOCATIONS
             BLKW 3/2*BTLEN RESERVE BTLEN/2 32-BIT BKPT's
BKPTAB
BUFFIN
             BLKB $3F RESERVE 63 BYTE INPUT BUFFER
END ADDRESS BLKW 2
                            RESERVE WORD FOR END ADDRESS
                           RESERVE A WORD FOR MONITOR STATUS SAVE AREA FOR APPLICATION REG'S
             BLKW 1
MONSTAT
             BLKW 36
STAX
             BLKW 2
                            RESERVE MEMORY FOR STACK POINTER
SYSTAX
             BLKW 1
                            CHECK SUM STORAGE
CK SUM
             EQU BKPTAB DATA BEGINS AT LOW ADDR OF SRAM
SRAM
SRAMSIZE EQU $3FFF
INIT_SP EQU $013FFE
                             16K BYTES OF STATIC RAM
             EQU $013FFE INITIAL STACK POINTER
      DEFINITION OF MONSTAT (MONITOR STATUS WORD)
EPROMWR
             EQU
                    0
                            WRITE TO EPROM FLAG
ESCAPE
             EOU
                            ESCAPE FLAG
            EQU 2
EQU 3 CMD FOOL.
EQU 4 HEX CONVERSION EXACT
EQU 5 MEMORY MODIFY FLAG
EQU 6 STRING BUILDING IN PROC
EQU 7 END OF STRING BUILDING
EQU 8 CHECKSUM ERROR FLAG
CONTINUE
FOUND
HEX ERR
MODIFY
                            STRING BUILDING IN PROGRESS
STRING
STRINGEND
           EQU
CHECKSUM
           EOU
      68681 EQUATES
                      $00 SRA(0)=1=>RECEIVE FIFO HAS A CHAR
RECFULL
             EQU
XEMPTY
             EOU
                      $02 SRA(2)=1=>XMIT HOLDING REG EMPTY
MR1RFSET
             EQU
                    $1A RESET MODE REG PTR & DISABLE XMIT/RECV
                    $30 XTAL/16 CLOCK
$13 8-BIT DATA, NO PARITY
CLK_SRC
             EOU
CONF_1AB
             EQU
CONF 2A
             EOU
                    $07 1 STOP BIT
CONF 2B
             EQU
                     $0F 2 STOP BITS
BAUD2400
                     $88
                          2400 BAUD
             EOU
BAUD9600
             EQU
                    $BB 9600 BAUD
                    $45 RESET ERROR, ENABLE XMIT & RECV
EN PORT
             EOU
                  $02 ENABLE RECV READY RUPT
$40 USER INTERRUPT 0 VECTOR
RUPTMASK
           EQU
          EQU
RUPTVECT
      68681 REGISTERS
* CRT
           <- PORT A:9600 BAUD, 8 DATA BITS,
                       NO PARITY, 1 STOP BIT
* DOWNLOAD <- PORT B:2400 BAUD, 8 DATA BITS,
                       NO PARITY, 2 STOP BITS
```

```
EQU $7F7000
                         BASE ADDRESS FOR MC68681
DUART
PORT1
        EQU DUART
                         PORT A
        EQU DUART+$10 PORT B
PORT2
         EQU 1
EQU 1
                         R/W:MODE REG 1 FOR PORT A
MR1A
                         R/W:MODE REG 2 FOR PORT A
MR2A
         EQU 3
SRA
                         R :STATUS REGISTER FOR PORT A
CSRA
         EQU 3
                            W:CLOCK SELECT REGISTER A
         EQU 5
EQU 7
                            W: COMMAND REGISTER FOR PORT A
CRA
RBA
                         R : RECEIVER BUFFER FOR PORT A
         EQU 7
                           W:TRANSMITTER BUFFER FOR PORT A
TBA
         EQU 9
IPCR
                         R :INPUT PORT CHANGE REGISTER
         EQU 9
EQU $B
EQU $B
EQU $D
                            W:AUXILIARY CONTROL REGISTER
ACR
ISR
                         R :INTERRUPT STATUS REG
                           W:INTERRUPT MASK REGISTER
IMR
CUR
                        R : COUNTER MODE: CURRENT CNTR MSB
        EQU $D
EQU $F
EQU $F
EQU $11
EQU $11
EQU $13
EQU $13
CTUR
                          W:COUNTER/TIMER UPPER REGISTER
                         R : COUNTER MODE: CURRENT CNTR LSB
CLR
CTLR
                           W:COUNTER/TIMER LOWER REGISTER
                      R/W:MODE REG 1 FOR PORT B
R/W:MODE REG 2 FOR PORT B
MR1B
MR2B
                         R :STATUS REGISTER FOR PORT B
SRB
CSRB
                           W:CLOCK SELECT REGISTER B
         EQU $15
                           W: COMMAND REGISTER FOR PORT B
CRB
         EQU $17
RBB
                         R : RECEIVER BUFFER FOR PORT B
         EQU $17
EQU $19
EQU $1B
TBB
                           W:TRANSMITTER BUFFER FOR PORT B
IVR
                         R/W:INTERRUPT VECTOR REGISTER
                           W:OUTPUT PORT CONFIGURATION REG
OPCR
          CODE
       LEA DUART, A4
CLR.W MONSTAT
INIT: LEA
                                 A4 <-- PTR TO DUART
                                 CLR MONITOR STATUS WORD
       MOVE.B #MR1RESET, CRA(A4) RESET PORT A MR1 PTR,
                                     DISABLE XMIT & RECV
       MOVE.B #MR1RESET, CRB (A4) RESET PORT B MR1 PTR,
                                     DISABLE XMIT & RECV
       MOVE.B #CLK_SRC, ACR(A4) CNTK/TMR CLK FROM CRYSTAL/16
       MOVE.B #CONF 1AB, MR1A(A4) PORT A:8 DATA BITS & NO
                                     PARITY
       MOVE.B #CONF 2A, MR2A(A4) PORT A: 1 STOP BIT
       MOVE.B #BAUD9600, CSRA(A4) PORT A: 9600 BAUD
       MOVE.B #CONF 1AB, MR1B(A4) PORT B:8 DATA BITS & NO
                                     PARITY
       MOVE.B #CONF 2B, MR2B(A4) PORT B: 2 STOP BITS
       MOVE.B \#BAUD\overline{2}400, CSRB(A4) PORT B: 2400 BAUD
       MOVE.B #RUPTVECT, IVR (A4) SET DUART INTERRUPT SERVICE
                                     AT USER INTERRUPT 0
       MOVE.B #EN PORT, CRA(A4) RESET ERRS & ENABLE
                                  XMIT/RCV
       MOVE.B #EN PORT, CRB(A4) RESET ERRS & ENABLE
                                 XMIT/RCV
       MOVE.B #RUPTMASK, IMR (A4) RUPT WHEN PORT A RCVS CHAR
```

BS BS LE	EA MON SR MES SR SCR EA PRO SR MES	MPT,A5 SAGE	SET MESS CRT<68 MOVE CUI SET UP I SEND PRO	RSOR TO NEXT LINE SAGE POINTER TO MONMSG B010 MONITOR V1.3 RSOR TO NEXT LINE FOR A PROMPT TO THE CRT DMPT TO CRT R AN INTERRUPT
MONITOR:	MOVEM.L LEA MOVEM.L BSR BCLR.B BEQ BCLR.B BSR LEA	#STRINGEND, RESTORE #STRING, MOI CMD_DECODE	7,-(SP) 5/D0-D7 MONSTAT	SET MONITOR STATE PTR GET LAST MONITOR STATE ENTER MONITOR CHECK FOR END OF STRING NOT THE END, SO EXIT CLEAR NEW STRING FLAG
RESTORE:		A0-A5/D0-D7 (SP)+,A0-A7	•	

```
*****************
* THIS PROGRAM OUTPUTS MESSAGES TO THE CRT SCREEN.
*******************
* WRITTEN BY DR. LARRY ABBOTT
*****************
* FILENAME: MESSAGE.ASM
******************
* VERSION 1.3
* REV. MODIFIED BY
                    DATE
                              DESCRIPTION
      DAVID M. SENDEK 29 SEPT 87 -INCLUDE A MONITOR PROMPT*
                              -INCLUDE BUFFER FULL
                                      CONDITION
*****************
       DEFINING MODULES OF EXTERNALLY DECLARED VARIABLES:
       ECH01
             - CONSOLE.ASM
*******************
    GLOBAL
                  BKPTMSG, EPROMSG, ERRMSG, HEXMSG, ILLMSG
    GLOBAL
                  MONMSG, REGERR, REGMSG, SREC_ERR, USEMSG
    GLOBAL
                  MESSAGE, PROMPT, BUFFULLMSG, SPCE
    EXTERNAL
                            ASCII CODE FOR RETURN
CR
                 $0D
          EQU
LF
          EQU
                 $0A
                            ASCII CODE FOR LINEFEED
NULL
          EQU
                 $00
                            ASCII CODE FOR NUL
MESSAGE: MOVE. B (A5) + D0
                      ; GET MESSAGE CHAR,
                           INCREMENT POINTER
       BEO.S MSGRET
                      IF CHAR = NULL THEN EXIT
                       ;OUTPUT CHAR TO CONSOLE
       BSR
             ECH01
       BRA.S MESSAGE
                      ;GET ANOTHER CHARACTER
MSGRET: RTS
BKPTMSG: BYTE
               'BREAKPOINT TRAP AT '
       BYTE
               NULL
ERRMSG:
       BYTE
               'ERROR RE-ENTER', CR, LF
       BYTE
EPROMSG: BYTE
               'ATTEMPTED WRITE TO EPROM', CR, LF
       BYTE
               NULL
HEXMSG:
       BYTE
               'HEX CONVERSION ERROR...RE-ENTER', CR, LF
       BYTE
               NULL
               'ILLEGAL INSTRUCTION TRAP', CR, LF
ILLMSG:
       BYTE
       BYTE
               NULL
MONMSG:
               '68010 MONITOR V1.3', CR, LF
       BYTE
               'WRITTEN BY DR. LARRY ABBOTT', CR, LF
       BYTE
               '@ COPYRIGHT 1986', CR, LF
       BYTE
       BYTE
               NULL
REGERR:
               'REGISTER CONTENTS ERROR RE-ENTER', CR, LF
       BYTE
       BYTE
               NULL
```

```
BYTE
                    'D0=', NULL,' D1=', NULL,' D2=', NULL,' D3=',
REGMSG:
                    NULL, CR, LF
                    'D4=', NULL,' D5=', NULL,' D6=', NULL,' D7=',
          BYTE
                    NULL, CR, LF
                    'A0=', NULL,' A1=', NULL,' A2=', NULL,' A3=',
          BYTE
                    NULL, CR, LF
          BYTE
                    'A4=', NULL,' A5=', NULL,' A6=', NULL,' A7=',
                    CR, LF
                    'SR=', NULL,' PC=', NULL,' (PC) =', NULL, CR, LF
'US=', NULL,' SS=', NULL, CR, LF
          BYTE
          BYTE
          BYTE
                    NULL
                    'S RECORD ERROR MESSAGE', LF, CR
SREC ERR: BYTE
           BYTE
                    NULL
                    'UNUSED EXCEPTION ENCOUNTERED', LF, CR
USEMSG:
           BYTE
           BYTE
                    'WITH FORMAT WORD = '
           BYTE
                    NULL
                    '>'
PROMPT:
           BYTE
           BYTE
                    NULL
                    , ,
SPCE:
           BYTE
           BYTE
                    NULL
                    LF, CR, 'INPUT BUFFER IS FULL, TRY AGAIN.', LF, CR
BUFFULLMSG: BYTE
             BYTE
                    NULL
           END
```

```
*************
* THIS MODULE INPUTS FROM THE KEYBOARD AND DOWNLOAD PORT,
* AND IT OUTPUTS CHARACTERS TO THE CRT.
****************
* NEW CONSOLE WRITTEN DEC. 19, 1986 BY DR. LARRY ABBOTT
******************
* FILENAME: CONSOLE.ASM
****************
* VERSION 1.3
                                 DESCRIPTION
* REV. MODIFIED BY
                      DATE
  Α
     LARRY ABBOTT
                      6/6/87
                              ADAPT TO 68681
     DAVID M. SENDEK 30 SEPT 87 DOCUMENTATION UPGRADE
******************
      DEFINING MODULES OF EXTERNALLY DECLARED VARIABLES:
      ESCAPE - MAIN.ASM
      MONSTAT - MAIN.ASM
     PORT1
            - MAIN.ASM
             - MAIN.ASM
      PORT2
      RECFULL - MAIN.ASM
      RBA, RBB - MAIN. ASM
      SRA, SRB - MAIN. ASM
      TBA, TBB - MAIN.ASM
**************
        GLOBAL
                     ECHO1, ECHO2
        GLOBAL
                     GETCHAR1, GETCHR2
        GLOBAL
                     SCANCHR2
                     ESCAPE, MONSTAT, PORT1, PORT2
        EXTERNAL
        EXTERNAL
                     RECFULL, RBA, SRA, TBA, TBB, SRB
        EXTERNAL
                    XEMPTY, RBB
ESC
       EQU
              $1B
                            ASCII CODE FOR ESCAPE
                           POINT TO RS 232 PORT 1
GETCHAR1: LEA
             PORT1,A4
        BTST.B #RECFULL, SRA (A4) CONSOLE CHAR READY ?
        BEO
            GETCHAR1
                             - NO, CHECK AGAIN
                             - YES, GET CHAR
        MOVE.B RBA(A4),D0
        RTS
GETCHAR2: LEA
                            POINT TO RS-232 PORT 2
              PORT2,A4
        BTST.B #RECFULL, SRB (A4) CONSOLE CHAR READY ?
            GETCHAR2
                            - NO, CHECK AGAIN
                             - YES, GET CHAR
        MOVE.B RBB(A4),D0
        RTS
     SCANCHAR GETS A CHARACTER FROM A PORT IF IT IS THERE
     OTHERWISE, SCANCHAR RETURNS TO THE CALLING ROUTINE
                            POINTS TO RS-232 PORT 1
SCANCHR1
        LEA
              PORT1,A4
        BTST.B #RECFULL, SRA (A4) DOES PORT 1 HAVE A CHAR?
        BEQ.S SCAN1 EX
                            - NO, EXIT
                            - YES, GET CHAR
        MOVE.B RBA (A4), D0
SCAN1 EX RTS
```

SCANCHR2	BTST.B	#RECFULL, SRB (A4)	POINTS TO RS-232 PORT 2 DOES PORT 2 HAVE A CHAR? - NO, EXIT - YES, GET CHAR
SCAN2_EX	RTS		
* HALTED	BY SEND	ING AN ESC CHARAC	OM PORT 2, THIS PROCESS CAN BE TER FROM THE KEYBOARD TO PORT 1
GETCHR2	BSR CMP.B BEQ BSR BRA.S	SCANCHR1 #ESC,D0 GC2_EXIT GETCHAR2 EXIT GC2	GET CHAR FROM PORT 1, IF PRESENT IS THE CHAR AN ESCAPE ? - YES, SO EXIT - NO, GET DOWNLOAD CHAR
GC2_EXIT EXIT_GC2 *	BSET.B RTS	#ESCAPE, MONSTAT	IF ESC CHAR, SET MONSTAT BIT
ECHO2	BTST.B	#XEMPTY SRB(A4)	POINTS TO RS-232 PORT 2 IS CONSOLE XMIT RDY ? - NO, CHECK AGAIN - YES, OUTPUT CHAR TO PORT 1
	BTST.B	#XEMPTY, SRA(A4)	POINTS TO RS-232 PORT 1 IS CONSOLE XMIT RDY ? - NO, CHECK AGAIN - YES, OUTPUT CHAR TO PORT 1
*	END		

```
********************
*THIS PROGRAM BUILDS THE CMD STRING INPUT FROM THE KEYBOARD.*
****************
* WRITTEN BY DR. LARRY ABBOTT
********************
* FILENAME: GETSTRIN.ASM
*******************
* VERSION 1.3
* REV. MODIFIED BY
                              DESCRIPTION
                    DATE
     DAVID M. SENDEK 2 OCT 87 DOCUMENTATION UPGRADE
**********************
* DEFINING MODULES OF EXTERNALLY DECLARED VARIABLES:
            - MAIN.ASM
   BS
                             MESSAGE - MESSAGE.ASM
   BUFFIN
                             SPCE
                                     - MESSAGE.ASM
            - MAIN.ASM
  CR
            - MAIN.ASM
  CMD DECODE - DECODER.ASM
  ECHO1
            - CONSOLE.ASM
            - CONSOLE.ASM
  GETCHAR1
  MONSTAT
           - MAIN.ASM
  STRING
            - MAIN.ASM
  STRINGEND - MAIN.ASM
  BUFFULLMSG - MESSAGE.ASM
*******************
        GLOBAL
               GETSTRING
        EXTERNAL BS, BUFFIN, CR, CMD DECODE, ECHO1, GETCHAR1
        EXTERNAL MONSTAT, STRING, STRINGEND
        EXTERNAL BUFFULLMSG, SPCE
        EXTERNAL MESSAGE
GETSTRING:BSET.B #STRING, MONSTAT
                             IS THIS A NEW STRING ?
        BNE
            BUILD
                              - NO, SKIP PTR INIT
        BCLR.B #STRINGEND, MONSTAT - YES, CLR STRG END BIT
        LEA
            BUFFIN+1,A0
                             - YES, INIT STRING PTR
BUILD:
        BSR
                                    DO <- CHR FROM CRT
              GETCHAR1
              IS CHAR A CR ?

ADD STRING

#STRING
        CMP.B
        BNE
                             - NO, ADD CHAR TO STRG
        BSET.B #STRINGEND, MONSTAT - YES, SET STRG END BIT
                             - YES, DO <-- CURRENT
        MOVE.W A0, D0
                                         BUFFIN PTR
                             - YES, CALC BUFFIN LEN
        SUB.W #BUFFIN+1,D0
                             - YES, BUFFIN(0)<-
        MOVE.B DO, BUFFIN
                                    BUFFIN LENGTH
              STRING EXIT
                             - YES, EXIT
        BRA
                            ECHO CHAR TO CRT
ADD STRING: BSR
             ECHO1
              CONCAT
                             ADD CHAR TO END OF STRG
STRING EXIT:RTS
```

CONCAT CONCATENATES THE CHAR ONTO THE END OF THE STRING CMP.B #BS,D0 IS INPUT CHAR A BACKSPACE? CONCAT: BEO BKSPACE - YES, GOT BACKSPACE CMPA.L BUFFIN+63,A0 IS BUFFIN FULL ? BNE ADD TO STRING - NO, ADD BYTE TO STRING BUFFULLMSG, A5 - YES, SET UP POINTER LEA FOR MESSAGE - YES, SEND MSG TO CRT BSR MESSAGE - YES, NOW EXIT CONCAT_EXIT BRA ADD_TO_STRING:MOVE.B D0, (A0) + ADD BYTE TO STRING BRA CONCAT EXIT CMPA.L BUFFIN, A0 IS BUFFIN PTR POINTING TO BKSPACE: 1st BYTE ? - YES, EXIT CONCAT EXIT BEQ SUBQ.W #1,A0 - NO, BACKUP BUFFIN PNTR SPCE, A5 LEA BSR MESSAGE CONCAT EXIT:RTS

END

```
***********
* GET ADDRESS CONVERTS THE START AND END ADDRESS TO HEX.
****************
* WRITTEN BY DR. LARRY ABBOTT
***********
* FILENAME: GET ADDR.ASM
*************
VERSION 1.3
 REV.
       MODIFIED BY
                      DATE
                                 DESCRIPTION
       DAVID M. SENDEK 30 SEPT 87 DOCUMENTATION UPGRADE*
*****************
 DEFINING MODULES OF EXTERNALLY DECLARED VARIABLES:
   BUFFIN
          - MAIN.ASM
   END ADDRESS - MAIN.ASM
   HEX CONV
           - HEXCONV.ASM
             - MAIN.ASM
   HEX ERR
   MONSTAT
             - MAIN.ASM
   HEXMSG
             - MESSAGE.ASM
   MESSAGE
             - MESSAGE.ASM
************
        GLOBAL
                 GET ADDR
        EXTERNAL
                 BUFFIN, END ADDRESS, HEX CONV, HEX ERR
        EXTERNAL
                 MONSTAT, HEXMSG, MESSAGE
GET ADDR:
                             CLEAR HEX BUFFER
         CLR.L D2
               0,A2
                             CLEAR START ADDRESS
         LEA
         LEA
               0,A3
                             CLEAR END ADDRESS
               D3
         CLR
         MOVE.B BUFFIN, D3
                             D3 <-- BUFFIN LENGTH
               EXIT
                             EXIT IF NULL CMD STRING
         BLE
                             ADJUST FOR DBCC INST
         SUBQ.W #1,D3
START ADDR: MOVE.B (A0)+,D0
                             D0 \leftarrow BUFFIN(I) &
                                   I < -I + 1
         CMP.B #',',D0
                             IS CHAR IN DO A COMMA ?
                             - YES, INDICATE END OF
         BEQ
               STORE START
                                    START ADDRESS
                             CONVERT 1 CHAR OF START
         BSR
               HEX CONV
                                    ADDR TO HEX
         BTST.B #HEX_ERR, MONSTAT WAS THERE AN HEX
                                 CONVERSION ERROR ?
         BNE
               ADDR ERR
                              - YES, EXIT ROUTINE
         DBF
               D3, START ADDR
                             IF MORE CHARACTERS CONT
STORE START: SUBQ.W #1,D3
                             ADJUST LENGTH FOR COMMA
                             STORE START ADDRESS IN A2
          MOVE.L D2,A2
          CLR.L D2
                             CLEAR HEX BUFFER
     D3 CONTAINS THE LENGTH OF THE REMAINING COMMAND LINE
          TST.W D3
                           IS BUFFIN LENGTH < 0 ?
               ADDREXIT
                           - YES, EXIT WITH END. ADDR=0
          BMI
```

END ADDR:MOVE.B	(A0) + , D0	DO < BUFFIN(I, & I <- I+1
BSR	HEX_CONV	CONVERT 1 CHAR OF END
*		ADDR TO HEX
BTST.B	#HEX_ERR, MONSTAT	WAS THERE AN HEX
*	_	CONVERSION ERROR ?
BNE	ADDR ERR	- YES, EXIT ROUTINE
DBF	D3,END ADDR	IF MORE CHARS CONTINUE
MOVE.L	D2,A3 -	ELSE STR END ADDR IN A3
ADDREXIT MOVE.L	A3, END ADDRESS	SAV END ADR IN MEM
BRA	EXIT -	
ADDR ERR LEA	HEXMSG, A5	
- BSR	MESSAGE	
EXIT RTS		
END		

```
* THIS PROGRAM CONTAINS A GROUP OF CONSOLE UTILITIES.
*****************
* WRITTEN BY LARRY ABBOTT JAN. 1986
*****************
* FILENAME: IO UTIL.ASM
******************
* VERSION 1.3
* REV. MODIFIED BY DATE
                            DESCRIPTION
      DAVID M. SENDEK 30 SEPT 87 -DOCUMENTATION UPGRADE *
                             -CORRECT FOR 68681
******************
* DEFINING MODULES OF EXTERNALLY DECLARED VARIABLES:
           - MAIN.ASM
                          PORT1 - MAIN.ASM
           - MAIN.ASM
   CR
   ECH01
           - CONSOLE, ASM
   ESC
           - CONSOLE ASM
           - MAIN.ASM
   FWDARW
   GETCHAR1 - CONSOLE.ASM
   LF
           - MAIN.ASM
   RECFULL - MAIN.ASM
   SRA
          - MAIN.ASM
   SPACE - MAIN.ASM
GLOBAL
                BACKSPACES, SCROLL, SCRLF, SPACES
        EXTERNAL BS, CR, ECHO1, ESC, FWDARW, GETCHAR1, LF
        EXTERNAL RECFULL, SPACE
        EXTERNAL SRA, PORT1
    BACKSPACES MOVES THE CURSOR ON THE CRT TO THE LEFT
            N TIMES
BACKSPACES:SUBQ.W #1,D2
                       ADJ INDEX FOR THE # OF BK SP
        MOVE.B #BS,D0
                       DO <- ASCII CODE FOR BACKSPACE
BK SPACE:
        BSR
              ECHO1
                       OUTPUT BACKSPACE TO CONSOLE
        DBF
              D2, BK SPACE IF MORE BCKSP LOOP TO BK SPACE
        RTS
    SCRLF SEND A CARRIAGE RETURN AND A LINEFEED
        TO THE CONSOLE
SCRLF: MOVE.B #CR, DO
                    DO <-- ASCII CODE FOR CR
           ECH01
                    OUTPUT CR TO CONSOLE
     BSR
     MOVE.B #LF, DO
                    DO <-- ASCII CODE FOR LF
                    OUTPUT LF TO CONSOLE
     BSR
           ECH01
     RTS
```

SPACES MOVE THE CURSOR ON THE CRT TO THE RIGHT N TIMES SPACES: SUBQ.W #1,D2 ADJUST INDEX FOR THE # OF SP SPACE_LOOP:MOVE.B #SPACE,D0 ASCII CODE FOR ' 'OUTPUT SPACE TO CONSOLE DBF D2, SPACE LOOP IF MORE SPACES LOOP TO SPACE RTS SCROLL ALLOWS THE SCREEN SCROLL TO BE ABORTED BY AN ESC OR STOPPED AND STARTED BY ANY OTHER KEY SCROLL: LEA PORT1, A4 BTST.B #RECFULL, SRA (A4) GET CONSOLE STATUS BEQ.S SCROLL_EXIT IF NO CHAR FROM CONSOLE, EXIT BSR GETCHAR1 ELSE GET CHAR
CMP.B #ESC,DO IS THE CHAR AN CMP.B #ESC,D0 IS THE CHAR AN ESC? BEQ.S SCROLL_EXI - YES, ABORT PAUSE CHK:LEA PORT1,A4 BTST.B #RECFULL, SRA (A4) GET CONSOLE STATUS BEQ.S PAUSE_CHK IF NO NEW KEY STROKE, WAIT BSR GETCHAR1 ELSE GET CHAR SCROLL EXIT:RTS END

```
* THIS PROGRAM DECODES COMMANDS FROM THE COMMAND LINE.
*******************
* 68K MONITOR VERSION 1.3
* WRITTEN BY DR. LARRY ABBOTT NOV. 7, 1986
* FILENAME: DECODER.ASM
*****************
* VERSION 1.3
* REV. MODIFIED BY DATE
                            DESCRIPTION
      DAVID M. SENDEK 1 OCT 87 DOCUMENTATION UPGRADE
*********************
* DEFINING MODULES OF EXTERNALLY DECLARED VARIABLES:
                         BKPT LIST - STUB.ASM
  BUFFIN - MAIN.ASM
          - MESSAGE.ASM
                                    - DOWNLOAD.ASM
 ERRMSG
                         DOWNLOAD
  FOUND
         - MAIN.ASM
                         GO
                                    - GO.ASM
                        MEM DISPLAY - MEM LIST.ASM
 MESSAGE - MESSAGE.ASM
                        MEM MODIFY - MEM LIST.ASM
 MONSTAT - MAIN.ASM
         - MAIN.ASM
                        NO_BKPT - STUB.ASM
 NULL
  SPACE
         - MAIN.ASM
                         REG
                                   - REG.ASM
                        REGCHANG ·· REGCHANG.ASM
         - IO UTIL.ASM
 SCRLF
 BKPT - GO.ASM
******************
  COMMAND FORMATS:
         LEGEND :
                 < .. > - OPTIONAL
                 { .. } - SELECT ONE ITEM
                    xx - NUMBER 0 -> 15
          NOTE : ALL ADDRESSES AND VALUES IN HEX
                            (NOT IMPLEMENTED)
 BREAK POINT
                - BR
  NO BREAKPOINT
               - NOBR
                            (NOT IMPLEMENTED)
  DOWNLOAD
                - LOAD
                - GO address <,break point address>
  GO
 MEMORY MODIFY - MM start address <,end address>
 MEMORY DISPLAY - MD start address <,end address>
  REGISTER CHANGE - RCH { Axx, Dxx, PC, US, SP, SR} value
* DISPLAY REGISTERS- REG
              CMD DECODE
    GLOBAL
    EXTERNAL
             BUFFIN, ERRMSG, FOUND, MESSAGE, MONSTAT, NULL
              SPACE, SCRLF
    EXTERNAL
    EXTERNAL
              BKPT, BKPT LIST, DOWNLOAD, GO
    EXTERNAL
              MEM DISPLAY, MEM MODIFY, NO BKPT, REG, REGCHANG
CMD DECODE: LEA COMMANDS, A1
                            INITIALIZE COMMAND POINTER
          BCLR #FOUND, MONSTAT
                            INITIALIZE BUFFIN POINTER
DECODE INIT:LEA
              BUFFIN+1,A0
         MOVE.L #3,D1
                            INIT INDEX FOR 4 CHARS
```

```
SCAN:
           MOVE.B (A1)+,D0 GET COMMAND.TABLE(I)
                                      & I<--I+1
                                 IS CHARACTER A SPACE ?
            CMP.B
                  #SPACE, D0
                                  - YES, FOUND COMMAND
                   FOUND CMD
            BEQ
                                  IS CHARACTER A NULL ?
            CMP.B #NULL,D0
            BEQ
                   NO CMD
                                  - YES, EXHAUSTED COM TABLE
            CMP.B
                  (A0) + D0
                                  IS BUFFIN = COMMAND. TABLE ?
                                 - YES & MORE CHAR, CONT
            DBNE
                   D1, SCAN
            BNE
                  ADDR FIELD
                                  - NO, ADJUST ADDR FOR NEXT
                                         COMMAND
FOUND CMD: BSET
                  #FOUND, MONSTAT SET COMMAND FND STATUS BIT
           CMPI.W #0,D1
                                 IS COMMAND A 4 CHAR COM?
           BMI
                  CMD FOUND
                                   - YES, SKIP "JUMP ADDRESS"
                                         ADJUST
                                  ADJUST INDEX FOR NEXT COM
ADDR_FIELD: ADDQ.L #2,D1
                                  ADD INDEX TO COMMAND PNTR
            ADD.L D1,A1
                   #FOUND, MONSTAT CLEAR COM FOUND STATUS BIT
            BCLR
                   DECODE INIT CHECK NEXT CMD
            BEO
            SUB.L #5,D1
            ADD.B D1, BUFFIN
                                ADJUST BUFFIN LENGTH
            SUBQ.L #2,A1
                                 ADJUST ADDRESS FOR JUMP
                                GET JUMP ADDRESS
            MOVE.W (A1),A1
CMD FOUND:
                                  JUMP TO COMMAND
            JSR
                   (A1)
                                EXIT DECODER
            BRA
                   DECODEXT
NO CMD:
            BSR
                   SCRLF
           MOVE.W #ERRMSG,A5 SET MESSAGE POINTER
BSR MESSAGE PRINT ERROR MESSAGE TO CRT
            RTS
DECODEXT:
          EVEN ON
                        'BR '
COMMANDS:
               BYTE
               WORD
                        BKPT LIST
                        'LOAD'
               BYTE
                        DOWNLOAD
               WORD
                        'GO '
               BYTE
               WORD
                        GO
                            ,
               BYTE
                        ' MD
               WORD
                        MEM DISPLAY
                       ' MM '
               BYTE
                        MEM MODIFY
               WORD
               BYTE
                        'NOBR'
                        NO BKPT
               WORD
               BYTE
                        'RCH'
               WORD
                        REGCHANG
                        'REG'
               BYTE
               WORD
                        REG
               BYTE
                        NULL, NULL, NULL, NULL
                  OFF
          EVEN
          END
```

**************** * THIS PROGRAM CONVERTS A BYTE INTO 2 ASCII CHARACTERS AND * IT SENDS THE CHARACTERS TO THE CRT DISPLAY. ******************* * WRITTEN BY DR. LARRY ABBOTT ******************* * FILENAME: BYTEOUT.ASM ****************** * VERSION 1.3 * REV. MODIFIED BY DATE DESCRIPTION * A DAVID M. SENDEK 1 OCT 87 DOCUMENTATION UPGRADE ********************* * DEFINING MODULES OF EXTERNALLY DECLARED VARIABLES ECHO1 - CONSOLE.ASM ******************* OUTPUT BYTE GLOBAL EXTERNAL ECHO1 OUTPUT BYTE: MOVE. B D0, D2 MAKE A TEMPORARY COPY OF BYTE SHIFT M.S. NIBBLE TO L.S. NIBBLE LSR.B #4,D0 ASCONV CONVERT M.S. NIBBLE TO ASCII MOVE.B D2,D0 D0 <-- TEMPORARY COPY OF BYTE ANDI.B #\$0F,D0 MASK OFF M.S. NIBBLE ASCONV CONVERT L.S. NIBBLE TO ASCII RTS ADDI.B #\$30,D0 ADD ASCII BASE ASCONV: CMP.B #\$3A,D0 IS NUMBER 0-9 ? BLT ASCOUT - YES, OUTPUT TO CONSOLE ADDQ.B #7,D0 ADJUST FOR A - F (HEX) ECHO1 OUTPUT TO CONSOLE ASCOUT: BSR RTS

END

```
************
* THIS PROGRAM MODIFIES OR LISTS THE CONTENTS OF THE
* SPECIFIED MEMORY LOCATIONS.
****************
WRITTEN BY DR. LARRY ABBOTT
* FILENAME: MEM LIST.ASM
****************
* VERSION 1.3
* REV. MODIFIED BY DATE
                           DESCRIPTION
      DAVID M. SENDEK 1 OCT 87 DOCUMENTATION UPGRADE
**********************
* DEFINING MODULES OF EXTERNALLY DECLARED VARIABLES:
           MAIN.ASM
                            MONSTAT
                                     - MAIN.ASM
 BUFFIN
                            OUTPUT_BYTE - BYTEOUT.ASM *
  BACKSPACES -
              IO UTIL.ASM
 END ADDRESS - MAIN.ASM
                           SCRLF - IO UTIL.ASM *
                                     - IO UTIL/ASM *
 ESC

    MAIN.ASM

                            SCROLL
                                     - MAĪN.ASM
 GET ADDR
            - GET ADDR.ASM
                            SPACE

    GETSTRIN.ASM

                            SPACES
                                     - IO UTIL.ASM *
 GETSTRING
 HEX CONV
            - HEXCONV.ASM
                           STRINGEND - MAIN.ASM
 HEX ERR
            - MAIN.ASM
                            STRING
                                     - MAIN.ASM
  MODIFY
            - MAIN.ASM
*****************
    GLOBAL MEM DISPLAY, MEM MODIFY
    EXTERNAL BUFFIN, BACKSPACES, END ADDRESS, ESC
    EXTERNAL GET ADDR, GETSTRING, HEX CONV, HEX ERR, MODIFY
    EXTERNAL MONSTAT, OUTPUT BYTE, SCRLF, SCROLL, SPACE, SPACES
    EXTERNAL STRINGEND, STRING
MEM MODIFY:BSET.B
              #MODIFY, MONSTAT
                                SET MODIFY FLAG
               MEM DISPLAY
                                DISPLAY MEMORY
         BSR
         BCLR.B #MODIFY, MONSTAT
                               CLEAR MODIFY FLAG
         RTS
     THIS PROGRAM LIST THE CONTENTS OF THE SPECIFIED
MEM DISPLAY: CMPI.B #SPACE, (A0)
                             DOES BUFFIN(I)
                                CHAR = SPACE?
                                - NO, GET START & END
          BNE
               START ADDR
                                     ADDRESS
         ADDQ.W #1,A0
                                - YES, SO I <-- I+1
                             DECREMENT BUFFIN LENGTH
          SUBQ.B #1,BUFFIN
         BRA
               MEM DISPLAY
                             CONT SCANNING BUFFIN
              GET ADDR
                             CONVERT ADDRS TO HEX
START ADDR: BSR
         BCLR.B #HEX ERR, MONSTAT WAS THERE AN HEX ERROR ?
             MD_EXIT
          BNE
                              - YES, SO EXIT
         BSR
               SCRLF
                             MOVE CURSOR TO NEXT LINE
NEWLINE:
         BSR
               LINE NUMBER
                             DISPLAY LINE ADDRESS
```

GETABYTE:	BSR	OUTPUT BYTE	DO < (START ADDRESS) OUTPUT BYTE TO CRT IS MEMORY MODIFY STATUS BIT SET ?
WORD_SPACE:	BCLR.B BNE MOVE.W BSR MOVE.L SUB.L BLT	MD_EXIT #2,D2 SPACES END_ADDRESS,D1 A2,D0 D0,D1 MD_EXIT	- NO, SKIP CHANGE - YES, MODIFY MEMORY CLR HEX STATUS BIT ERROR IF ERROR EXIT SETUP FOR 2 SPACES OUTPUT 2 SPACES TO CRT
*			
LINE_NUMBER	ROR.L BSR ROR.L BSR ROR.L	#8,D0 MOOUTPUT_BYTE DI #8,D0 MOOUTPUT_BYTE DI #8,D0 MOOUTPUT_BYTE DI #8,D0 MOOUTPUT_BYTE DI #4,D2 SE	T CURRENT ADDRESS VE M.S. BYTE TO L.S. BYTE SPLAY BYTE ON CRT VE M.S. BYTE TO L.S. BYTE SPLAY BYTE ON CRT VE M.S. BYTE TO L.S. BYTE SPLAY BYTE ON CRT VE M.S. BYTE TO L.S. BYTE SPLAY BYTE ON CRT TUP FOR 4 SPACES TPUT 4 SPACES
CHGAGIN: B. MORE_CHAR:B. B. MM B. * CI B.	OVE.W #2 CLR.B #5 SR GI CLR.B #5 EQ MO OVE.B BU EQ NO MPI.B #2 NE CI SR GI TST.B #1	STRING, MONSTAT ACKSPACES ETSTRING STRINGEND, MONSTAT DRE_CHAR UFFIN, D3 D_ENTRY 2, D3 HGAGIN ET_DATA HEX_ERR, MONSTAT HG_EXIT 2, - (A2)	SETUP FOR 2 BCKSPCES SET FOR NEW STRING MOVE 2 SP TO THE LEFT GET ANY NEW CHARACTERS CHECK FOR END OF STR IF MORE STRING, BRANCH GET STRING LENGTH IF STR LEN=0 THEN NO ENTRY DOES STRING LEN = 2 ? - NO, THEN RE-ENTER CONVERT BYTE TO HEX IS THERE A HEX ERROR ? - YES, EXIT BUFFIN(I) < HEX

NO_ENTRY: CLR.W D2

MOVE.B D3,D2

GET STRING LENGTH

D1 <- - (STRING_LENGTH)

ADDQ.W #4,D2

BSR SPACES

CHG_EXIT RTS

*

GET_DATA

CLR.L D2

CLR D4

MOVE.B BUFFIN,D4

SUBQ #1,D4

LEA BUFFIN+1,A0

DATALOOP

MOVE.B (A0)+,D0

BSR HEX_CONV

BTST.B #HEX_ERR,MONSTAT DBNE D4,DATALOOP

*

GET STRING LENGTH

D1 <- - (STRING_LENGTH)

ADJUST SPACE COUNT

SPACE TO END OF BYTE

CLEAR HEXBUF

CLR WORD FOR DBCC INDEX

GET BUFFIN LENGTH

ADJUST FOR DBCC INST

INITIALIZE BUFFING PNTR

CONV ASCII CHAR TO HEX

IS THERE A HEX ERR?

THEN LOOP AGAIN

DATAEXIT RTS END

```
*******************
* THIS PROGRAM CONVERTS THE CONTENTS OF D0<7..0> FROM
* ASCII TO HEX AND STORES THE RESULT IN REG D2.
*******************
* WRITTEN BY DR. LARRY ABBOTT
*******************
* FILENAME: HEXCONV.ASM
*******************
* VERSION 1.3
* REV. MODIFIED BY
                    DATE
                              DESCRIPTION
      DAVID M. SENDEK 1 OCT 87
                             DOCUMENTATION UPGRADE
******************
* DEFINING MODULES OF EXTERNALLY DECLARED VARIABLES:
   HEX ERR - MAIN.ASM
   MONSTAT - MAIN.ASM
******************
    GLOBAL
             HEX CONV
    EXTERNAL
            HEX ERR, MONSTAT
                             ADJUST ASCII TO
HEX CONV: SUB.B #$30,D0
                                   HEX BASE
                             IS CHARACTER <= 9 ?
         CMPI.B #9,D0
         BLS.S ZERO CHECK
                             - YES, CHECK >= 0
                            ADJUST FOR A-F
         SUB.B \#7,D\overline{0}
         CMPI.B #$A,D0
                            IS CHARACTER >= A ?
         BCS.S HEXERR
                             - NO, HEX ERROR
         CMPI.B #$F,D0
                            IS CHARACTER <= F ?
                             - NO, HEX ERROR
         BHI.S HEXERR
ZERO CHECK: CMPI.B #0,D0
                            IS CHARACTER >= 0 ?
         BMI.S HEXERR
                             - NO, HEX ERROR
              HEX SHIFT
                             HEX # INTO
         BSR
                                HEX BUFFER
         BCLR.B #HEX ERR, MONSTAT CLR HEX CONVERSION
                                ERROR STATUS BIT
         BRA.S HEX EXIT
                             EXIT HEX CONVERSION
         BSET.B #HEX ERR, MONSTAT SET HEX CONVERSION ERROR
HEXERR:
                                STATUS BIT
HEX EXIT:
         RTS
HEX SHIFT: LSL.B #4,D0
                       SHIFT L.S. NIBBLE TO M.S. NIBBLE
         MOVE.W #3,D1
                       SET FOR INDEX TO 4 SHIFTS
NIBBLE SHF:LSL.B #1,D0
                          SHIFT HEX CHARACTER OUT
                          SHIFT INTO HEX BUFFER
         ROXL.L #1,D2
              D1, NIBBLE SHF BRANCH IF MORE BITS
         DBF
         RTS
         END
```

```
*****************
* THE GO ROUTINE EXECUTES A PROGRAM FROM THE MONITOR.
 THE FORMAT IS:
     GO <start address>, [optional breakpoint]
**********************
      WRITTEN BY DR. LARRY ABBOTT
******************
      FILENAME: GO.ASM
****************
* VERSION 1.3
                              DESCRIPTION
* REV.
      MODIFIED BY
                      DATE
                      1 OCT 87 DOCUMENTATION UPGRADE
      DAVID M. SENDEK
       DAVID M. SENDEK 5 OCT 87
                              BSET, BCLR ASSEMBLY
                                   LANGUAGE CORRECTION *
*****************
  DEFINING MODULES OF EXTERNALLY DECLARED VARIABLES:
 BKPTAB
           - MAIN.ASM
                          ILLMSG
                                    - MESSAGE.ASM
 BKPTMSG
                          MESSAGE
                                     - MESSAGE.ASM
            - MESSAGE.ASM
 BTLEN
            - MAIN.ASM
                          MONSTAT
                                    - MAIN.ASM
 BUFFIN
            - MAIN.ASM
                          OUTPUT BYTE - BYTEOUT.ASM
 CONTINUE - MAIN.ASM
                                     - IO UTIL.ASM
                          SCRLF
  CMD DECODE - DECODER.ASM SPACE
                                     - MAIN.ASM
 GET ADDR - GET ADDR.ASM STRING
                                     - MAIN.ASM
* GETSTRING - GETSTRIN.ASM STRINGEND
                                     - MAIN.ASM
            - MAIN.ASM
                                     - MAIN.ASM
* HEX ERR
                          SYSTAX
*****<del>*</del>****************************
    GLOBAL
             BKPT, GO
    EXTERNAL BKPTAB, BKPTMSG, BTLEN, BUFFIN, CONTINUE
    EXTERNAL GET ADDR, GETSTRING, HEX ERR, ILLMSG, MESSAGE
    EXTERNAL OUTPUT BYTE, SCRLF, SPACE, STRING, STRINGEND
    EXTERNAL MONSTAT, SYSTAX, CMD DECODE
TRAP0
      EQU
              $4E40
                            OP CODE FOR TRAP #0
                            IS BUFFIN(X) A SPACE ?
GO
       CMPI.B #SPACE, (A0)+
                             - NO, GET GO ADDRESS
       BNE
              GO ADDR
                             - YES, ADJUST BUFFIN LENGTH
       SUBO.B
              #1,BUFFIN
                             - YES, SCAN FOR NEXT SPACE
       BRA
              GO
                            ADJUST FOR POST INCREMENT
GO ADDR SUBQ
              #1,A0
              GET ADDR
                            A2<-GO ADDR, A3<-BREAKPOINT
       BSR
              \#0,\overline{A}2
                            IS THERE A START ADDRESS ?
       CMPA
                            - NO, THIS IS A CONTINUATION
       BEQ
              CONTINU
       BCLR.B
             #4, MONSTAT
                            CHECK FOR HEXCONV ERROR
              GO EXIT
                            IF HEX ERROR THEN EXIT
       BNE
      MOVEA.L SYSTAX, AO
                               ELSE GET SYSTAX POINTER
      MOVE.L
              A2, (A0)
                            SYSTAX (PC) <-- GO ADDRESS
       CMPA
              #0,A3
                            IS THERE A BREAKPOINT ?
              GO EXIT
                            - NO, SO EXIT
       BEQ
       LEA
              BKPTAB, A0
                            SET BREAK TAB POINTER
      MOVEA.L A3, (A0)
                            STORE BREAKPOINT IN TABLE
      MOVE.W (A3), BTLEN(A0) STORE INSTRUCTION AT BKPT
```

```
MOVE.W #TRAPO, (A3) STORE ILL INSTRUCT AT BKPT
CONTINU:BSET.B #CONTINUE, MONSTAT SET CONTINUE FLAG
GO EXIT RTS
       THE BREAKPOINT (BKPT) ROUTINE RESTORES THE INSTRUCTION
       AT THE BREAKPOINT
         BCLR.B #CONTINUE, MONSTAT INIT CONTINUATION FLAG
BKPT:
                 BKPTAB, A0 SET BREAK TABLE POINTER
(A0), A3 GET BKPT ADDRESS
16(A0), (A3) RESTORE INSTRUCTION
BKPTMSG, A5 SET BREAKPOINT MESSAGE
         MOVE.L (A0), A3
         MOVE.W 16(A0), (A3)
LEA BKPTMSG, A5
BADINST BSR
                  MESSAGE
                                       PRINT MESSAGE
         MOVE.L A3, D0
                                       GET BKPT ADDRESS
                                       SET BYTE INDEX
         MOVE.W #3,D3
ADDROUT ROL.L #8,D0
                #8,D0 ROTATE DO BY 1 BYTE
OUTPUT BYTE CRT <-- DO<0..7>
D3,ADDROUT MORE ADDRESS THE LOOP
SCRLF MOV CURSOR TO STRT OF LINE
         BSR
         DBF
         MOVELL $2,2(SP)

MOVEL SP,SYSTAX

BSR GETSTRING

BCLP P #CTTTTT
         BSR SCRLF
EXAMINE BSR
         BCLR.B #STRINGEND, MONSTAT END OF STRING ?
                               - NO, SO LOOP
         BEQ EXAMINE
         BCLR.B #STRING, MONSTAT CLEAR NEW STRING FLAG
BSR CMD DECODE IF END THEN DECODE
         BCLR.B #CONTINUE, MONSTAT IS THIS A CONTINUATION ?
                               - YES, LOOP AGAIN
                  EXAMINE
         BEQ
         RTE
         END
```

**************** * THIS FILE CONTAINS PROGRAMMING STUBS TO COMPLETE THE * LINKING PROCESS WHILE BUILDING AND TESTING HIGHER * LEVEL MODULES. ************** * WRITTEN BY DR. LARRY ABBOTT ************ * FILENAME: STUB.ASM ***************** * VERSION 1.3 DATE * REV. MODIFIED BY DESCRIPTION A DAVID M. SENDEK 1 OCT 87 -DOCUMENTATION UPGRADE -INCORPORATE PROMPT MSG *************** * DEFINING MODULES OF EXTERNALLY DECLARED VARIABLES: PRCMPT - MESSAGE.ASM MESSAGE - MESSAGE.ASM *************

GLOBAL BKPT_LIST, NO_BKPT EXTERNAL PROMPT, MESSAGE

BKPT LIST:LEA PROMPT, A5

BSR MESSAGE

RTS

NO_BKPT: LEA PROMPT, A5

BSR MESSAGE

RTS END

מאוי

```
**************
* THIS ROUTINE PRINTS OUT THE CONTENTS OF THE REGISTERS.
* WRITTEN BY DR. LARRY ABBOTT
********************
* FILENAME: REG.ASM
*****************
* VERSION 1.3
* REV. MODIFIED BY
                 DATE
                         DESCRIPTION
* A DAVID M. SENDEK 1 OCT 87 DOCUMENTATION UPGRADE
* DEFINING MODULES OF EXTERNALLY DECLARED VARIABLES:
* MESSAGE - MESSAGE.ASM
                            SCRLF - IO UTIL.ASM*
* OUTPUT BYTE - BYTEOUT.ASM
                            SPACES - IO UTIL.ASM*
* REGMSG - MESSAGE.ASM
                            SYSTAX - MAIN.ASM *
```

GLOBAL REG
EXTERNAL MESSAGE, OUTPUT_BYTE, REGMSG
EXTERNAL SCRLF, SPACES, SYSTAX

REG	BSR	SCRLF	
	LEA	REGMSG, A5	GET POINTER TO MESSAGE
	MOVEA.L	SYSTAX, A2	GET STACK POINTER AT MONITOR
*			ENTRY
	SUB.L	#\$40,A2	OFFSET OF THE STACK
	MOVE.W	#15,D3	SET REGS CNTR FOR 16 REGS
REGLIST	BSR	MESSAGE	PRINT PART OF REGISTER MESSAGE
	MOVE.W	#3,D4	SET FOR 32-BIT REGISTER
	BSR	REG DUMP	PRINT CONTENTS OF A REGISTER
	DBF	D3, REGLIST	IF MORE REGS, THEN GO TO
*			REGLIST
		MESSAGE	PRINT "SR ="
			SET FOR 16-BIT REGISTER
			PR CONTENTS OF STAT REG (SR)
			SET FOR 4 SPACES
			PRINT 4 SPACES
	BSR	MESSAGE	PRINT "PC ="
	MOVE.W	#3,D4	SET FOR 32-BIT PC REGISTER
			PRINT CONTENTS OF PC REGISTER
	MOVE.W	#1,D2	SET FOR 1 SPACES
	BSR	SPACES	PRINT 1 SPACES
	BSR	MESSAGE	PRINT "(PC) ="
	SUBQ.L	#4,A2	
	MOVE.L	(A2),A2	
			SET FOR WORD POINTED TO BY PC
	BSR	REG_DUMP	PRINT CONTENTS OF WD PNTD BY PC
	BSR	SCRLF	FORMAT DISPLAY
	RTS		

*			
REG DUMP	MOVE.B	(A2) + D0	GET A BYTE OF THE REG
* -	-	• •	FROM APPLICATION PSW
	BSR	OUTPUT BYTE	OUTPUT BYTE TO CONSOLE
	DBF	D4, REG DUMP	IF MORE BYTES THEN REG DUMP
	RTS	· -	ELSE EXIT
	END		

```
*********************
* THIS ROUTINE CHANGES THE CONTENTS OF DESIRED REGISTERS.
***************
* WRITTEN BY DR. LARRY ABBOTT
* FILENAME: REGCHANG.ASM
***************
 VERSION 1.3
* REV. MODIFIED BY
                      DATE
                               DESCRIPTION
       DAVID M. SENDEK 1 OCT 87 DOCUMENTATION UPGRADE
****************
* DEFINING MODULES OF EXTERNALLY DECLARED VARIABLES:
* BUFFIN - MAIN.ASM
                                MONSTAT
                                        - MAIN.ASM
* GET ADDR - GET ADDR.ASM
                                REG
                                         - REG.ASM
                                REGERR
                                         - MESSAGE.ASM *
* HEX CONV - HEXCONV.ASM
                                SPACE
                                         - MAIN.ASM
* HEX ERR - MAIN.ASM
                                         - MAIN.ASM
                                SYSTAX
* MESSAGE - MESSAGE.ASM
                                         - IO UTIL.ASM *
                                SCRLF
*****************
    GLOBAL
            REGCHANG
    EXTERNAL BUFFIN, GET ADDR, HEX CONV, HEX ERR
    EXTERNAL MESSAGE, MONSTAT, REG, REGERR, SPACE, SYSTAX, SCRLF
ESC
       EQU
              $1B
REGCHANG: BSR
                         DISPLAY REGISTERS ON CRT
              REG
BLANKSCAN: MOVE.B (A0)+,D0
         SUBQ.B #1, BUFFIN
                         DECREMENT BUFFIN LENGTH
        CMPI.B #SPACE, DO
                          DOES BUFFIN(I) CHAR = SPACE ?
        BNE
               START REG
                           - NO, GET START AND END ADDR
         BRA
               BLANKSCAN
                          CONTINUE SCANNING BUFFIN
                          DOES DO = ESC (ASCII) ?
START REG:CMPI.B #ESC, DO
                           - YES, RTS
         BEQ
               REG DONE
                             DOES DO = 'A' ?
         CMPI.B #'A',D0
                           - YES, ADJUST POINTER
         BEQ
               REGA
         CMPI.B #'D',D0
                            DOES D0 = 'D'?
              REGD
                           - YES. ADJUST POINTER
         CMPI.B #'P',D0
                            DOES DO = 'P'?
                           - YES, CK FOR 'C' & ADJUST PNTR
         BEO
               REGP
                            DOES D0 = 'U' ?
         CMPI.B #'U',D0
                           - YES, CHECK FOR 'S'
         BEQ
               REGU
         CMPI.B #'S',DO
                             DOES D0 = 'S' ?
                           - NO, PRINT ERR DO <> A, D, P, U, S
         BNE
               PRINTERR
                          GET SECOND CHAR OF COMMAND LINE
         MOVE.B (A0) + D0
         SUBQ.B #1, BUFFIN
                          SUBTRACT 1 FROM BUFFIN
         CMPI.B #'P',D0
         BEQ
               REGSP
         CMPI.B #'R',D0
              REGREP
         CMPI.B #'S', D0
```

BNE PRINTERR MOVE.L #-4,D3 BRA REGREP REGA: MOVE.L #-32,D3 BRA REGFIN REGD: MOVE.L #-64,D3 REGFIN BRA REGP: MOVE.B (A0) + D0SUBQ.B #1, BUFFIN CMPI.B #'C',D0 PRINTERR BNE MOVE.L #2,D3 BRA REGREP REGU: MOVE.B (A0) + D0SUBQ.B #1, BUFFIN CMPI.B #'S',D0 BNE PRINTERR MOVE.L #-4, D3 BRA REGREP REGSP: MOVE.L #-4,D0 BRA REGREP PRINTERR: LEA REGERR, A5 BSR MESSAGE BRA REG DONE MOVE.B (A0) + , D0REGFIN: SUBQ.B #1, BUFFIN CLR.L D2 BSR HEX_CONV BTST.B #HEX ERR, MONSTAT BNE PRINTERR LSL.L #2,D2 ADD.L D2, D3 REGREP: LEA SYSTAX, A1 MOVE.L (A1),A1 ADD.L D3,A1 RCA: CMPI.B #SPACE, (A0) BNE FFF ADDQ.W #1,A0 SUBQ.B #1, BUFFIN BRA RCA **BSR** GET ADDR FFF: MOVE.L A2, (A1)

BSR

REG_DONE: RTS

REG

```
* DOWNLOAD ALLOWS THE MONITOR TO DOWNLOAD Sxx RECORDS TO ITS*
 RESIDENT 680XX MICROCOMPUTER OVER A SECOND RS-232 PORT. *
 ************
 WRITTEN BY DR. LARRY ABBOTT
                             APRIL 24, 1986
**************
 FILENAME: DOWNLOAD.ASM
*******************
 VERSION 1.3
 REV. MODIFIED BY
                     DATE
                                DESCRIPTION
     LARRY ABBOTT 12/18/86
                            INIT DEBUG PROCESS
  Α
     DAVID M. SENDEK 1 OCT 87
                            -DOCUMENTATION UPGRADE
                            -CORRECT FOR MC68681
     DAVID M. SENDEK 5 OCT 87 BCLR, BSET ASSEMBLY
  C
                                LANGUAGE CORRECTION
     DAVID M. SENDEK 4 JAN 88
                            -CORRECT DOWNLOADING OF
                              S1, S9 FORMAT RECORDS.
                              NOTE: FINAL S9 RECORD WILL*
                              HAVE A '*' AFTER LAST
                              CHARACTER IN THE RECORD
***************
  DEFINING MODULES OF EXTERNALLY DECLARED VARIABLES:
  CHECKSUM - MAIN.ASM
                        CK SUM
                                - MAIN.ASM
  ECH01
                        ECHO2
                                - CONSOLE.ASM
           - CONSOLE.ASM
                        EPROMSG - MESSAGE.ASM
  EPROMRNG - MAIN.ASM
 EPROMWR
           - MAIN.ASM
 HEX CONV - HEXCONV.ASM SCRLF
                                - IO UTIL.ASM
 HEX ERR
           - MAIN.ASM
                       SREC ERR - MESSAGE.ASM
           - MESSAGE.ASM SCANCHR2 - CONSOLE.ASM
  HEXMSG
                        SPACES
                                - IO UTIL.ASM
  MESSAGE
           - MESSAGE.ASM
                                - MAIN.ASM
  MONSTAT
           - MAIN.ASM
                        SRB
          - MAIN.ASM
                        GETCHR2 - CONSOLE.ASM
  RECFULL
*************
    GLOBAL
            DOWNLOAD
    EXTERNAL CHECKSUM, CK SUM, ECHO1, ECHO2, EPROMRNG, EPROMSG
    EXTERNAL EPROMWR, ESCAPE
    EXTERNAL HEX CONV, HEX ERR, HEXMSG, MESSAGE, MONSTAT
    EXTERNAL RECFULL, SCRLF, SREC ERR
    EXTERNAL SCANCHR2, SPACES
    EXTERNAL SRB, GETCHR2
                            DO DUMMY RD TO CLR CHAN B
DOWNLOAD:BSR
             SCANCHR2
       BTST.B #RECFULL, SRB
                            ANY THING ELSE IN CHAN B ?
       BNE.S DOWNLOAD
                            - YES, SCAN CHANNEL B AGAIN
       BSR
             SCRLF
                            ECHO CR & LF TO CRT
DOWNLOOP: BCLR.B #HEX ERR, MONSTAT CLEAR HEX ERROR FLAG
S LOOP
                            GET A CHAR FROM DWNLNK PORT
       BSR
           GETCHR2
       BTST.B #ESCAPE, MONSTAT ESC THE DOWNLOAD PROCESS ?
       BNE
             DOWNEXIT
                            - YES, EXIT
```

CMPI.B BNE BSR MOVE.W BSR BSR CMPI.B BEQ CMPI.B BEQ CMPI.B BEQ ADDQ.W CMPI.B BEQ ADDQ.W CMPI.B BEQ ADDQ.W	#'S',D0 S_LOOP ECHO2 #1,D3 GETCHR2 ECHO2 #'O',D0 S_RECORD #'1',D0 S_RECORD #'9',D0 S9_RECORD #1,D3 #'2',D0 S_RECORD #1,D3 #'3',D0 S_RECORD \$#'3',D0 S_RECORD \$#'3',D0 S_RECORD \$#'3',D0 S_RECORD SREC_ERR,A5	IS CHARACTER = 'S' ? - NO, SEARCH FOR A 'S' ECHO 'S' TO CONSOLE SET FOR 16-BIT ADDR GET A CHAR FROM DWNLNK PORT ECHO DWNLNK CHAR TO CONSOLE IS THIS A SO RECORD ? - YES, GO TO S RECORD IS THIS A S1 RECORD ? - YES, GO TO S RECORD IS THIS A S9 RECORD ? - YES, GO TO S9 RECORD SET FOR 24-BIT ADDR IS THIS A S2 RECORD ? - YES, GO TO S RECORD SET FOR A 32-BIT ADDRESS IS THIS A S3 RECORD ? - YES, GO TO S RECORD SET FOR A S2-BIT ADDRESS IS THIS A S3 RECORD ? - YES, GO TO S RECORD IF NO SXX RECORD ; THEN 'S RECORD ERROR' MSG
* BCLR.B		"ATTEMPTED WRITE TO EPROM" WAS THERE A WRITE TO EPROM?
ERRMSG: BSR RTS	MESSAGE	PRINT ERROR MESSAGE
S_RECORD:BSR BCLR.B BEQ LEA BRA	SN_RECORD #HEX_ERR,MONSTAT DOWNLOOP HEXMSG,A5 ERRMSG	PROCESS S RECORD I IF NOT HEX CONVERSION ERR THEN GET NEXT RECORD ELSE HEX CONV ERROR MSG PRINT ERROR MSG
S9_RECORD:BSR BTST.B BEQ RTS	SN_RECORD #HEX_ERR,MONSTAT	
BSR BTST.I BNE.S MOVE.V SUB.W SUBQ.V	CK_SUM GETFIELD	SET FOR 1 BYTE CLEAR CHECK SUM GET DOWNLOAD FIELD I IF HEX CONVERSION ERROR THEN EXIT SN_RECORD D4<-HEXBUFFER (S REC LEN) LEN = (S REC LEN) - ADDR ADJST FOR DBF INST & ADDR SET ADDRESS SIZE

```
BSR
                      GETFIELD
                                             GET ADDRESS FIELD
             BTST.B #HEX ERR, MONSTAT IF HEX CONVERSION ERROR
             BNE.S SN_EXIT THEN EXIT SN_REC
MOVE.L D2,A0 A0 <-- LOAD ADDRESS
BSR DOWN_DATA GET DOWN LOAD DATA
                                                 THEN EXIT SN RECORD
             RTS
SN EXIT
DOWN DATA BSR GETCHR2
                                     GET FIRST CHARACTER
ECHO DWNLD CHARACTER
             BSR
                     ECHO2
                                              ECHO DWNLD CHARACTER
                                                     TO CONSOLE
             CLR.L D2
                     HEX CONV
                                            CONVERT CHAR TO HEX
             BSR
             BTST.B #HEX ERR, MONSTAT IF HEX CONVERSION ERROR
             BNE.S DD EXIT THEN EXIT DOWN DATA
BSR GETCHR2 GET SECOND CHARACTER
BSR ECHO2 ECHO DWNLD CHAR TO CONSOLE
CMPA.L #EPROMRNG, A0 IS THIS A WRITE TO EPROM?
             BLS.S EPROMERR
                                              - YES, GO TO EPROMERR
                                            CONVERT CHARACTER TO HEX
             BSR HEX_CONV
             MOVE.B D2, \overline{(A0)}
                                              LOAD BYTE INTO MEMORY
             BRA.S CHK SUM
EPROMERR BSET.B #EPROMWR, MONSTAT FLAG EPROM WRITE
             ADDQ.L #1,AO

TST.W D4

BEQ.S LOOP END
ADD.B D2,CK_SUM
ADD.B D4,DOWN_DATA
NOT.B CK_SUM

MOVE.B - (AO),D2

CMP.B CK_SUM,D2

ADD EPROM WRITE

INCREMENT MEM LOAD ADDR

ARE NXT CHARS CHECK SUM?

- YES,DONT ADD TO CHK SUM

ADD THIS BYTE TC CHK SUM

ADD THIS BYTE TC CHK SUM

COMPLEMENT CHECK SUM

GET COMPUTED CHECK SUM

COMP.B CK_SUM,D2


COMP CALC'S AND
CHK SUM
LOOP END
                                              XMIT CHK SUMS
             BEQ.S ERRCHECK
                                              IF CHECK SUMS AGREE
                                                  THEN EXIT DOWNLOAD
             MOVE.L MONSTAT, D3
             BSET.L #CHECKSUM, D3
                                              SET FLAG IF CHECK SUM ERR
             MOVE.L D3, MONSTAT
             BRA.S ERR MARK
ERRCHECK BTST.B #EPROMWR, MONSTAT A WRITE TO EPROM ?
             BEQ.S DD_EXIT - NO, EATT - YES, MARK ERROR WITH *
ERR MARK MOVE.W #'\overline{\times}', D0
             BSR
                      ECHC1
             BSR
                                             ECHO CR & LF
DD EXIT
                       SCRLF
             RTS
GETFIELD CLR.L D2
                                              CLEAR HEX BUFFER
LOOPINIT MOVE.W #1,D5
                                              SET COUNT TO
                                                   PACK 2 NIBBLES
                     GETCHR2 GET DOWNLOAD CHARACTER
ECHO2 ECHO DOWNLOAD CHARACTER
GF LOOP
             BSR
             BSR
                                              ECHO DOWNLOAD CHARACTER
                                                     TO CONSOLE
                     HEX CONV CONVERT ASCII CHAR TO HEX
             BSR
             BTST.B #HEX_ERR, MONSTAT IF HEX CONVERSION ERROR
```


	BNE.S	GF EXIT	THEN EXIT GET FIELD
	DBF	D5,GF LOOP	GET SECOND NIBBLE
		D2, CK SUM	COMPUTE CHECK SUM
		D6, LOOPINIT	IF MORE CHARS THEN LOOP
GF EXIT	RTS	•	ELSE EXIT
_	END		


```
*****************
* THIS ROUTINE IS VECTORED TO BY ALL EXCEPTIONS THAT
* LACK A DEFINITE EXCEPTION SERVICE ROUTINE.
******************
* WRITTEN PY DR. LARRY ABBOTT
***************
* FILENAME: UNUSED.ASM
*******************
* VERSION 1.3
                      DATE
      MODIFIED BY
                                DESCRIPTION
                     1 OCT 87
      DAVID M. SENDEK
                                -DOCUMENTATION UPGRADE *
                                -INCORPORATE A PROMPT
*****************
 DEFINING MODULES OF EXTERNALLY DECLARED VARIABLES:
    OUTPUT BYTE - BYTEOUT.ASM
                              MESSAGE - MESSAGE.ASM
    REG
              - REG.ASM
                              SCRLF
                                     - IO UTIL.ASM
    SYSTAX
                              USEMSG - MESSAGE.ASM
              - MAIN.ASM
    PROMPT
              - MESSAGE.ASM
    GLOBAL
            UNUSED
    EXTERNAL
             OUTPUT BYTE, MESSAGE, REG, SCRLF, SYSTAX, USEMSG
    EXTERNAL PROMPT
UNUSED: MOVEM.L SP, SYSTAX
                            SAVE POINTER TO APPLICATION
                                 REGISTERS
     MOVEM.L A0-A7/D0-D7, - (SP) SAVE ALL REGISTERS
                            MOVE CURSOR TO NEXT LINE
     BSR
             SCRLF
             USEMSG, A5
     LEA
                            SET MSG POINTER TO MONMSG
      BSR
            MESSAGE
                            CRT<-UNUSED EXCEPTION MSG
     MOVE.L
             SYSTAX, A5
                            GET TOP OF STACK AT ENTRY
                            POINT TO STACK FORMAT WORD
      ADDQ.L
             #6,A5
      MOVE.B
             (A5) + D0
                            GET FORMAT.HIGH
      BSR
             OUTPUT BYTE
                            OUTPUT FORMAT.HIGH
      MOVE.B
             (A5),D0
                            GET FORMAT.LOW
             OUTPUT BYTE
      BSR
                            OUTPUT FORMAT.LOW
      BSR
             SCRLF
                            MOVE CURSOR TO NEXT LINE
      BSR
             REG
                            DISPLAY REGISTERS
      MOVEM.L (SP)+,A0-A7/D0-D7 RESTORE ALL REGISTERS
      RTE
      END
```


APPENDIX C: MINIMAL SYSTEM DIAGRAMS

The figures (Figs. C.1 through C.8) contained in this appendix are discussed in Chapter IV. These figures were created using the OrCAD/SDT III computer-aided design (CAD) tool. Each signal's source(s) and/or destination(s) are noted on the diagrams. It is, however, the integration of these various components into a minimal system that comprises the work that is original to this thesis.

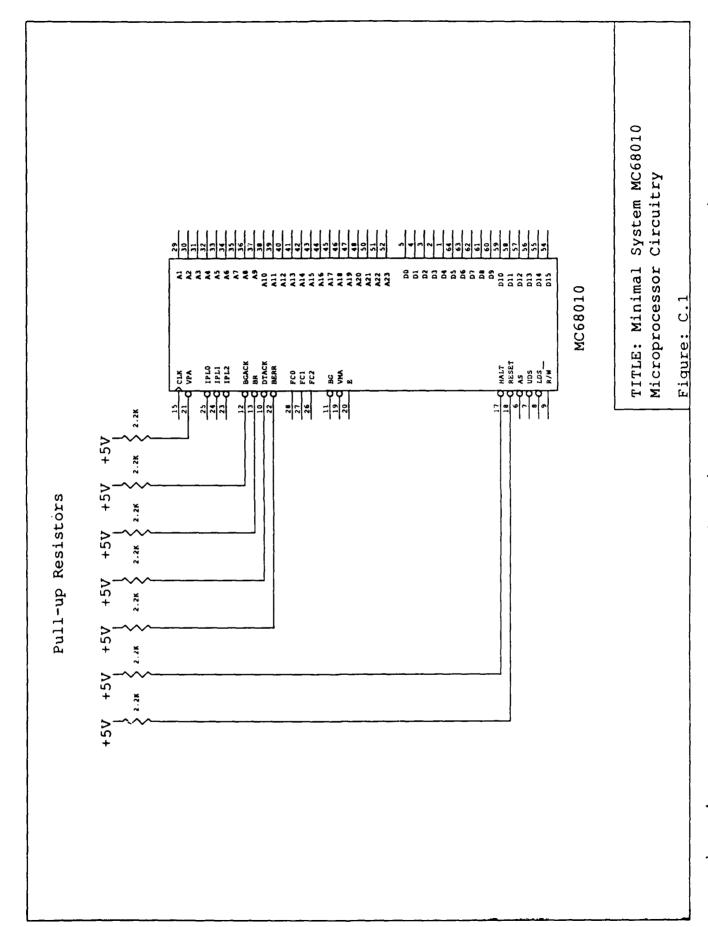

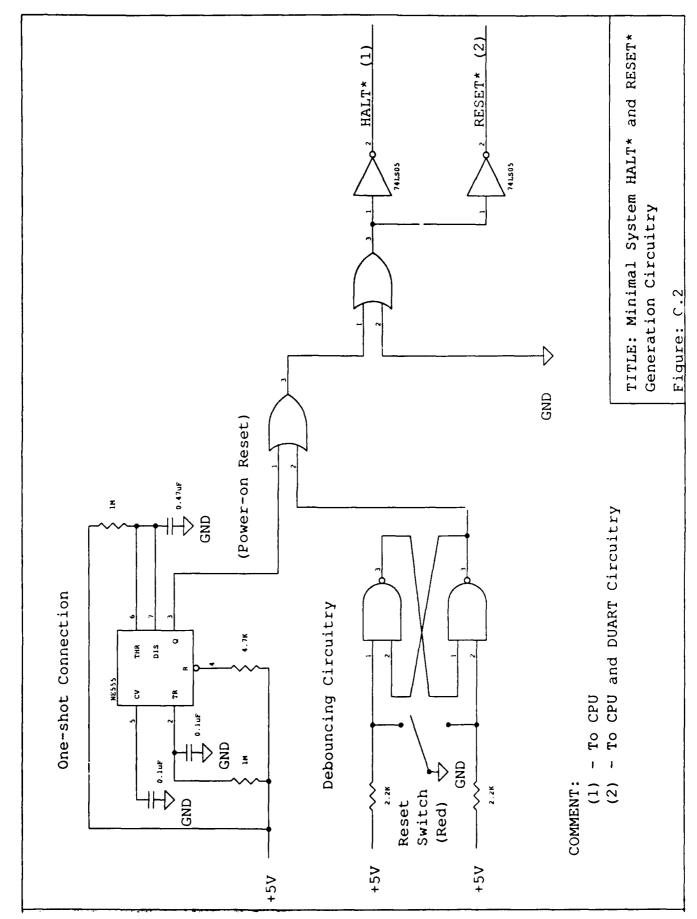

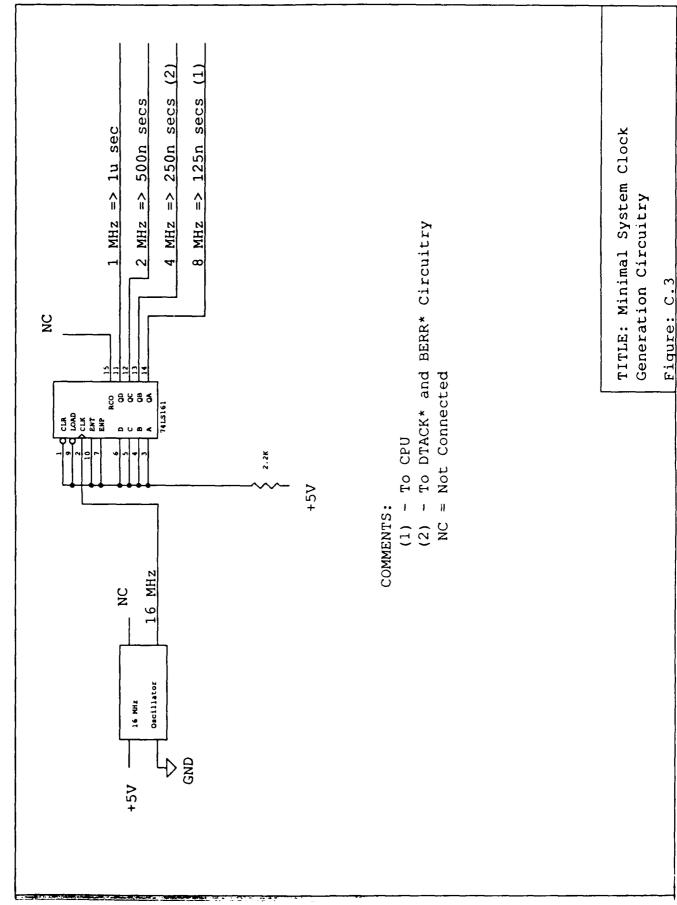

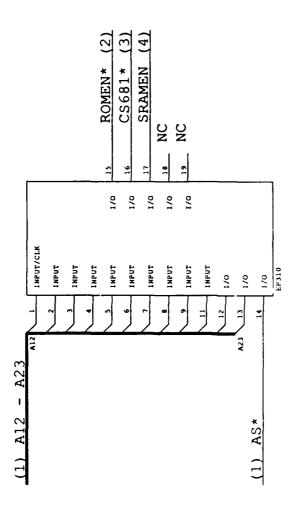


COMMENTS:


- (1) From CPU
- (2) ROM Enable; To ROM Circuitry and DTACK* Circuitry
 - (3) Chip Select MC68681 DUART; To DUART Circuitry
- (4) SRAM Enable; To SRAM Circuitry and DTACK* Circuitry


NC = Not Connected


TITLE: Minimal System Address Decode Circuitry

Figure: C.4

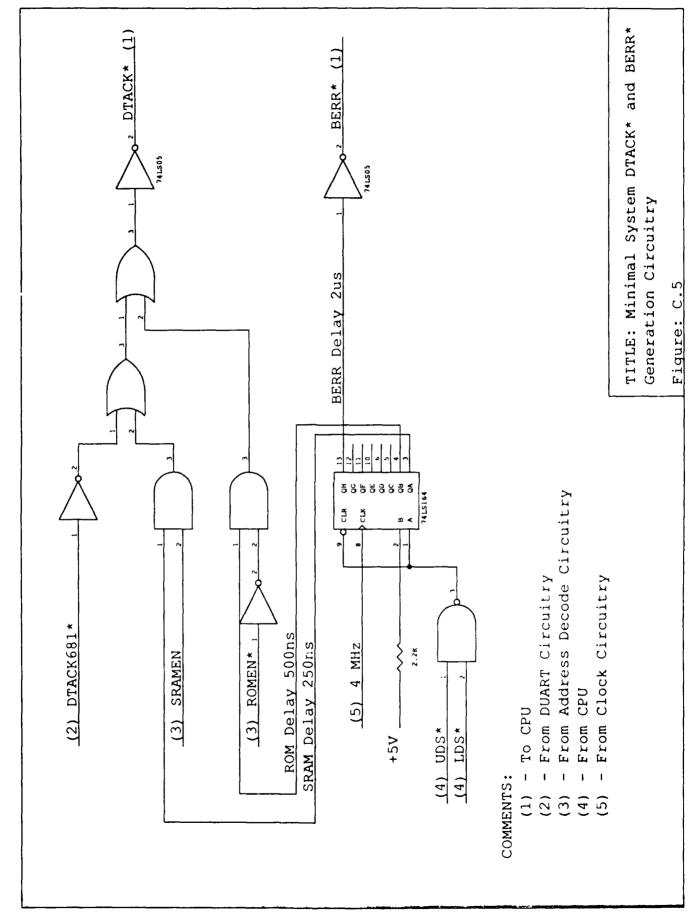

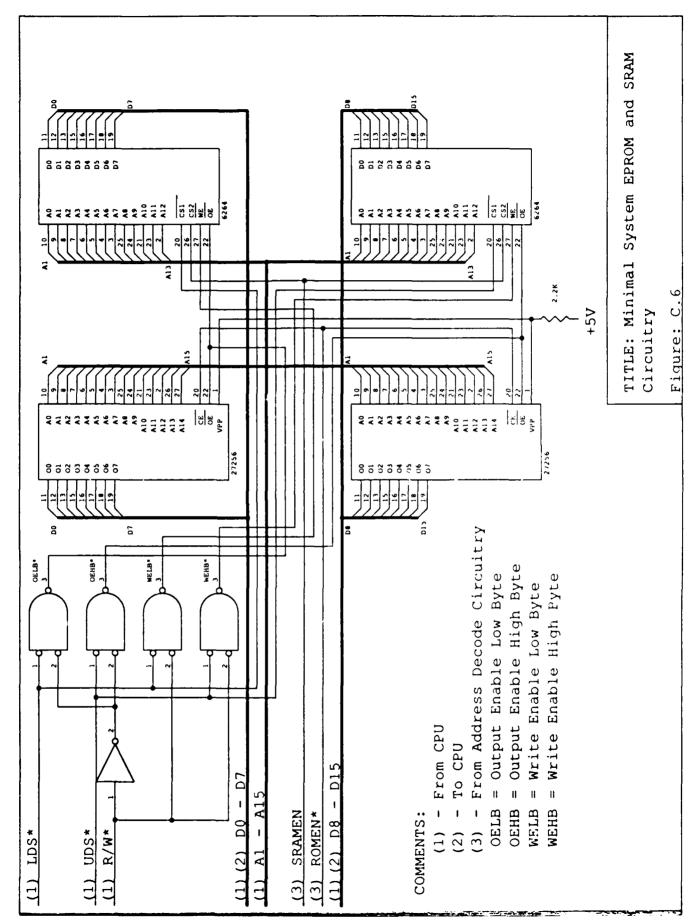

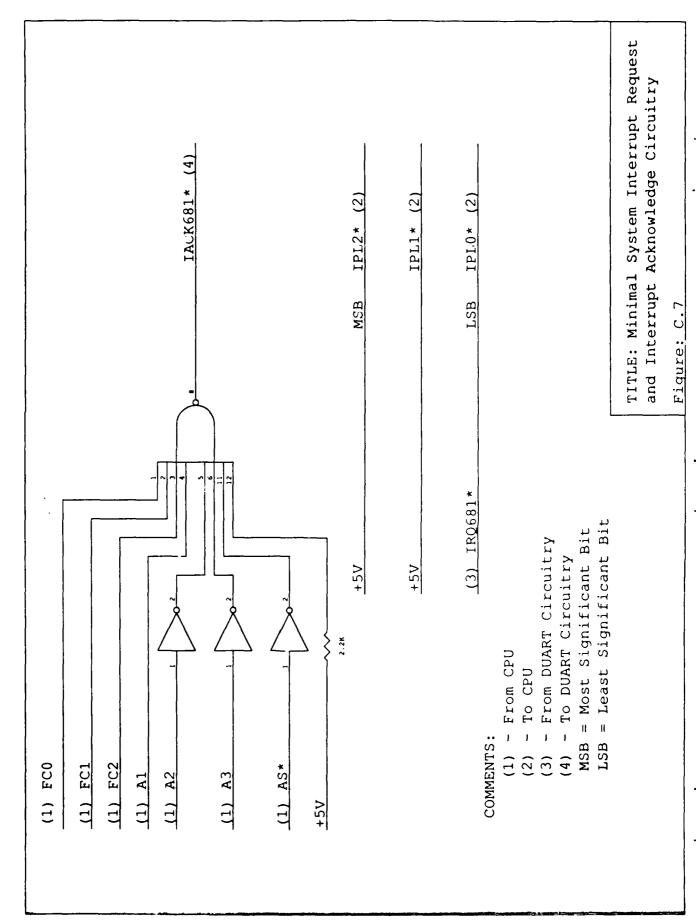

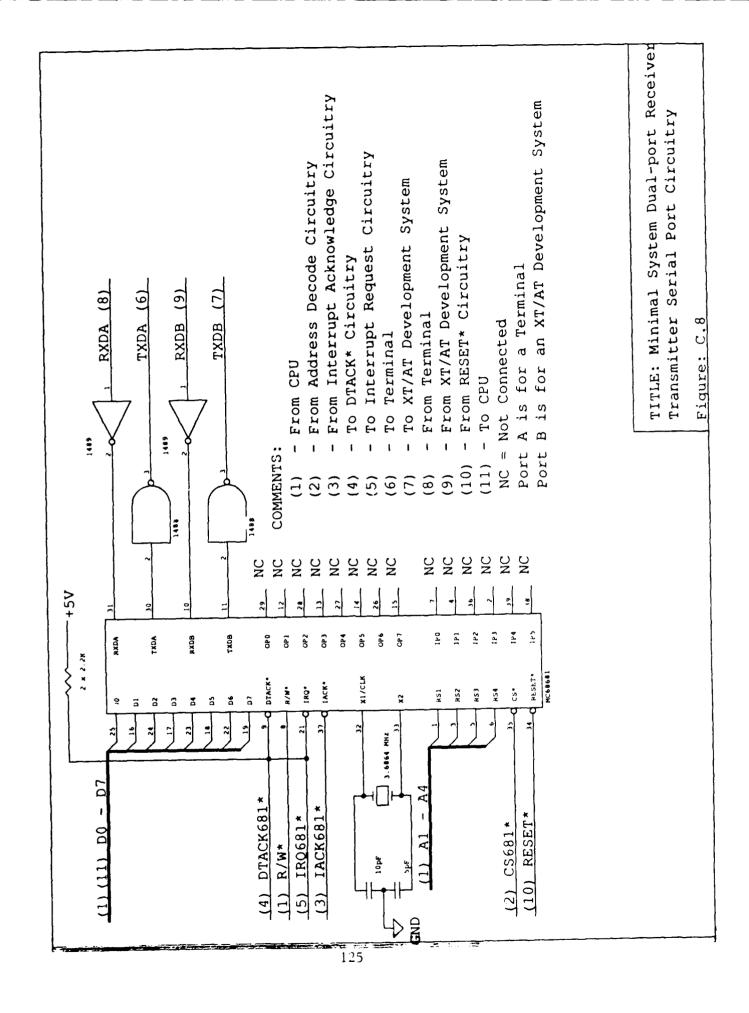

APPENDIX D: MINIMAL SYSTEM'S PROGRAMMABLE LOGIC DEVICE SOURCE CODE

In order to reduce the chip count, Altera EP310 erasable programmable logic devices (EPLDs) were used within the minimal system. Abel, a logic software design tool by Data I/O Corporation, was used to program Altera EP310 EPLDs [Ref. 16:pp. 2-57 - 2-62]. Abel files provides a high-level representation of the logic to be implemented on the EP310s. The EP310 comes in a 20-pin package. Nine pins are used strictly for input logic; one pin can be used for input logic or as a clocked input; eight pins can be used for input logic or output logic; the remaining two pins are used for Vcc input and ground input.

The following Abel modules were implemented:

- minimal system address decoder
- dtack and bus error generation
- output_enable_write_enable
- interrupt controller

```
**
         THIS FILE USES DATA I/O'S ABEL DESIGN LANGUAGE
         TO GENERATE A JEDEC FILE TO PROGRAM AN ALTERA
         EP310 ERASABLE PROGRAMMABLE LOGIC DEVICE (EPLD).
MODULE minimal system address decoder FLAG '-X0'
TITLE '68010 ADDRESS DECODER FOR THE MINIMAL SYSTEM'
u61 DEVICE 'E0310'; "Abel V2 must be used for this device.
"DEFINE LABELS ASSOCIATED WITH INPUT AND OUTPUT PINS
          FOR THE EP310
          INPUT PINS
          a12, a13, a14, a15, a16, a17, a18, a19, a20, a21, a22, a23,
               as PIN 1,2,3,4,5,6,7,8,9,11,12,13,15;
       - OUTPUT PINS
          cs681, romen, sramen PIN 16, 18, 19;
"ASSIGNMENT STATEMENTS
          h = 1;
                      "HIGH
                      "LOW
          1 = 0;
          x = .X.;
                      "DONT CARE
    ramaddr = [a23, a22, a21, a20, a19, a18, a17, a16, a15, a14,
                    romaddr = [a23, a22, a21, a20, a19, a18, a17, a16, x, x, x, x, x]
                    x, x;
  duartaddr = [a23, a22, a21, a20, a19, a18, a17, a16, a15, a14,
                    a13, a12, x, x];
"DEFINE EQUATIONS AS PER MEMORY MAP
       ! = INVERSION
       & = AND
       # = OR
EQUATIONS
sramen= (ramaddr >= ^h010000)&(ramaddr <= ^h013FFF)&!as;</pre>
!cs681= (duartaddr >= ^h7F7000)&(duartaddr <= ^h7F7FFF)&!as;</pre>
!romen = (romaddr <=^h00FFFF) &!as;
END minimal system address decoder
```

```
THIS FILE USES DATA I/O'S ABEL DESIGN LANGUAGE
         TO GENERATE A JEDEC FILE TO PROGRAM AN ALTERA
         EP310 ERASABLE PROGRAMMABLE LOGIC DEVICE (EPLD).
MODULE dtack and bus error_generation FLAG '-X0'
TITLE 'DTACK AND BUS ERROR GENERATION FOR THE MINIMAL SYSTEM'
u64 DEVICE 'E0310'; "Abel V2 must be used for this device.
"DEFINE LABELS ASSOCIATED WITH INPUT AND OUTPUT PINS
          FOR THE EP310
         INPUT PINS
          berr_delay, rom_delay, sram_delay, romen,
              dtack681, sramen PIN 1,8,9,11,13,16;
          OUTPUT PINS
          dtack, berr PIN 18,19;
"ASSIGNMENT STATEMENTS
          h = 1;
                   "HIGH
                     "LOW
          1 = 0;
          x = .X.; "DONT CARE
"DEFINE EQUATIONS
  NOTE: ! = INVERSION
          &=AND
          # = OR
EQUATIONS
dtack=(!dtack681) #(sramen&sram delay) #(!romen&rom_delay);
berr = berr delay;
END dtack and bus error_generation
```


```
THIS FILE USES DATA I/O'S ABEL DESIGN LANGUAGE
         TO GENERATE A JEDEC FILE TO PROGRAM AN ALTERA
         EP310 ERASABLE PROGRAMMABLE LOGIC DEVICE (EPLD).
MODULE output enable write_enable FLAG '-X1'
TITLE 'SRAM WRITE ENABLE AND SRAM AND ROM OUTPUT ENABLES FOR
             THE MINIMAL SYSTEM'
u63 DEVICE 'E0310'; "Abel V2 must be used for this device.
"DEFINE LABELS ASSOCIATED WITH INPUT AND OUTPUT PINS
          FOR THE EP310
         INPUT PINS
          rw, win, uds, lds, mas, as, pudsi, pldsi PIN 1, 2, 3, 4, 5, 6, 8, 9;
       - OUTPUT PINS
          oelb, weu34, weu35, oehb, pudso, pldso, pas
               PIN 13,14,15,16,17,18,19;
"ASSIGNMENT STATEMENTS
          h = 1;
                     "HIGH
                     "LOW
          1 = 0;
          x = .X.;
                    "DONT CARE
"DEFINE EQUATIONS
" NOTE: ! = INVERSION
           &= AND
**
           # = OR
          rw = read
         !rw = write
EQUATIONS
!weu34 = !rw & !pldsi;
!weu35 = !rw & !pudsi;
!oehb = rw & !pudsi;
!oelb = rw & !pldsi;
END output_enable_write_enable
```


```
THIS FILE USES DATA I/O'S ABEL DESIGN LANGUAGE
         TO GENERATE A JEDEC FILE TO PROGRAM AN ALTERA
         EP310 ERASABLE PROGRAMMABLE LOGIC DEVICE (EPLD).
MODULE interrupt_controller FLAG '-X1'
TITLE 'INTERRUPT CONTROLLER FOR THE MINIMAL SYSTEM'
"THIS IS NOT UPWARDS COMPATIBLE FOR THE FULLY INTEGRATED SYSTEM
u00 DEVICE 'E0310'; "Abel V2 must be used for this device.
"DEFINE LABELS ASSOCIATED WITH INPUT AND OUTPUT PINS
        FOR THE EP310
        INPUT PINS
        a1, a2, a3, as, irq681, fc1, fc2, fc3 PIN 1, 2, 3, 4, 5, 6, 7, 8;
     - OUTPUT PINS
        ipl0, ipl1, ipl2, irack681 PIN 16, 17, 18, 19;
"ASSIGNMENT STATEMENTS
          h = 1;
                     "HIGH
          1 = 0;
                      "LOW
          x = .X.;
                     "DONT CARE
"DEFINE EQUATIONS
           ! = INVERSION
           & = AND
           # = OR
EQUATIONS
!irack681 = a1 & !a2 & !a3 & !as & fc1 & fc2 & fc3;
        = h;
ip10
ipl1
         = h;
ipl2
         = irq681;
```


END interrupt controller


APPENDIX E: SYSTEM DIAGRAMS


In this appendix are the wiring diagrams which implement the master circuit board subsystem and system controller subsystem which are discussed in Chapter IV. These diagrams were produced by the OrCAD/SDT III computer-aided design (CAD) tool. It is, however, the integration of these various components into a multiprocessor system that comprises the work that is original to this thesis.

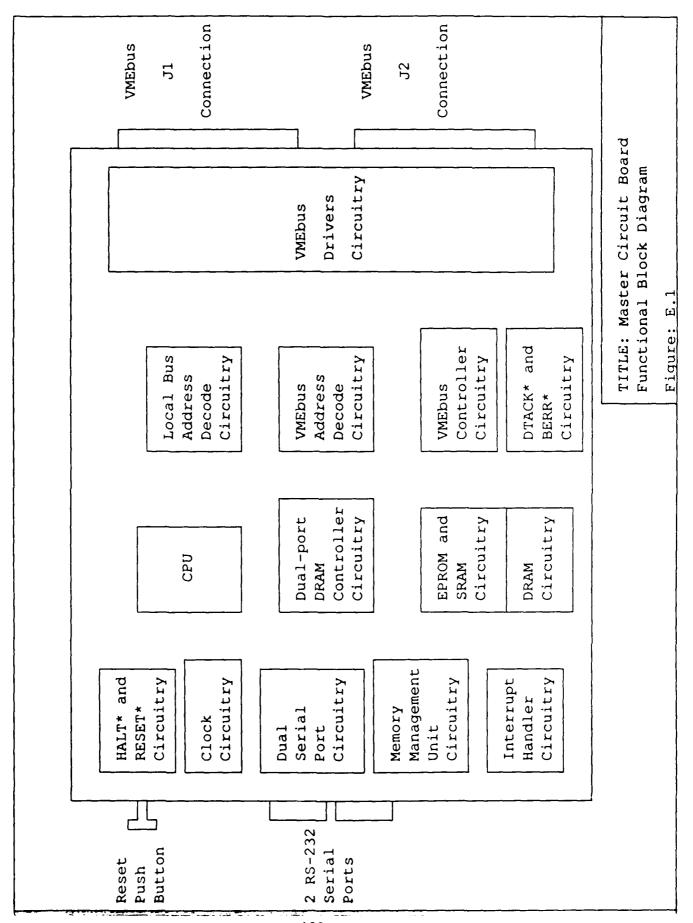


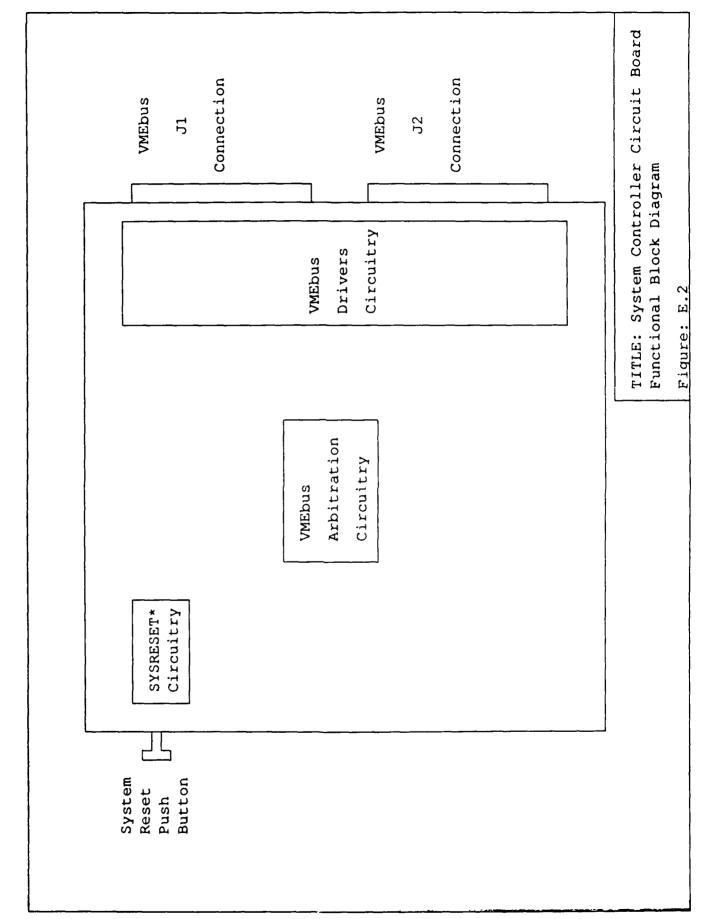


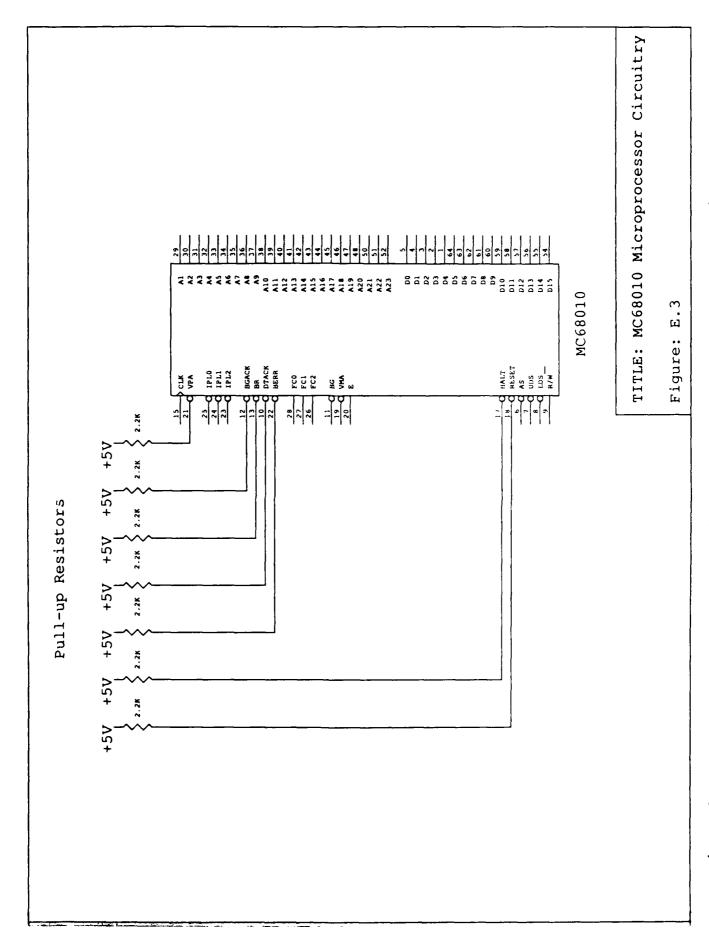


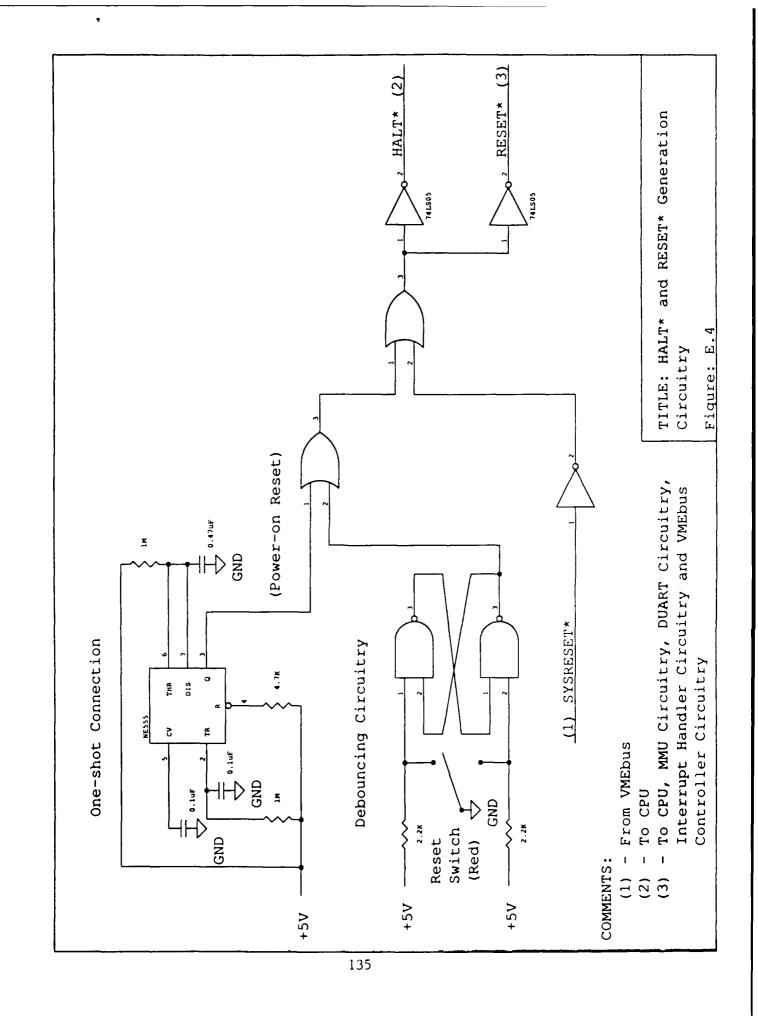


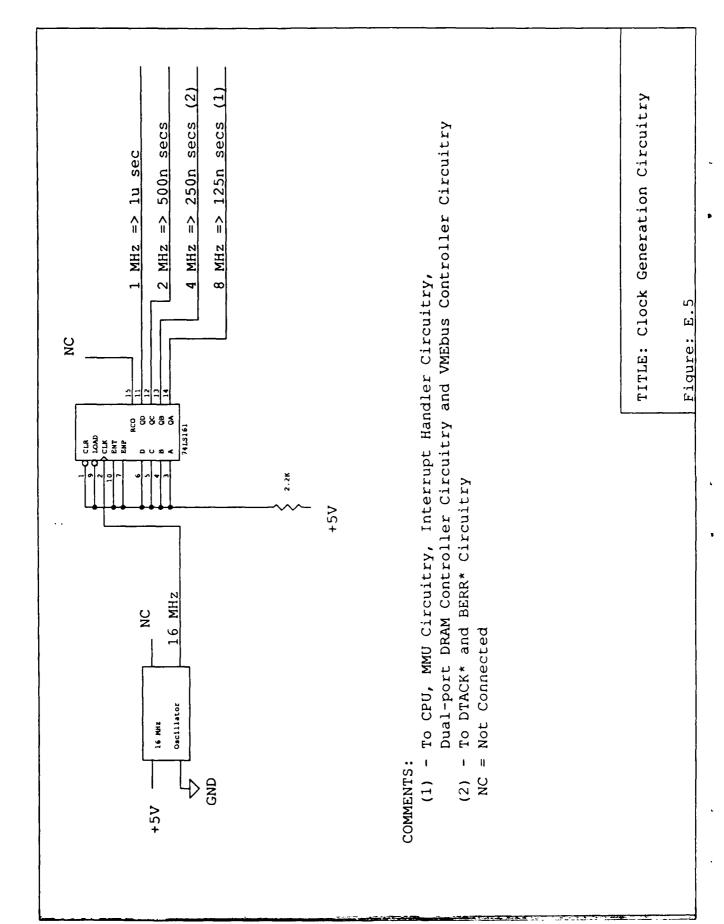


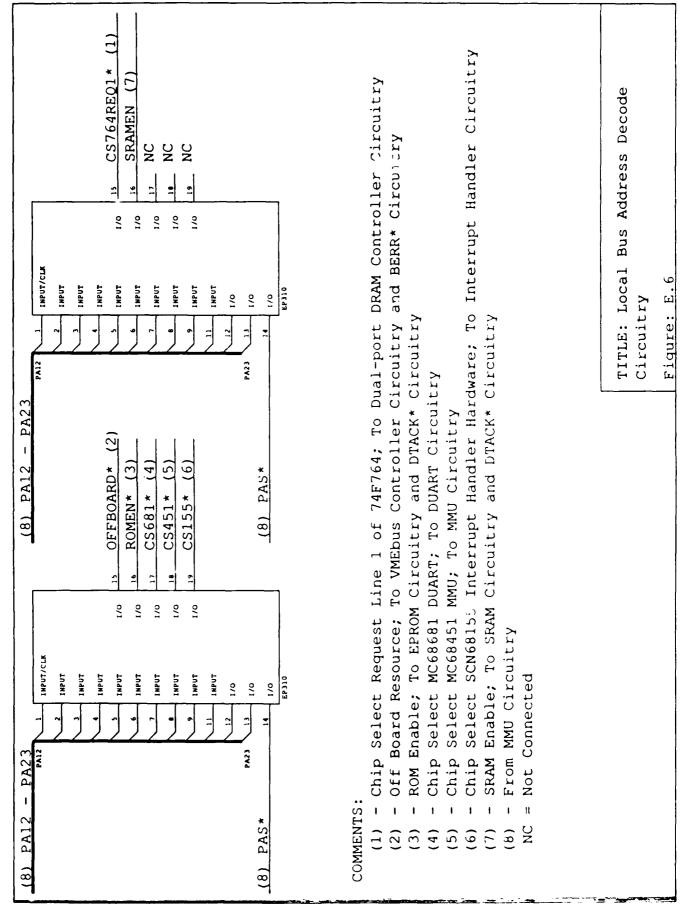


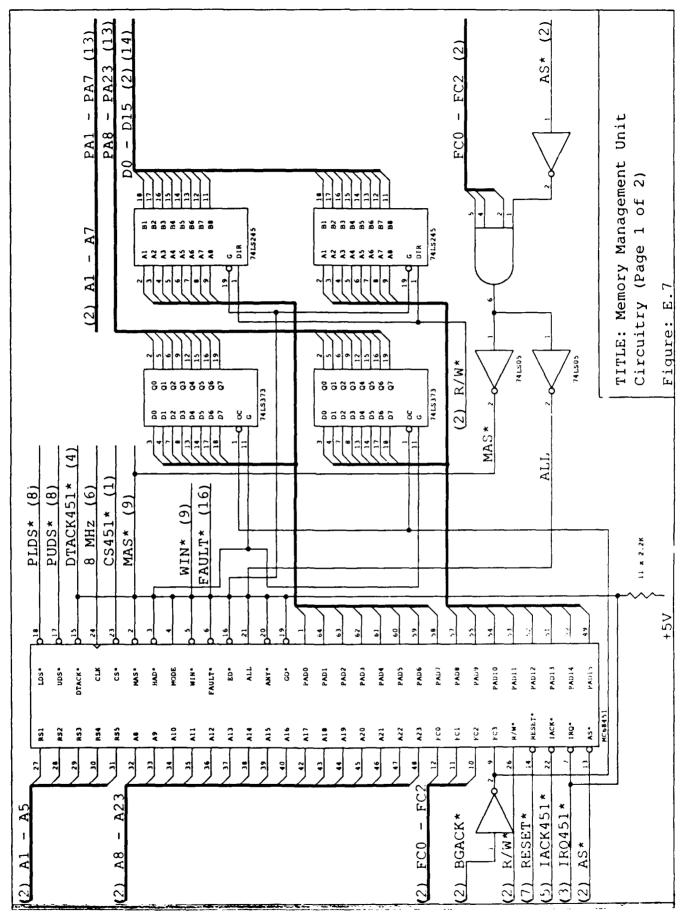


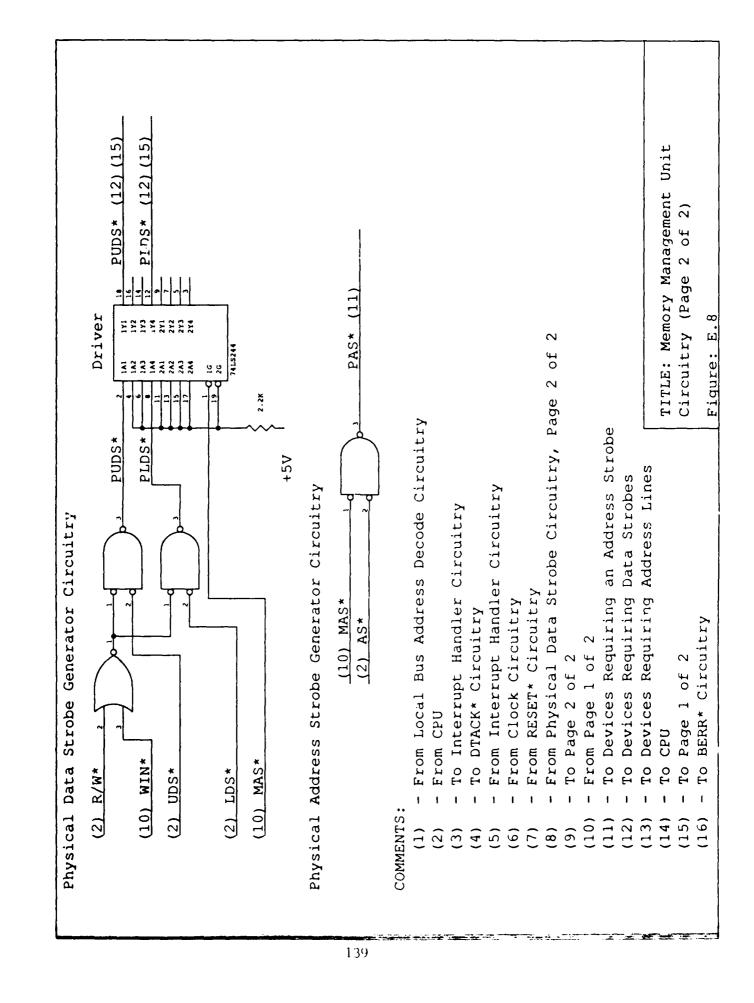


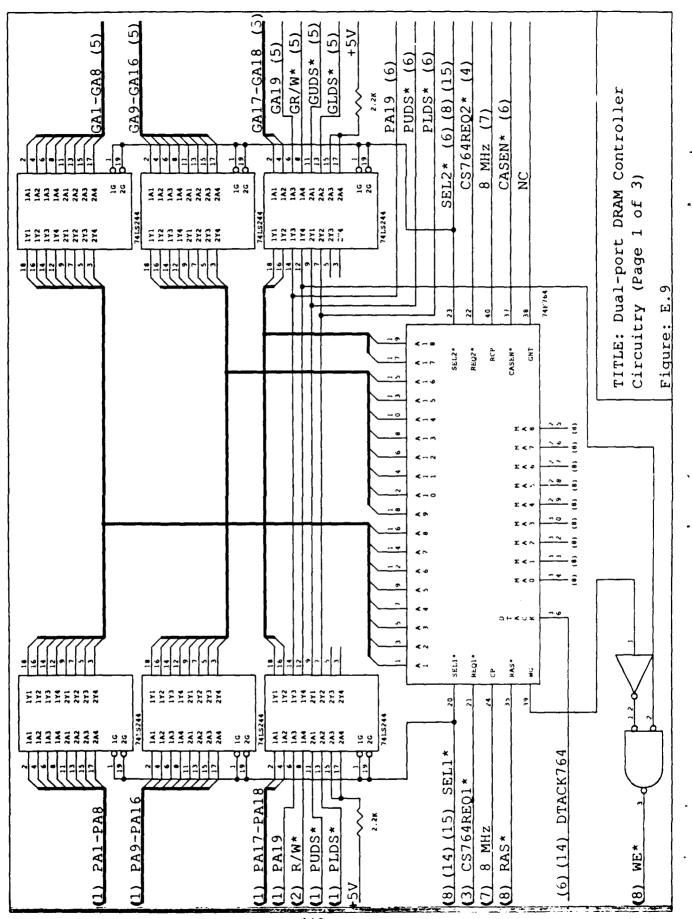


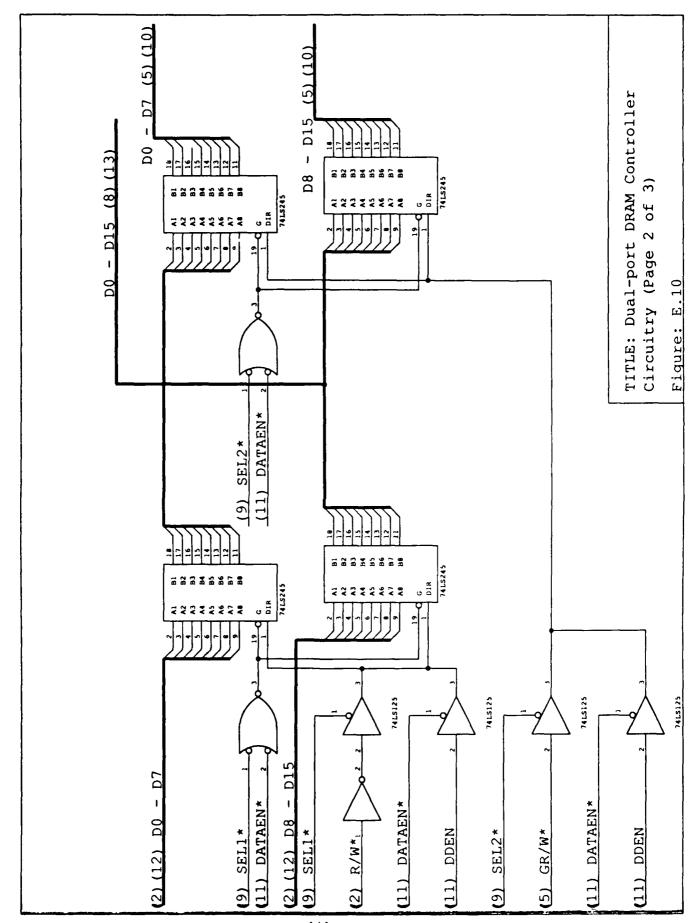


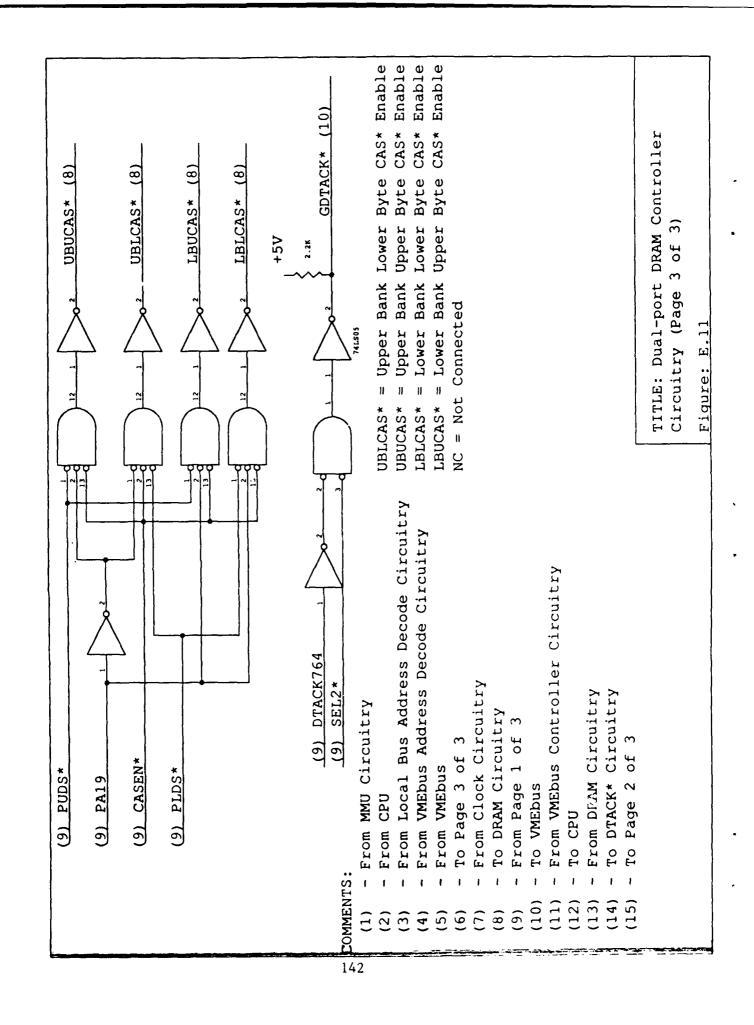


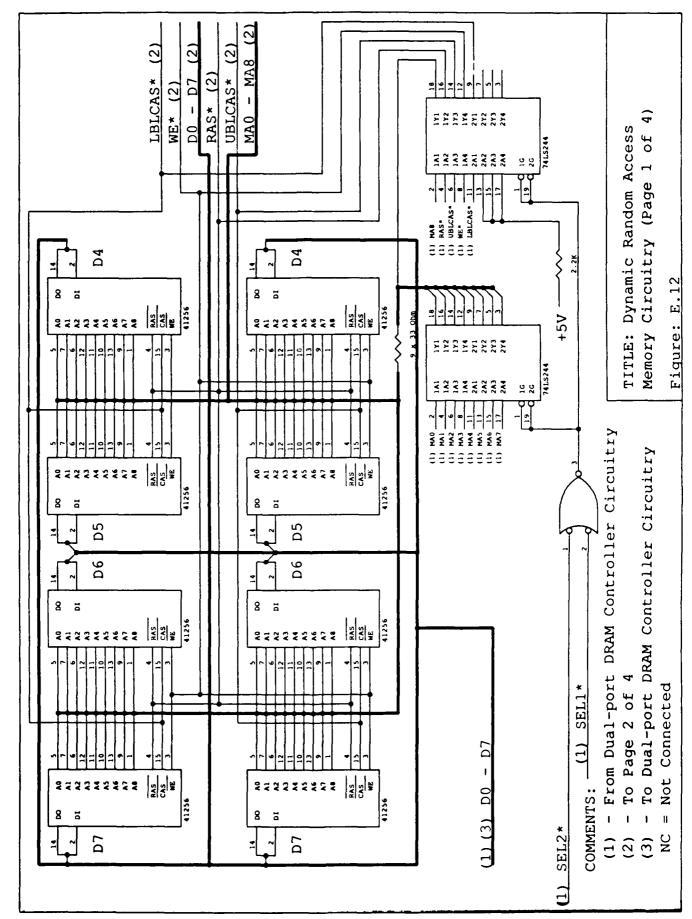


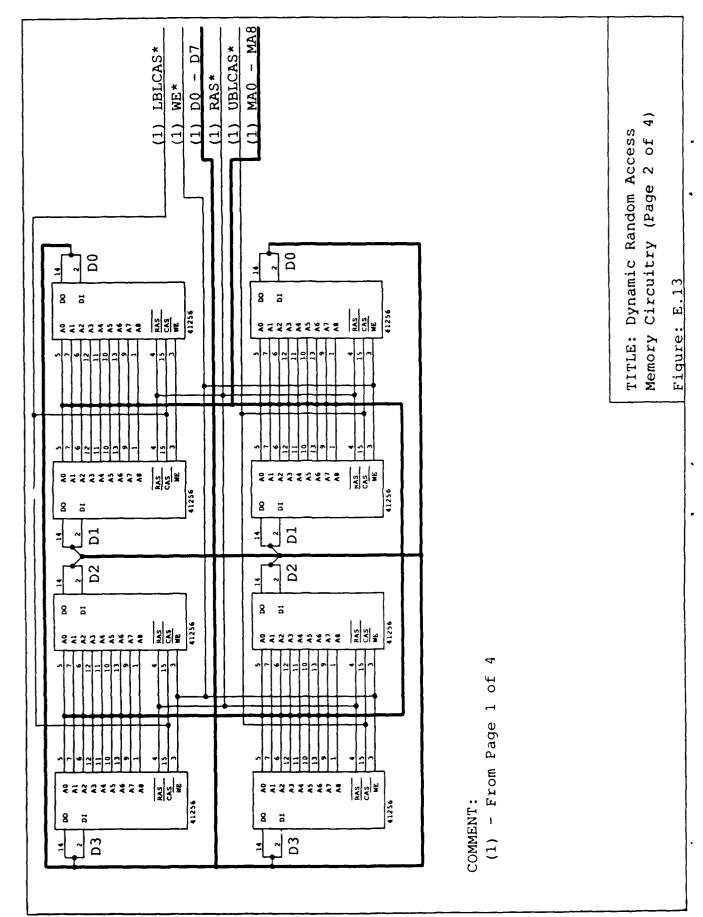


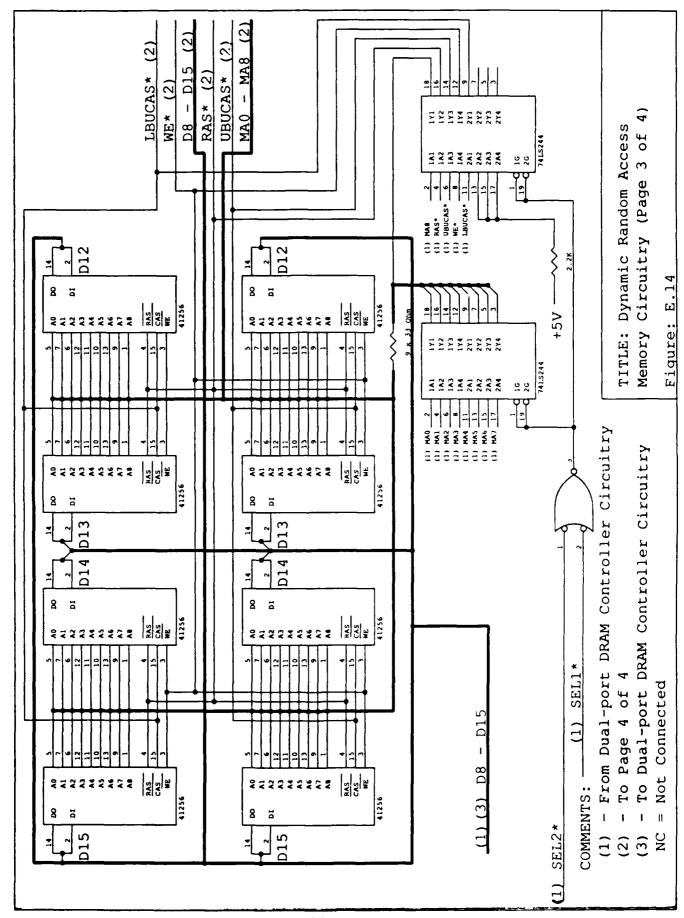


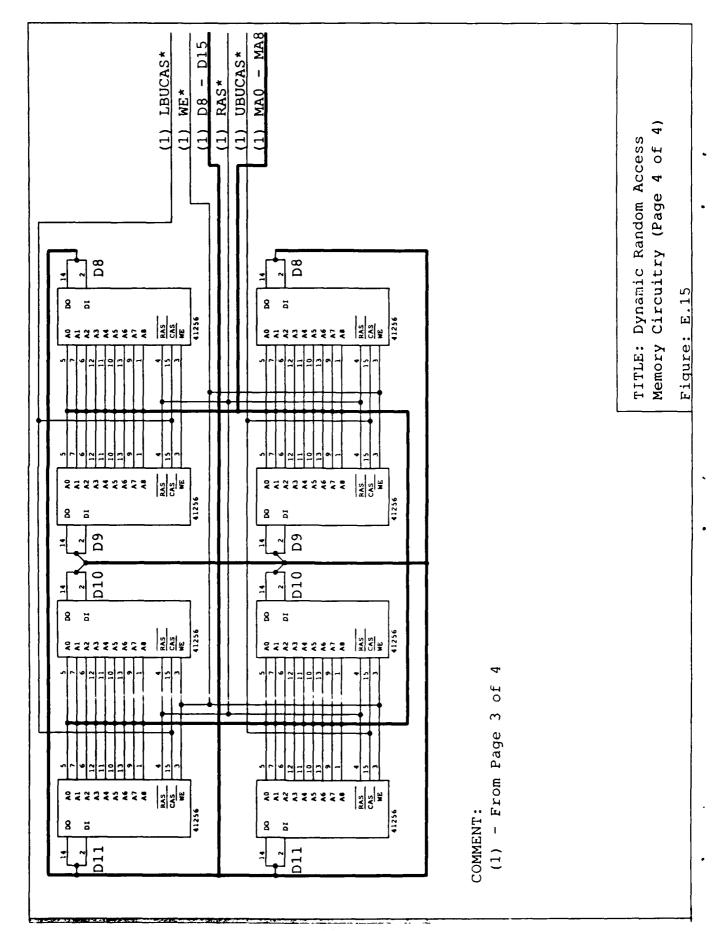


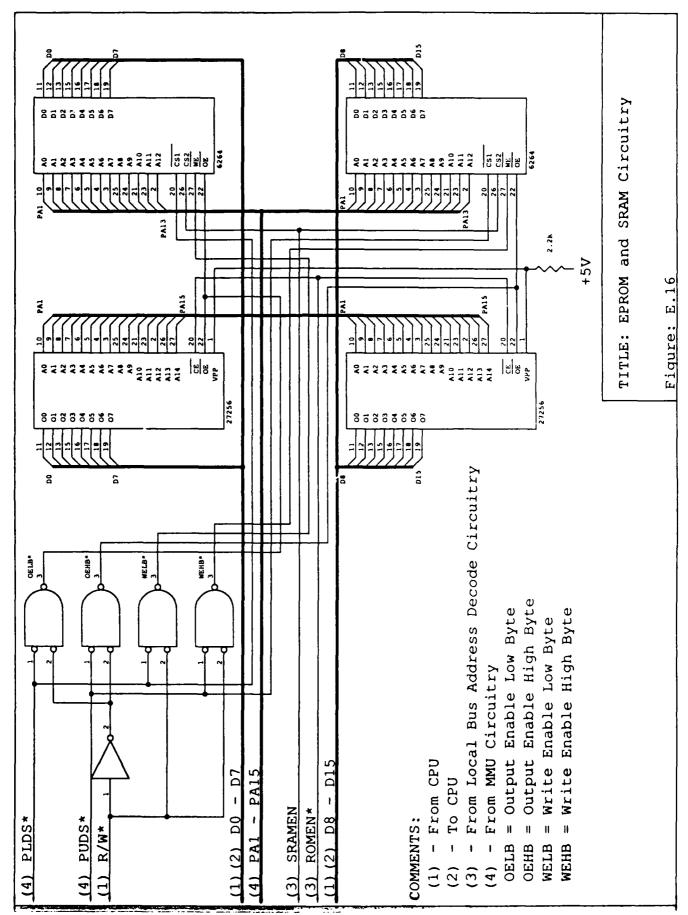


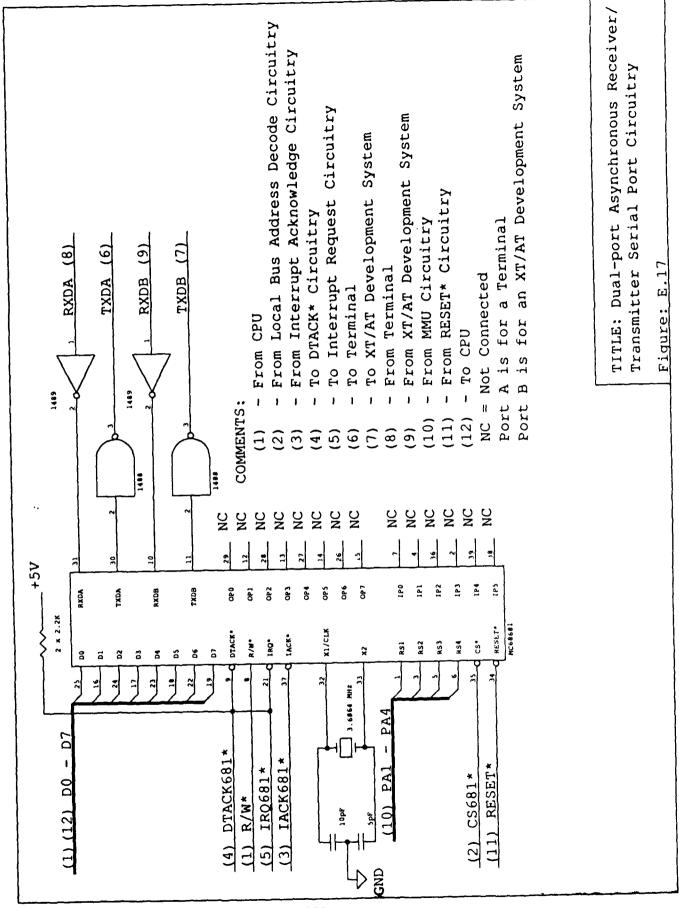

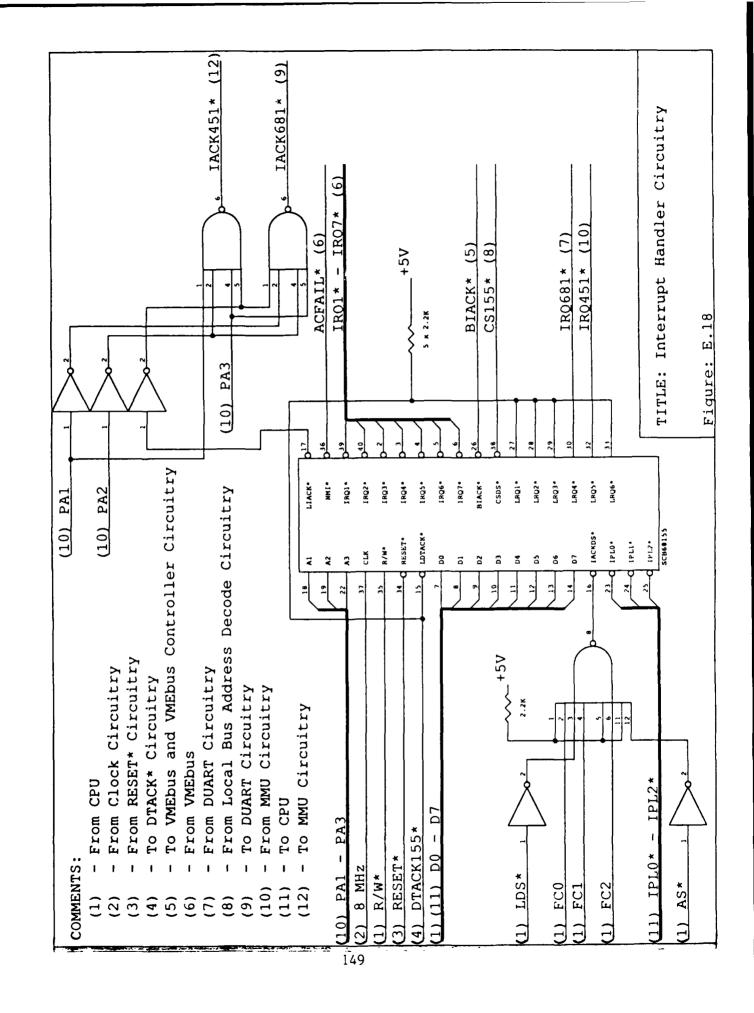

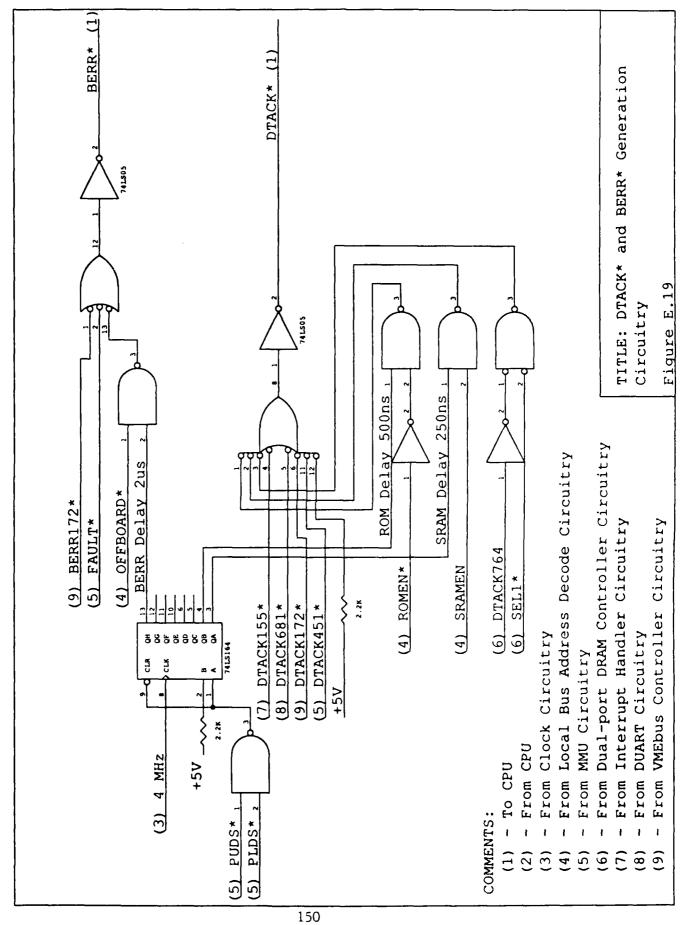

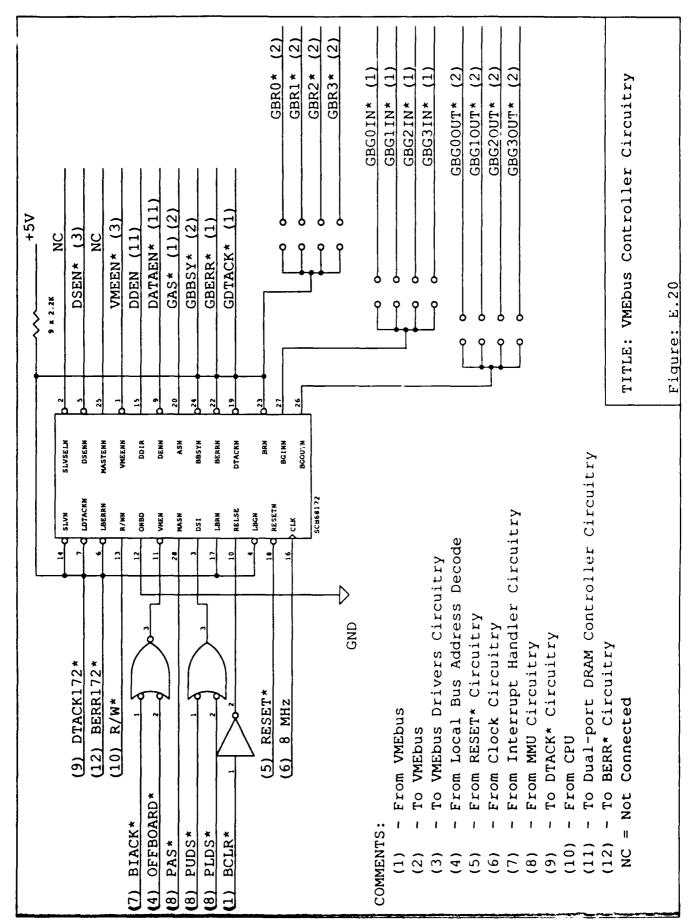

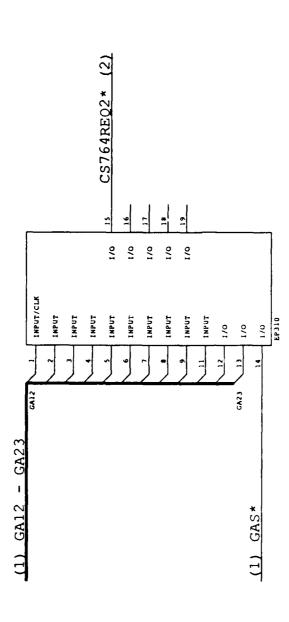



COMMENTS:


(1) - From VMEbus (2) - Chip Select Request Line 2 of 74F764; To Dual-port DRAM Controller Circuitry


TITLE: VMEbus Address Decode Circuitry


Figure: E.21

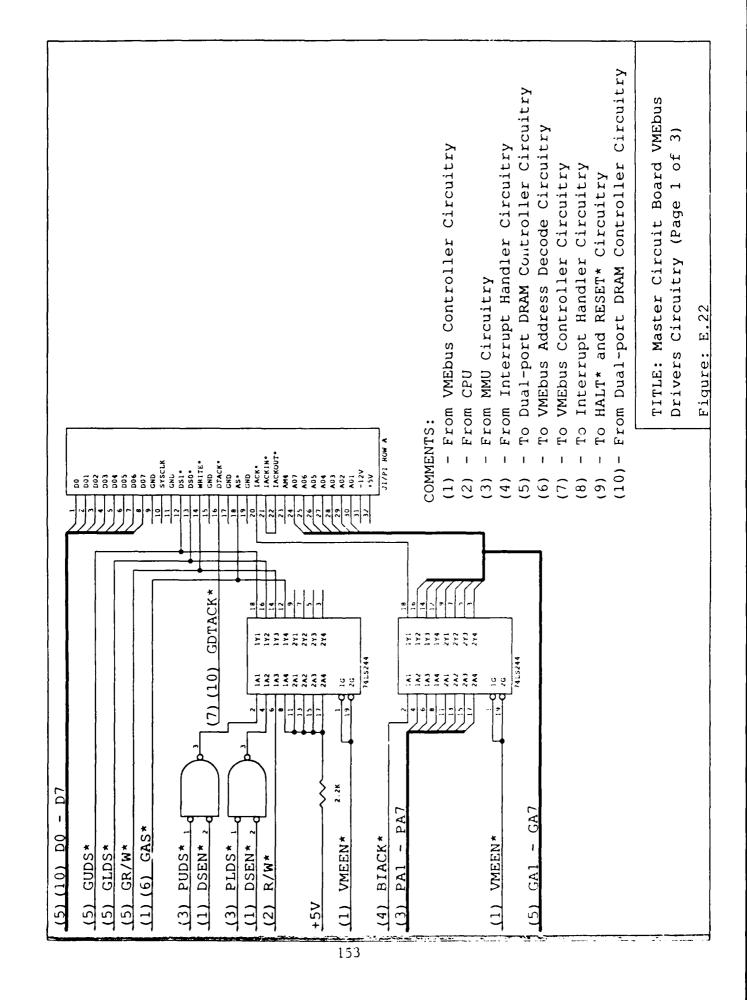


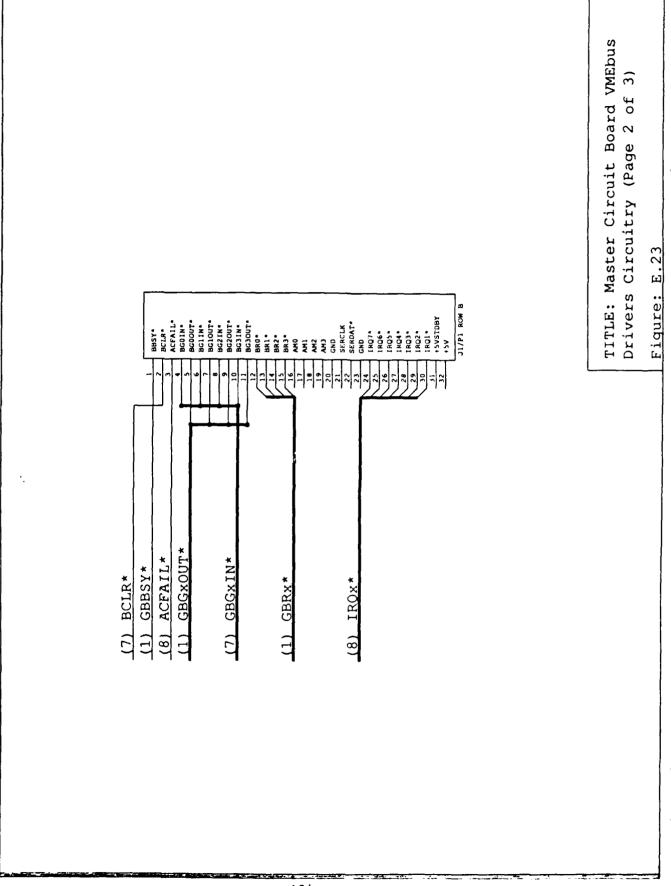

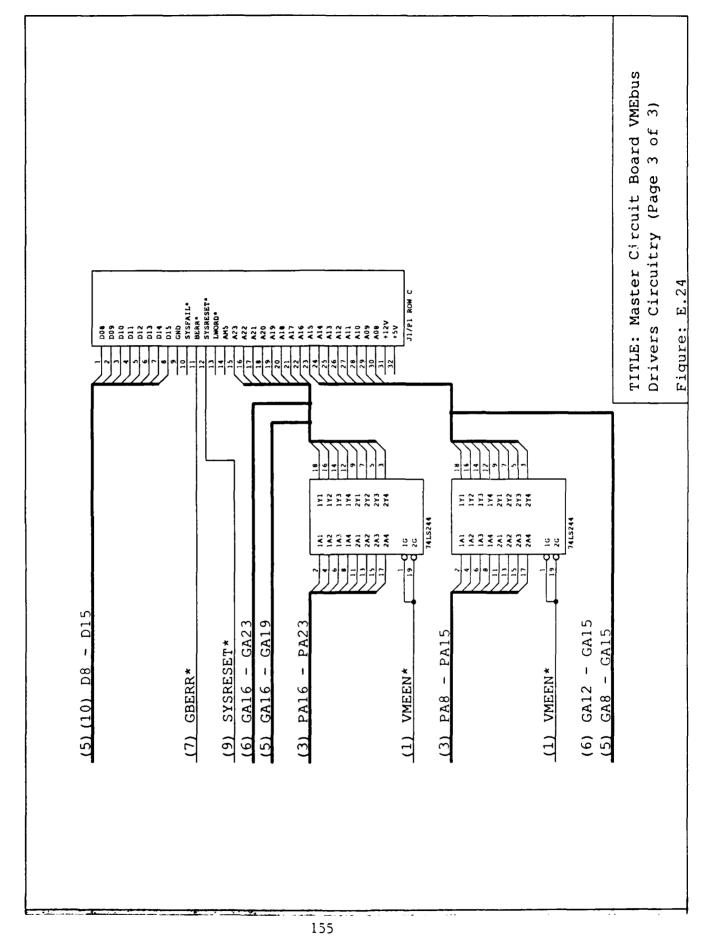

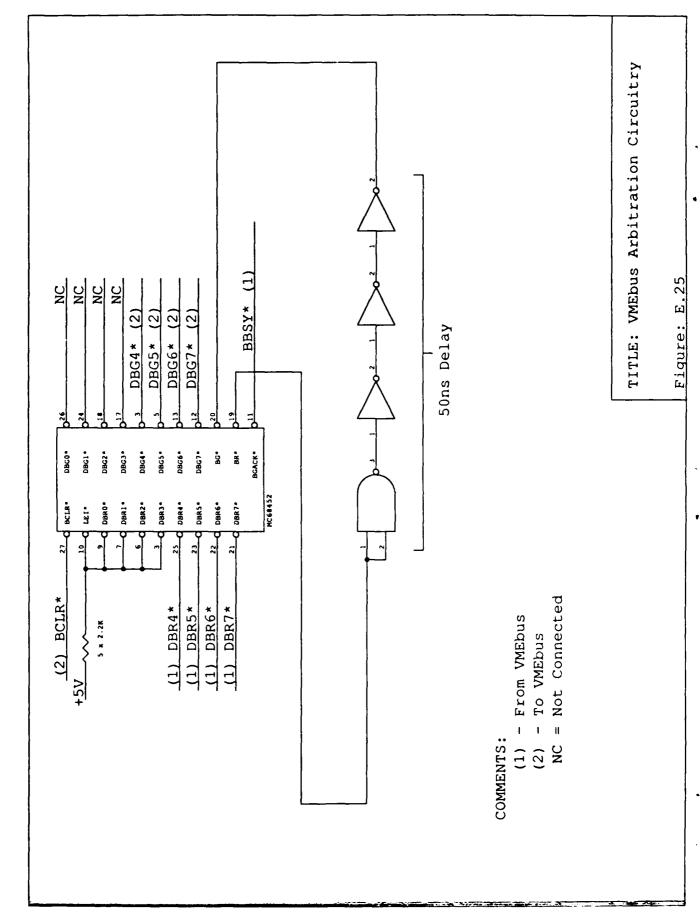

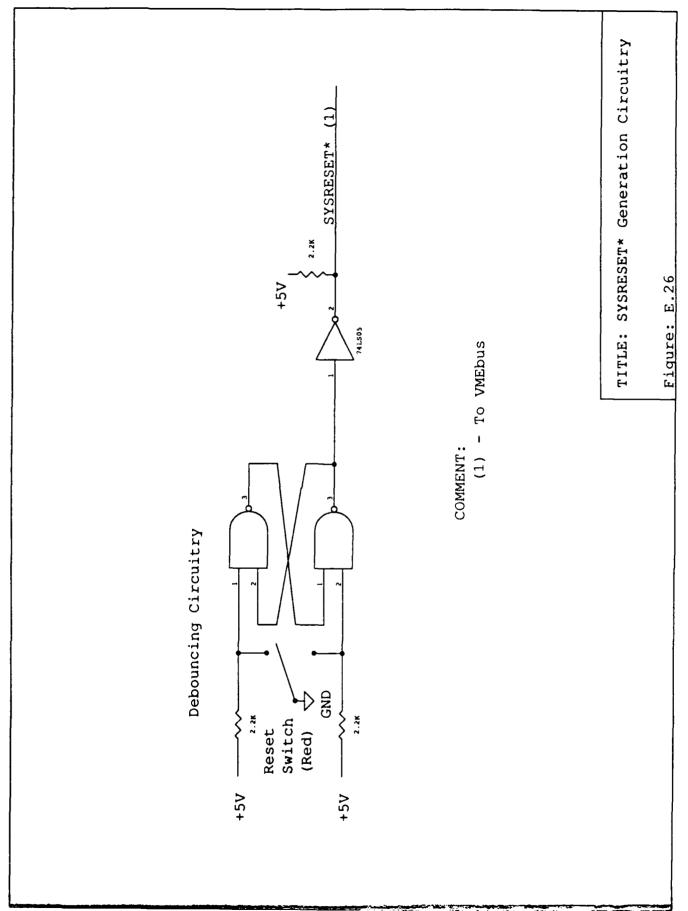

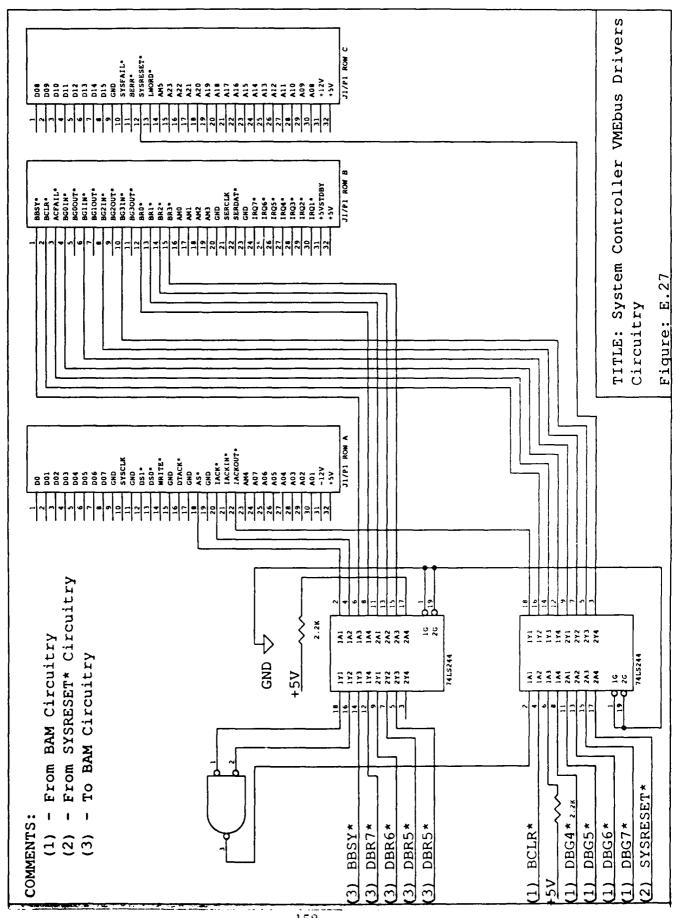

LIST OF REFERENCES

- 1. Stone, H.S., <u>High-Performance Computer Architecture</u>, Addison-Wesley Publishing Company, Reading, Ma, 1987.
- Clements, A., <u>Microprocessor System Design: 68000</u>
 <u>Hardware, Software, and Interfacing</u>, PWS Publishers, Boston, Ma, 1987.
- 3. Borrill, P.L., "Microstandards Special Feature: A Comparison of 32-Bit Buses", <u>IEEE MICRO</u>, Vol. 5, No. 6, pp. 71-79, December 1985.
- 4. The VMEbus Specification, Printex Publishing, Inc., Tempe, Az, 1985.
- 5. Pri-Tal, S. and MacKenna, C., "Understanding VMEbus Architecture", <u>Electronic Products</u>, Vol. 27, No. 19, pp. 103-110, 15 March, 1985.
- 6. Stone, H.S., <u>Microcomputer Interfacing</u>, Addison-Wesley Publishing Company, Reading, Ma, 1983.
- 7. M68000 8-/16-/32-Bit Microprocessors Programmer's Reference Manual, Prentice-Hall, Englecliffs, N.J., 1986.
- 8. MC68452 Bus Arbitration Module Advance Information, Motorola Semiconductors, Phoenix, Az, 1985.
- 9. <u>68000/08/10 Cross Assembler</u>, 2500AD Software, Inc., Aurora, Co. 1987.
- 10. MC68000 Educational Computer Board User's Manual, Motorola, Inc., Tempe, Az, 1982.
- 11. <u>ABEL 2.0</u>, Data I/O Corp., Santa Clara, Ca, 1986.
- 12. Brooks, S.L., "The Design of an Intelligent Multidisk Control Module for VME bus Based Systems", Master's Thesis, Naval Postgraduate School, Monterey, Ca, December 1987.
- 13. Memory Management Unit Advance Information, Motorola Semiconductors, Phoenix, Az, 1983.
- 14. <u>Microprocessor Data Manual</u>, Signetics Corp., Sunnyvale, Ca, 1986.

- 15. MC68681 Dual Asynchronous Receiver/Transmitter (DUART)
 Advance Information, Motorola Semiconductors, Phoenix, Az,
 1985.
- 16. Altera Data Book, Altera Corporation, Santa Clara, Ca, 1987.
- 17. <u>DRAM Dual-Ported Controllers Product Specification</u>, Signetics Corp., Sunnyvale, Ca, 1987.
- 18. MC68010/MC68012 16-/32-Bit Virtual Memory Microprocessors Advance Information, Motorola Semiconductors, Phoenix, Az, 1985.
- 19. MacGregor D. and Mothersole D.S., "Virtual Memory and the MC68010", IEEE Micro, Vol. 3, No. 3, pp. 24-39, June 1983.

BIBLIOGRAPHY

- 1. <u>74LS764 DRAM Controller Product Specification</u>, Signetics Corp., Sunnyvale, Ca, 1986.
- 2. Baliga, S., "Simplifying VMEbus System Design", VMEbus System Magazine, pp. 23-25, Fall/Winter 1986.
- 3. Baliga, S., "Three-Chip Control Set Trims VMEbus Logic For Asynchronous Systems", <u>Electronic Design</u>, Vol. 33, No. 2, pp. 207-214, 24 January 85.
- 4. Brown, G. and Harper, K., MC68008 Minimum Configuration System, Motorola, Inc., 1984.
- 5. Harper, K., <u>A Terminal Interface</u>, <u>Printer Interface</u>, <u>And Background Printing For An MC68000-Based System Using The MC68681 DUART</u>, Motorola, Inc., 1984.
- 6. MacKenna, C., "Bus Controller Chip Lets Processor Board Switch Master And Slave Roles", <u>Electronic Design</u>, Vol. 32, No. 13, pp. 243-254, 28 June 1984.
- 7. MC68000 Educational Computer Board User's Manual, Motorola, Inc., Tempe, Az, 1982.
- 8. MTT8 Course Notes, Motorola Semiconductors, Phoenix, Az, 1986.
- 9. Reddy, A., <u>Dynamic Memory Refresh Considerations</u>, Motorola, Inc., 1983.
- 10. Scales, H., <u>An Evaluation Tool For The MC68451 MMU</u>, Motorola Inc., 1982.
- 11. Scales, H., <u>Virtual Memory Using The MC68000 And The MC68451 MMU</u>, Motorola, Inc. 1982.
- 12. West, T., <u>Dual-Ported RAM For The MC68000 Microprocessor</u>, Motorola, Inc., 1982.

INITIAL DISTRIBUTION LIST

		No. Copies
1.	Library Code 0142 Naval Postgraduate School Monterey, California 93943-5002	2
2.	Chairman, Department of Electrical and Computer Engineering (Code EC) Naval Postgraduate School Monterey, California 93943-5000	1
3.	Dr. Larry Abbott 16047 Arborlea Dr. Friendswood, Texas 77546	1
4.	Professor Mitchell Cotton, Code EC/CO Department of Electrical and Computer Engineering Naval Postgraduate School Monterey, California 93943-5000	1
5.	Professor Frederick Terman, Code EC/TZ Department of Electrical and Computer Engineering Naval Postgraduate School Monterey, California 93943-5000	1
6.	Commanding Officer Attn: Lieutenant David M. Sendek, USN Naval Oceans Systems Center (NOSC), Code 845 271 Catalina Blvd. San Diego, California 92152-5000	1
7.	Roberto Ventura Crispino, LT. CN Apartado Aero 2845 Cartagena, Colombia	1
8.	Defense Technical Information Center Cameron Station Alexandria, Virginia 22304-6145	2